

PROJECT GUIDE

HIMSEN H22CDF
FOR MARINE
2025 1st EDITION



DISCLAIMER

All information provided in this document is for informational purposes only.

It is not a definitive binding document and may be changed without prior notice. In addition, there are no guarantees or guarantees for any particular content. Depending on the requirements of the specific project in the future, related data and documents may be changed, and specifications should be determined after evaluation by specific project. This should be determined according to each individual project, that is, the specifications required for the specific area and specific operating conditions.

List of updates for H22CDF Project Guide

Revision: 1st edition 2025

Issued date: June 2025

No.	Section No.	Section name	Description
1	5.6	HiEMS	HiEMS updated
2	7.1	Internal lubricating oil system	Diagram for Internal lubricating oil system updated
3	9.5	External exhaust gas system	9.5.1 Exhaust gas back pressure updated

Remark

The above information is the major updates from the previous version, and it doesn't include the minor changes.

		Page
1	General information	
1.1	Introduction	7
1.2	Engine nomenclature	8
2	Structural design and installation	
2.1	Principal data	9
2.2	Engine cross section	10
2.3	Engine design outline	11
2.4	Generating-set dimension and weight	14
2.5	Mounting	15
2.6	Overhaul dimension	16
3	Performance data	
3.1	Rated power for Generating-set	17
3.2	Engine capacity data	18
3.3	Engine performance	26
3.4	Exhaust gas emission	34
3.5	Power de-rating diagram	36
3.6	Correction of fuel oil consumption	40
3.7	Correction of fuel gas consumption	42
3.8	Correction of exhaust gas temperature	44
4	Dynamic characteristics and noise	
4.1	External forces and couples	45
4.2	Moment of inertia	47
4.3	Noise measurement	48

		Page
5	Operation and control system	
5.1	Engine operation	49
5.2	Engine control system	61
5.3	Outline of engine automation	68
5.4	Operation data and alarm points	71
5.5	Local instrumentations	75
5.6	HiEMS	76
6	Fuel system	
6.1	Modes of engine operation	79
6.2	Internal fuel oil system	80
6.3	External fuel oil system	83
6.4	Fuel oil specification	92
6.5	Fuel oil viscosity diagram	103
6.6	Fuel oil quality	104
6.7	Internal fuel gas system	107
6.8	External fuel gas system	111
6.9	Fuel gas specification	120
7	Lubricating oil system	
7.1	Internal lubricating oil system	121
7.2	External lubricating oil system	125
7.3	Lubricating oil specification	130
7.4	List of lubricants	133
8	Cooling water system	
8.1	Internal cooling water system	135
8.2	External cooling water system	137
8.3	Cooling water quality and treatment	142

		Page
9	Air and exhaust gas system	
9.1	Internal compressed air system	145
9.2	External compressed air system	147
9.3	Internal combustion air system	149
9.4	External combustion air system	151
9.5	External exhaust gas system	153
9.6	External exhaust gas pipe connection	156
9.7	Approach SCR system installation	157
9.8	Exhaust gas silencer with spark arrestor	159
9.9	Generator information	161
10	Engine maintenance	
10.1	Maintenance schedule	163
10.2	Recommended wearing parts	171
10.3	List of standard spare parts	176
10.4	Heavy parts for maintenance	179
10.5	List of standard tools	181
11	Appendix 1 (Piping symbols)	185
12	Appendix 2 (Instrumentation code)	189
13	Note	193

This page is intentionally blanked

1 General information


1.1 Introduction

This project guide provides necessary information and recommendations for the application of HYUNDAI HiMSEN H22CDF (Clean Dual Fuel) generating-set (gen-set). 'HiMSEN'® is the licensed brand name of HYUNDAI's own design engine and the abbreviation of '**Hi**-Touch **Marine** & **S**tationary **EN**gine'. The HiMSEN H22CDF generating sets are delivered as complete packages, an engine and a generator are mounted on a common base frame together with related auxiliary equipment.

Please note that all data and information prepared in this project guide are for guidance only and subject to revision without notice. Therefore, please contact Hyundai Heavy Industries Co., Ltd. before actual applications of the data. Hyundai Heavy Industries Co., Ltd. (HHI) will always provide the data for the installation of specific project.

Each sheet is identified by the engine type and own 'Sheet Number'. Therefore, please use engine type 'H22CDF', and 'Sheet No.' for easier communications.

Engine model designation

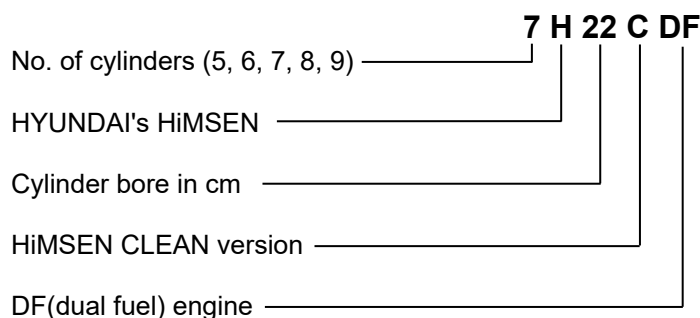

1.2 Engine nomenclature

1.2.1 Cylinder numbering

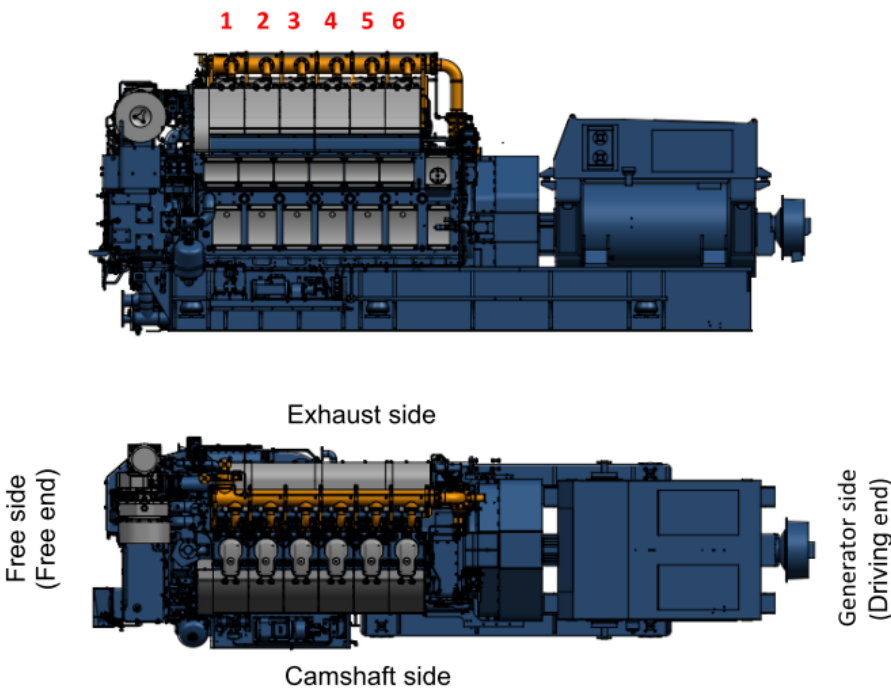


Figure 1.1 Cylinder numbering

1.2.2 Direction of engine rotation

Counter-clockwise viewed from free end

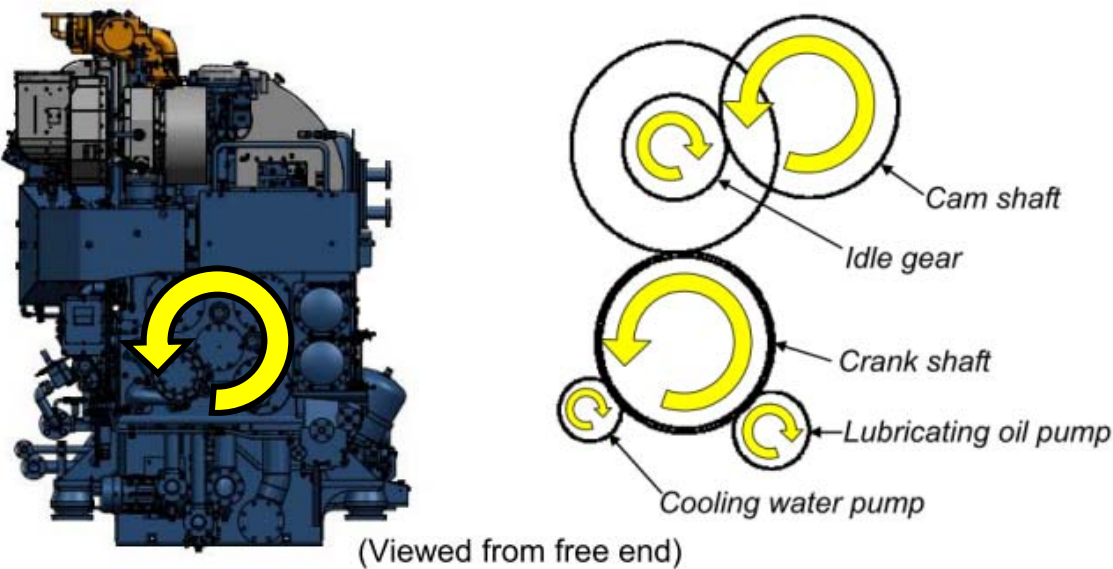


Figure 1.2 Direction of engine rotation

2 Structural design and installation

2.1 Principal data

Table 2.1 Principal data

Type of engine	. 4-stroke, vertical, direct injection, single acting and trunk piston type with a turbocharger and an inter-cooler.	
Cylinder configuration		In-line
Number of cylinder		5 - 6 - 7 - 8 - 9
Rated speed	rpm	900 1000
Power per cylinder	kW	215 220
Cylinder bore	mm	220
Piston stroke	mm	330
Swept Volume per cylinder	dm ³	12.5
Mean piston speed	m/s	9.9 11.0
Mean effective pressure	bar	22.9 21.0
Compression ratio		13.0 : 1
Direction of engine rotation		Clockwise viewed from generator side (Non-reversible)
Cylinder firing order	5H22CDF	1 - 2 - 4 - 5 - 3
	6H22CDF	1 - 4 - 2 - 6 - 3 - 5
	7H22CDF	1 - 2 - 4 - 6 - 7 - 5 - 3
	8H22CDF	1 - 3 - 5 - 7 - 8 - 6 - 4 - 2
	9H22CDF	1 - 3 - 5 - 7 - 9 - 8 - 6 - 4 - 2

2.2 Engine cross section

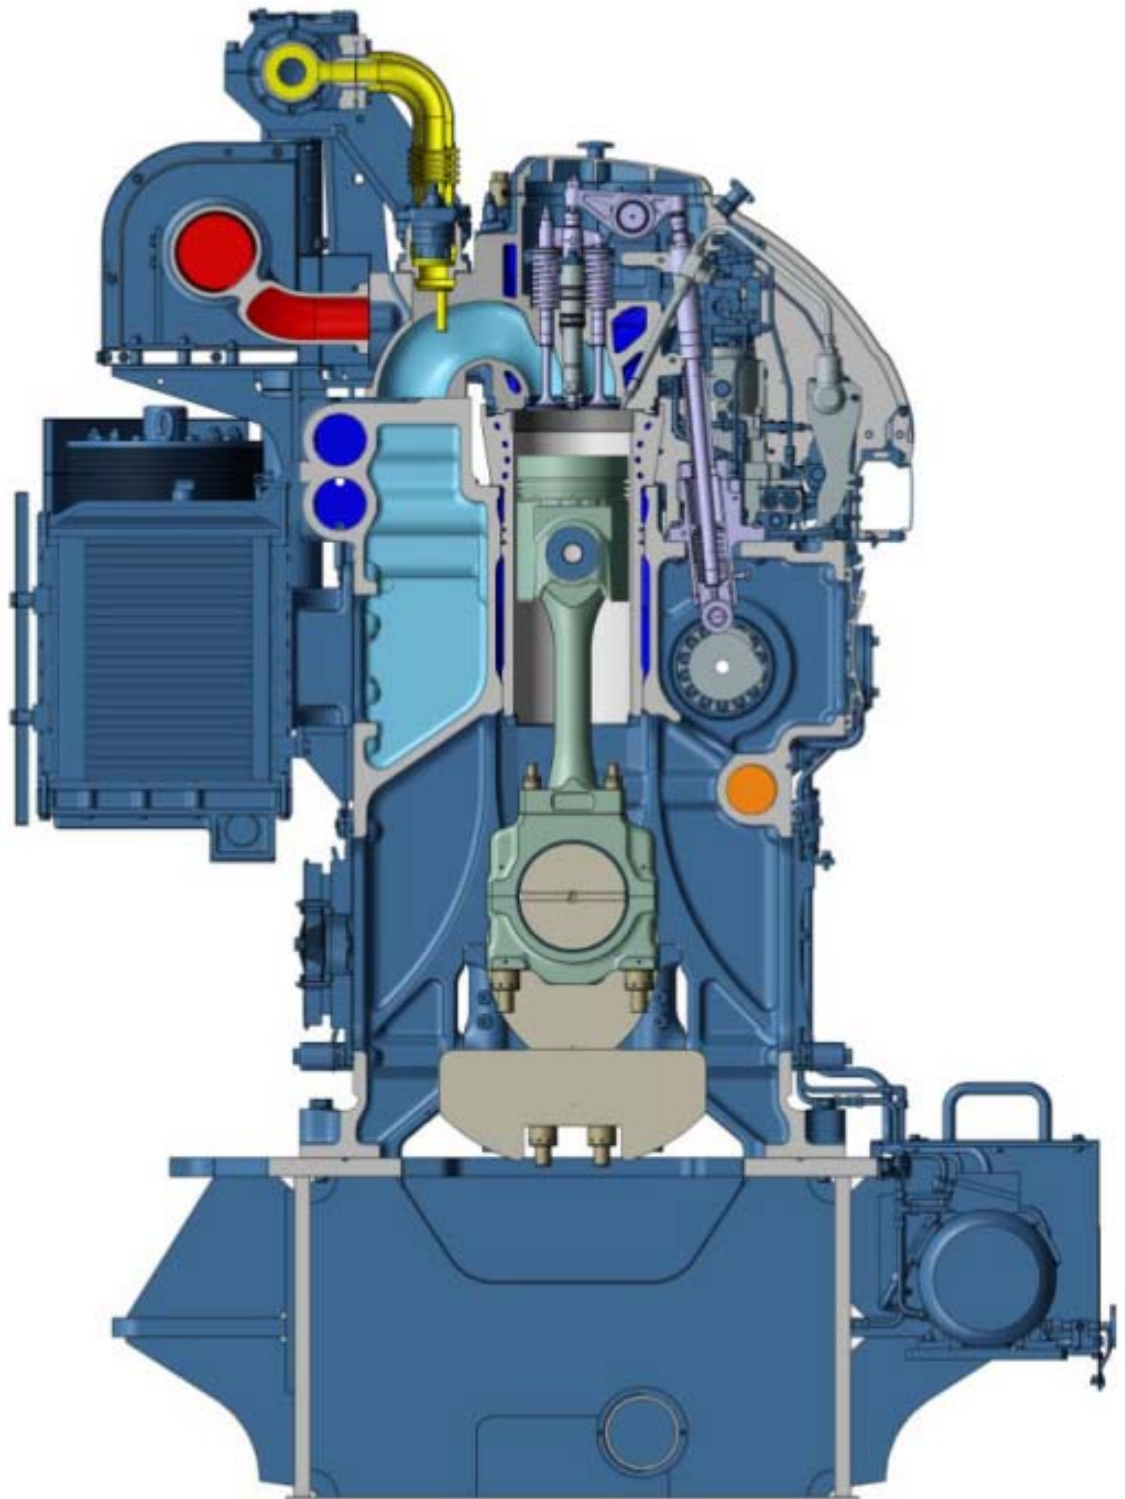


Figure 2.1 Engine cross section

2.3 Engine design outline

2.3.1 General

Hyundai clean dual fuel engine 'HiMSEN H22CDF' family have simple and smart design suitable for marine application with high reliability and performance. The key features are summarized as below :

1. Dual fuel engine can be run with liquid fuel or gaseous fuel alternatively.
2. Eco-friendly and economical engine with the lowest fuel consumption and NO_x emission which are based on the following specific designs :
 - ✓ The best air fuel ratio control
 - ✓ Optimized combustion parameters, i.e. high fuel injection pressure, piston bowl, turbocharger and intake air parts, etc.
3. Reliable and practical engine with simple, smart and robust structure.
 - ✓ A number of engine components are minimized with pipe-free design.
 - ✓ Most of the components are directly accessible for easy maintenance.
 - ✓ Maintenance concept for each parts is to be provided.
 - ✓ Feed system is fully modularized with direct accessibility.
 - ✓ Highly integrated control system.
 - ✓ Raven components are applied.
 - ✓ Free from gas leakage.
 - ✓ Up-to-date technology is adopted.

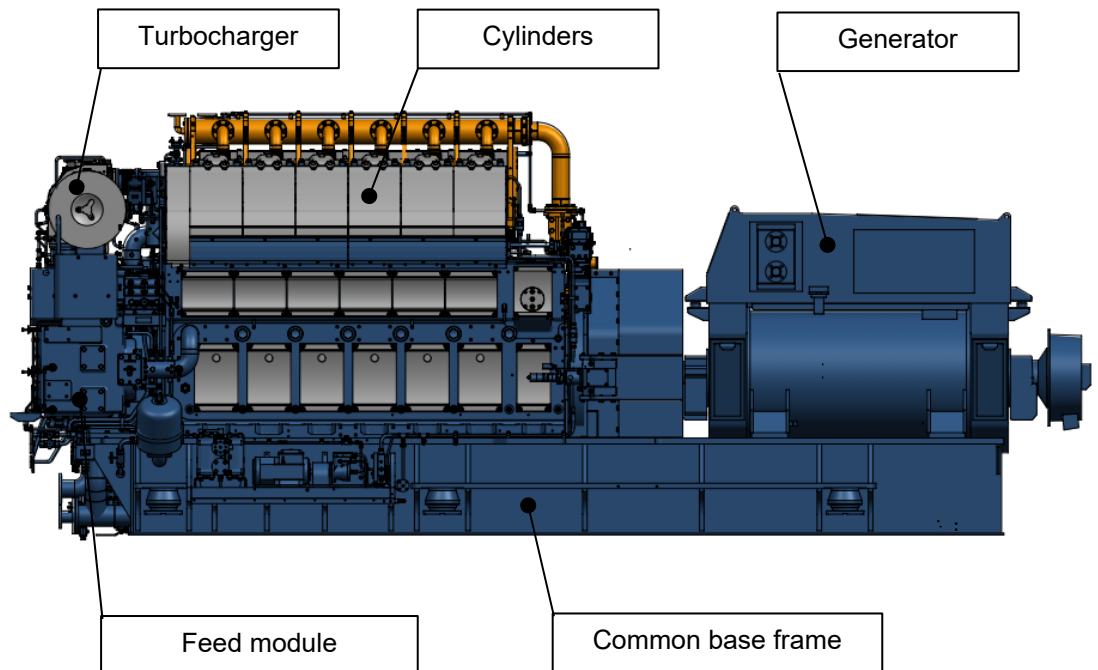


Figure 2.2 Engine design outline

2.3.2 Design of main components

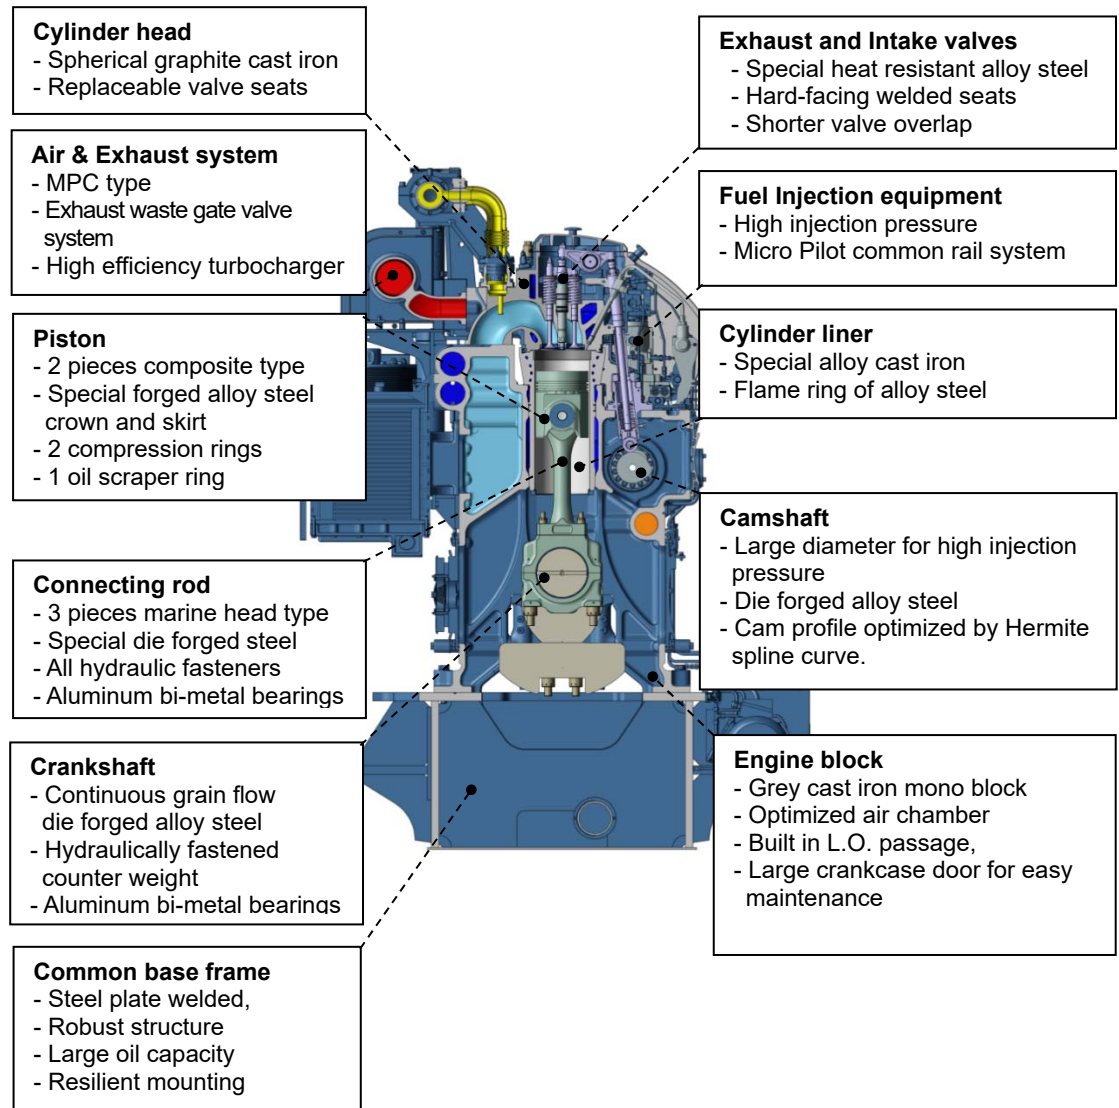


Figure 2.3 Cross section drawing

2.3.3 Description of feed module

HiMSEN has a unique design of feed module for better reliability and easy maintenance such as cooling water and lubricating oil system are fully modularized into the feed module with the following key features.

- ✓ All the components of the system, for example, pumps, valves, filters and coolers are mounted on feed block without any pipe connection, which provides direct accessibility with fewer parts for easy maintenance as shown below Figure 2.4.
- ✓ Feed block has cast-in flow channels for cooling water and lubricating oil circuits, which are arranged to secure water-tight to oil space and simplified in combination with pumps and valve housings for better flow characteristics to avoid any risk of corrosion due to cavitation.

Outline of feed module

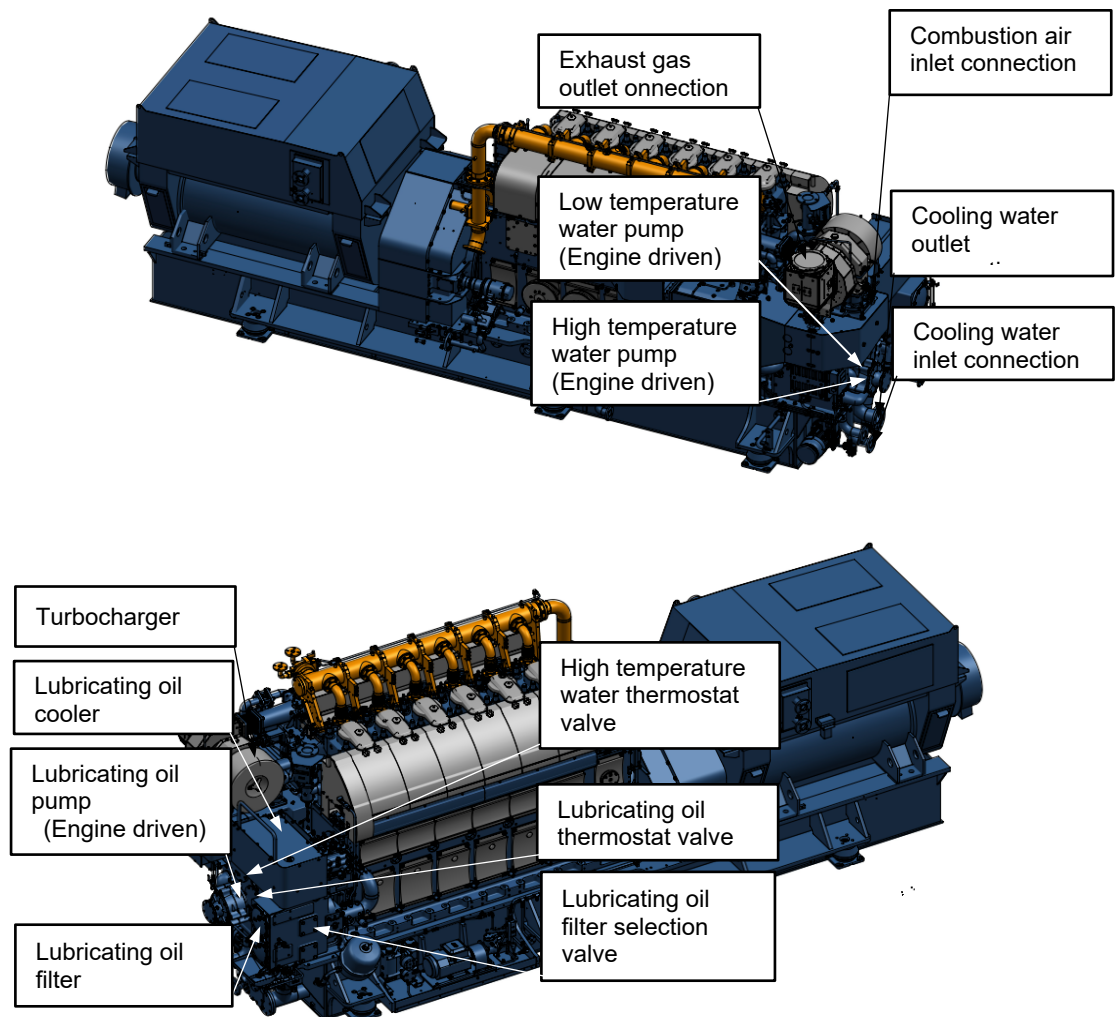


Figure 2.4 Outline of feed module

2.4 Generating-set dimension and weight

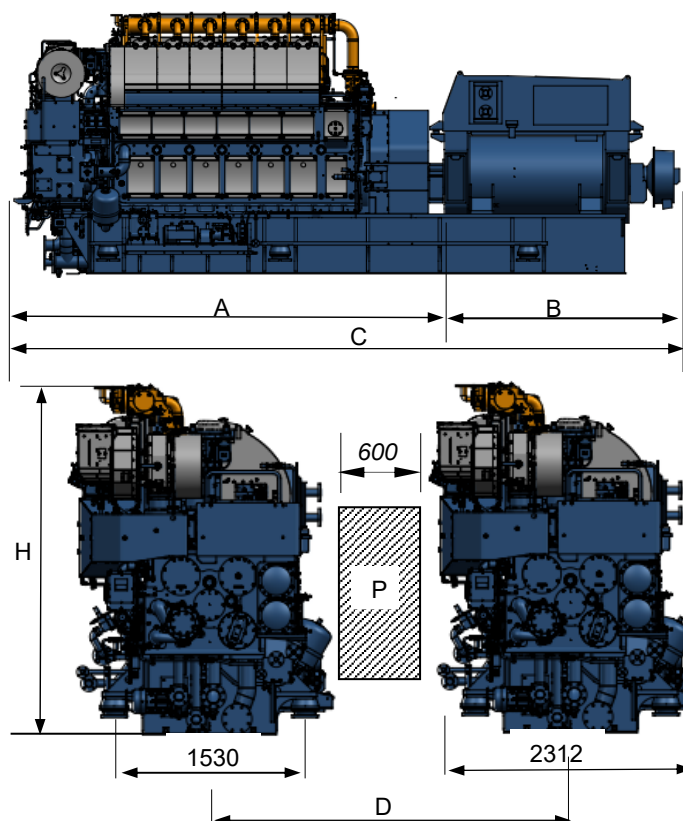


Table 2.2 Generating-set dimension and weight

Engine type	Dimensions (mm)					Dry weight (ton) ²⁾	
	A	B ¹⁾	C ¹⁾	D	H	Engine ³⁾	Generating-set ⁴⁾
5H22CDF	3735	2249	5984	2990	3056	16.5	25.4
6H22CDF	4085	2249	6334	2990	3056	18.2	27.6
7H22CDF	4435	2305	6740	2990	3056	19.9	29.3
8H22CDF	4785	2305	7090	2990	3056	21.6	31.2
9H22CDF	5135	2450	7585	2990	3056	23.3	34.6

1. All dimensions and weight are approximate value and subject to change without prior notice.

1) : Depending on alternator.

2) : Weight including a standard alternator (Maker : HHI-EES)

3) : Without common base frame

4) : With common base frame and generator

D : Min. distance between engines

P : Free passage between the engines, width 600 mm and height 2000 mm.

2.5 Mounting

2.5.1 General

The HiMSEN generating-set consists of dual fuel engine and alternator mounted on common base frame. The common base frame is installed on resilient mounts on the foundation in the ship.

The resilient mounting for the generating-set is made with a number of rubber elements in order to isolate from vibrations between generating-set and hull structure. These rubber elements are bolted to brackets of the common base frame as shown below Figure 2.5.

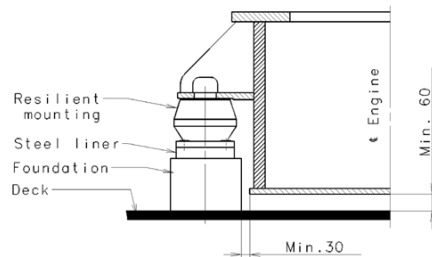


Figure 2.5 Resilient mounting

2.5.2 Design of resilient mount

The quantities and position of the resilient mount are determined by the dynamic characteristics of vessel. Therefore, the final specification of the resilient mount shall be decided based on the information from vessel contractor.

2.5.3 Connections to the generating-set

Generating-set mounted on resilient mount is usually influenced by a relative motions from the hull structure. Due to the reason, any rigid fixing between generating-set and hull structure causes damages to generating-set or hull. Therefore, all connections, for example, pipes, gratings, ladders, electric wires, etc., should be flexible enough to absorb the relative movements.

2.5.4 Recommendations for seating design and adjustment

The foundation for common base frame mounting should be rigid enough to support the load from generating-set. Steel shim plates with thickness of minimum 25 mm between rubber elements and foundation are required to adjust leveling of each mount (Method 1). Additional shim plate (Minimum thickness 10 mm) can be used for adjustments (Method 2) as shown below Figure 2.6. It is also recommended to check the crankshaft deflection before starting up the engine to secure the correct adjustments of the shim plate and leveling of the generating-set.



Figure 2.6 Recommendations for seating design

2.6 Overhaul dimension

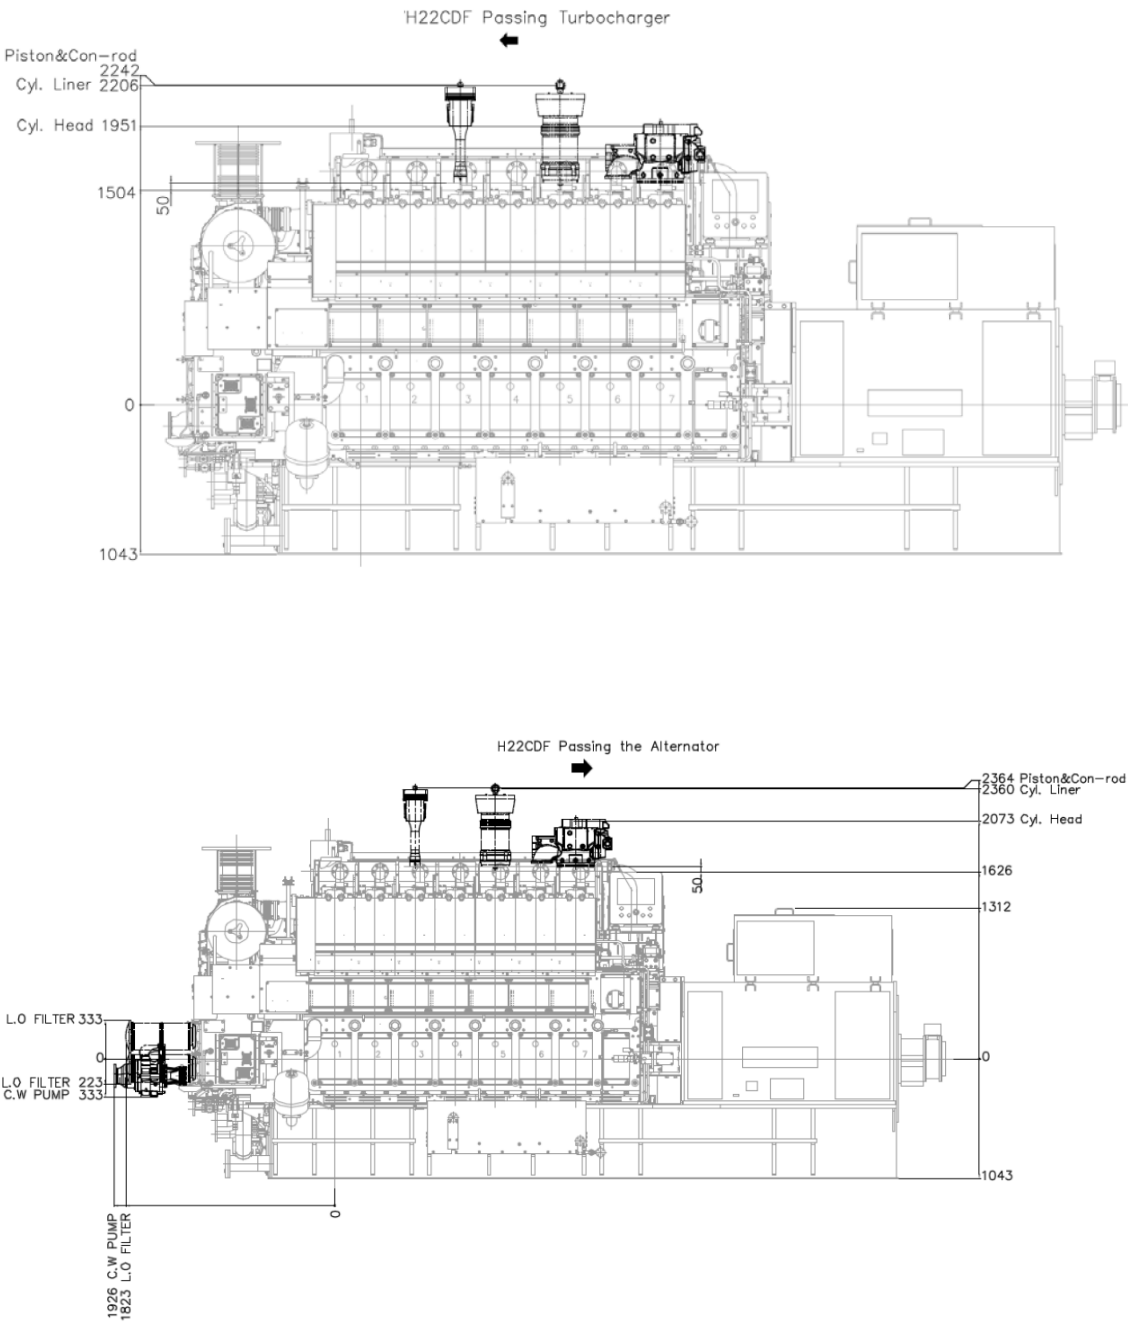


Figure 2.7 Overhaul dimension

3 Performance data

3.1 Rated power for generating-set

Table 3.1 Rated power for generating-set

Engine type	Rated output at			
	900 rpm / 60 Hz		1000 rpm / 50 Hz	
	Engine (kWm)	Generator (kWe)	Engine (kWm)	Generator (kWe)
5H22CDF	1075	1011	1100	1034
6H22CDF	1290	1220	1320	1248
7H22CDF	1505	1423	1540	1463
8H22CDF	1720	1634	1760	1672
9H22CDF	1935	1839	1980	1881

1. No overload operation is permissible except 10 % overload of diesel mode during official factory test only.
2. The alternator outputs are calculated for an efficiency of 94 ~ 95 % and a power factor of 0.8 lagging.
3. Power adjusting of dual fuel engines must be consulted to engine builder.

Reference condition

General definition of gas engine rating is specified in accordance with ISO 3046-1.

ISO condition

Turbocharger air inlet pressure : 1000 mbar

Intake air temperature : 298 K (25 °C)

L.T cooling water temperature : 298 K (25 °C)

Tropical condition

Turbocharger air inlet pressure : 1000 mbar

Intake air temperature : 318 K (45 °C)

L.T cooling water temperature : 309 K (36 °C)

3.2 Engine capacity data

Table 3.2 Engine capacity data (Diesel mode - rated power : 215 kW / cylinder at 900 rpm)

Engine MCR	Cyl.	5	6	7	8	9
	kW	1075	1290	1505	1720	1935
1. Cooling capacities						
Charge air						
Heat dissipation ¹⁾	kW	490	588	686	785	883
Low temperature cooling water flow	m ³ /h	34	47	47	61	61
Low cooling water temperature, cooler in / out	°C	36 / 48	36 / 47	36 / 48	36 / 47	36 / 48
Lubricating oil						
Heat dissipation ^{1) 3)}	kW	165	197	230	263	296
Low temperature cooling water flow	m ³ /h	34	47	47	61	61
Low cooling water temperature, cooler in / out	°C	48 / 52	47 / 50	48 / 52	47 / 50	48 / 52
Cylinder jacket						
Heat dissipation ¹⁾	kW	247	296	345	395	444
High temperature cooling water flow	m ³ /h	34	47	47	61	61
High cooling water temperature, engine in / out	°C	76 / 82	77 / 82	76 / 82	77 / 82	76 / 82
2. Gas data ²⁾						
Combustion air consumption	kg/h	7160	8590	10030	11460	12890
Exhaust gas flow	kg/h	7380	8860	10330	11810	13290
Exhaust gas temperature	°C	293	293	293	293	293
Allowable exhaust gas back pressure max.	mbar	30	30	30	30	30

Engine MCR	Cyl.	5	6	7	8	9
	kW	1075	1290	1505	1720	1935

3. Heat radiation

Engine radiation ¹⁾	kW	55	66	77	88	99
--------------------------------	----	----	----	----	----	----

Alternator radiation kW (See separate data from alternator maker)

4. Starting air

Air consumption per start ⁷⁾	Nm ³	3.40	3.55	3.75	4.10	4.20
Starting air source, pressure (20 °C)	bar	30 / 15	30 / 15	30 / 15	30 / 15	30 / 15

5. Pump capacities

Engine driven pumps ⁴⁾

Lubricating oil pump (6 bar)	m ³ /h	44	54	54	70	70
High temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	34	47	47	61	61
Low temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	34	47	47	61	61

External pumps ⁵⁾

Marine diesel oil pump (head) - (8 bar)	m ³ /h	1.11	1.33	1.55	1.77	1.99
Heavy fuel oil supply pump (head) - (4 bar)	m ³ /h	0.41	0.50	0.58	0.66	0.75
Heavy fuel oil booster pump (8 bar at engine inlet, F1) ⁶⁾	m ³ /h	1.11	1.33	1.55	1.77	1.99
Pilot supply pump (6 bar at engine inlet, F9)	m ³ /h	(See 6.3 external fuel oil system)				

Remark

- 1) Under tropical condition (Turbocharger air inlet pressure 1 bar, intake air temperature 45 °C, LT-cooling water temperature 36 °C) with heat dissipation tolerance for coolers +10% / for heat recovery -15%.
- 2) Under ISO condition (ISO 3046-1:2002, Turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, LT-cooling water temperature 25 °C) with flow tolerance ±5% and exhaust gas temperature tolerance ±25 °C, these data are indicative values. For each project, please contact to HHI-EMD.
- 3) Additional heat for lube oil purification should be included. (30 kJ/kWh).
- 4) Flow capacity to be within a tolerance of 0 % to + 10 %.
- 5) Flushing oil quantity of automatic filter should be included.
- 6) Heavy fuel oil booster pump head to be designed by external system designer considering pressure loss of external system.
- 7) This value includes slow turn consumption.

Table 3.3 Engine capacity data (Gas mode - rated power : 215 kW / cylinder at 900 rpm)

Engine MCR	Cyl.	5	6	7	8	9
	kW	1075	1290	1505	1720	1935
1. Cooling capacities						
Charge air						
Heat dissipation ¹⁾	kW	410	492	574	656	738
Low temperature cooling water flow	m ³ /h	34	47	47	61	61
Low cooling water temperature, cooler in / out	°C	36 / 46	36 / 45	36 / 46	36 / 45	36 / 46
Lubricating oil						
Heat dissipation ^{1) 3)}	kW	158	189	221	253	284
Low temperature cooling water flow	m ³ /h	34	47	47	61	61
Low cooling water temperature, cooler in / out	°C	46 / 50	45 / 48	46 / 50	45 / 49	46 / 50
Cylinder jacket						
Heat dissipation ¹⁾	kW	235	283	330	377	424
High temperature cooling water flow	m ³ /h	34	47	47	61	61
High cooling water temperature, engine in / out	°C	76 / 82	77 / 82	76 / 82	77 / 82	76 / 82
2. Gas data ²⁾						
Combustion air consumption	kg/h	6060	7270	8480	9690	10900
Exhaust gas flow	kg/h	6250	7500	8750	10000	11250
Exhaust gas temperature	°C	353	353	353	353	353
Allowable exhaust gas back pressure max. ⁶⁾	mbar	(24)	(24)	(24)	(24)	(24)

Engine MCR	Cyl.	5	6	7	8	9
	kW	1075	1290	1505	1720	1935

3. Heat radiation

Engine radiation ¹⁾	kW	54	64	75	86	96
--------------------------------	----	----	----	----	----	----

Alternator radiation kW (See separate data from alternator maker)

4. Pump capacities

Engine driven pumps ⁴⁾

Lubricating oil pump (6 bar)	m ³ /h	44	54	54	70	70
High temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	34	47	47	61	61
Low temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	34	47	47	61	61

External pumps ⁵⁾

Pilot supply pump (6 bar at engine inlet, F9)	m ³ /h	(See 6.3 external fuel oil system)
---	-------------------	------------------------------------

Remark

- 1) Under tropical condition (Turbocharger air inlet pressure 1 bar, intake air temperature 45 °C, LT-cooling water temperature 36 °C) with heat dissipation tolerance for coolers +10% / for heat recovery -15%.
- 2) Under ISO condition (ISO 3046-1:2002, Turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, LT-cooling water temperature 25 °C) with flow tolerance ±5% and exhaust gas temperature tolerance ±25 °C, these data are indicative values. For each project, please contact to HHI-EMD.
- 3) Additional heat for lube oil purification should be included. (30 kJ/kWh).
- 4) Flow capacity to be within a tolerance of 0 % to + 10 %.
- 5) Flushing oil quantity of automatic filter should be included.
- 6) The maximum exhaust gas back pressure of gas mode is defined depending on allowable exhaust gas back pressure of diesel mode.

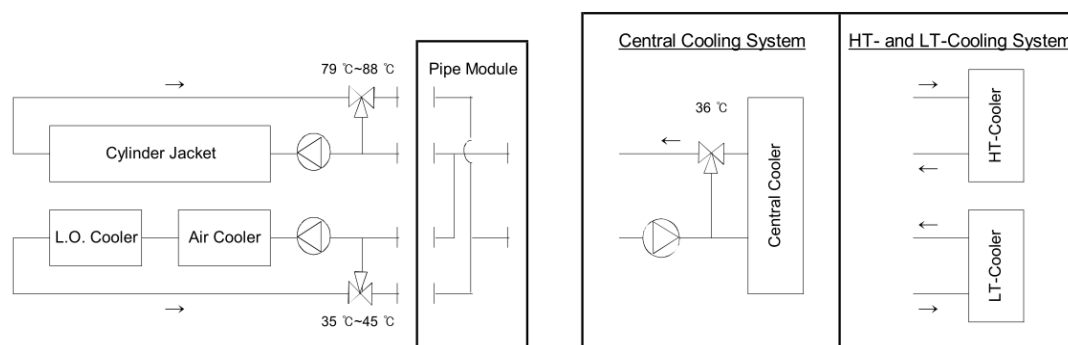


Figure 3.1 Cooling system arrangement

Table 3.4 Engine capacity data (Diesel mode - rated power : 220 kW / cylinder at 1000 rpm)

Engine MCR	Cyl.	5	6	7	8	9
kW		1100	1320	1540	1760	1980
1. Cooling capacities						
Charge air						
Heat dissipation ¹⁾	kW	502	603	703	804	904
Low temperature cooling water flow	m ³ /h	38	52	52	68	68
Low cooling water temperature, cooler in / out	°C	36 / 47	36 / 46	36 / 47	36 / 46	36 / 47
Lubricating oil						
Heat dissipation ^{1) 3)}	kW	170	204	238	272	306
Low temperature cooling water flow	m ³ /h	38	52	52	68	68
Low cooling water temperature, cooler in / out	°C	47 / 51	46 / 49	47 / 51	46 / 49	47 / 51
Cylinder jacket						
Heat dissipation ¹⁾	kW	255	306	357	408	459
High temperature cooling water flow	m ³ /h	38	52	52	68	68
High cooling water temperature, engine in / out	°C	76 / 82	77 / 82	76 / 82	77 / 82	76 / 82
2. Gas data ²⁾						
Combustion air consumption	kg/h	7370	8840	10320	11790	13260
Exhaust gas flow	kg/h	7600	9120	10630	12150	13670
Exhaust gas temperature	°C	302	302	302	302	302
Allowable exhaust gas back pressure max.	mbar	30	30	30	30	30

Engine MCR	Cyl.	5	6	7	8	9
	kW	1100	1320	1540	1760	1980

3. Heat radiation

Engine radiation ¹⁾	kW	57	68	79	91	102
--------------------------------	----	----	----	----	----	-----

Alternator radiation kW (See separate data from alternator maker)

4. Starting air

Air consumption per start ⁷⁾	Nm ³	3.40	3.55	3.75	4.10	4.20
Starting air source, pressure (20 °C)	bar	30 / 15	30 / 15	30 / 15	30 / 15	30 / 15

5. Pump capacities

Engine driven pumps ⁴⁾

Lubricating oil pump (6 bar)	m ³ /h	49	60	60	78	78
High temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	38	52	52	68	68
Low temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	38	52	52	68	68

External pumps ⁵⁾

Marine diesel oil pump (head) - (8 bar)	m ³ /h	1.14	1.37	1.60	1.83	2.06
Heavy fuel oil supply pump (head) - (4 bar)	m ³ /h	0.43	0.51	0.60	0.69	0.77
Heavy fuel oil booster pump (8 bar at engine inlet, F1) ⁶⁾	m ³ /h	1.14	1.37	1.60	1.83	2.06
Pilot supply pump (6 bar at engine inlet, F9)	m ³ /h	(See 6.3 external fuel oil system)				

Remark

- 1) Under tropical condition (Turbocharger air inlet pressure 1 bar, intake air temperature 45 °C, LT-cooling water temperature 36 °C) with heat dissipation tolerance for coolers +10% / for heat recovery -15%.
- 2) Under ISO condition (ISO 3046-1:2002, Turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, LT-cooling water temperature 25 °C) with flow tolerance ±5% and exhaust gas temperature tolerance ±25 °C, these data are indicative values. For each project, please contact to HHI-EMD.
- 3) Additional heat for lube oil purification should be included. (30 kJ/kWh).
- 4) Flow capacity to be within a tolerance of 0 % to + 10 %.
- 5) Flushing oil quantity of automatic filter should be included.
- 6) Heavy fuel oil booster pump head to be designed by external system designer considering pressure loss of external System.
- 7) This value includes slow turn consumption.

Table 3.5 Engine capacity data (Gas mode - rated power : 220 kW / cylinder at 1000 rpm)

Engine MCR	Cyl.	5	6	7	8	9
kW		1100	1320	1540	1760	1980
1. Cooling capacities						
Charge air						
Heat dissipation ¹⁾	kW	454	545	635	726	817
Low temperature cooling water flow	m ³ /h	38	52	52	68	68
Low cooling water temperature, cooler in / out	°C	36 / 46	36 / 45	36 / 46	36 / 45	36 / 46
Lubricating oil						
Heat dissipation ^{1) 3)}	kW	163	195	228	260	293
Low temperature cooling water flow	m ³ /h	38	52	52	68	68
Low cooling water temperature, cooler in / out	°C	46 / 50	45 / 48	46 / 50	45 / 48	46 / 50
Cylinder jacket						
Heat dissipation ¹⁾	kW	242	291	339	388	436
High temperature cooling water flow	m ³ /h	38	52	52	68	68
High cooling water temperature, engine in / out	°C	77 / 82	77 / 82	77 / 82	77 / 82	77 / 82
2. Gas data ²⁾						
Combustion air consumption	kg/h	6390	7670	8940	10220	11500
Exhaust gas flow	kg/h	6590	7910	9230	10540	11860
Exhaust gas temperature	°C	365	365	365	365	365
Allowable exhaust gas back pressure max. ⁶⁾	mbar	(24)	(24)	(24)	(24)	(24)

Engine MCR	Cyl.	5	6	7	8	9
	kW	1100	1320	1540	1760	1980

3. Heat radiation

Engine radiation ¹⁾	kW	55	66	77	88	99
--------------------------------	----	----	----	----	----	----

Alternator radiation kW (See separate data from alternator maker)

4. Pump capacities

Engine driven pumps ⁴⁾

Lubricating oil pump (6 bar)	m ³ /h	52	64	64	82	82
High temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	38	52	52	68	68
Low temperature cooling water pump (1 ~ 2.5 bar)	m ³ /h	38	52	52	68	68

External pumps ⁵⁾

Pilot supply pump (6 bar at engine inlet, F9)	m ³ /h	(See 6.3 external fuel oil system)
---	-------------------	------------------------------------

Remark

- 1) Under tropical condition (Turbocharger air inlet pressure 1 bar, intake air temperature 45 °C, LT-cooling water temperature 36 °C) with heat dissipation tolerance for coolers +10% / for heat recovery -15%.
- 2) Under ISO condition (ISO 3046-1:2002, Turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, LT-cooling water temperature 25 °C) with flow tolerance ±5% and exhaust gas temperature tolerance ±25 °C, these data are indicative values. For each project, please contact to HHI-EMD.
- 3) Additional heat for lube oil purification should be included. (30 kJ/kWh).
- 4) Flow capacity to be within a tolerance of 0 % to + 10 %.
- 5) Flushing oil quantity of automatic filter should be included.
- 6) The maximum exhaust gas back pressure of gas mode is defined depending on allowable exhaust gas back pressure of diesel mode.

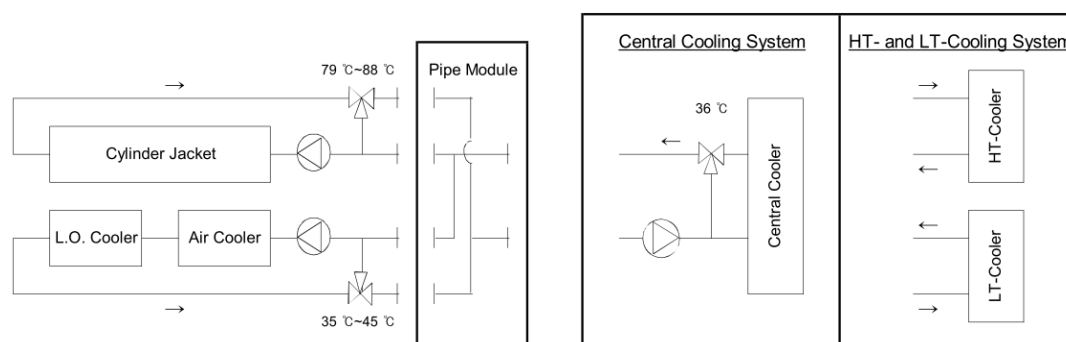


Figure 3.2 Cooling system arrangement

3.3 Engine performance

Table 3.6 Engine performance data (Diesel mode - rated power : 215 kW / cylinder at 900 rpm)

Performance data		Engine load (%)				
		110	100	85	75	50
1. Cylinder data						
Cylinder output	kW	237	215	183	161	108
Mean effective pressure	bar	25.1	22.9	19.4	17.1	11.4
2. Combustion air data ^{1), 4)}						
Mass flow	kg/kWh	6.4	6.7	6.8	7.2	7.5
Air temperature after cooler	°C	45	45	45	45	45
3. Exhaust gas data ^{1), 4)}						
Mass flow	kg/kWh	6.6	6.9	7.1	7.4	7.8
Gas temperature after turbine	°C	307	293	291	288	352
4. Heat balance data ²⁾						
Charge air	kJ/kWh	1540	1500	1420	1330	975
Lubricating oil	kJ/kWh	510	530	585	635	845
Jacket cooling water	kJ/kWh	800	790	775	770	840
Exhaust gas	kJ/kWh	1960	1935	1995	2055	2375
Radiation	kJ/kWh	180	180	180	190	215
5. Specific fuel oil consumption ^{3), 4)}						
Specific fuel oil consumption	g/kWh	196.0	195.2	195.9	196.5	207.8

Remark

Reference condition is based on ISO 3046-1 (turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, L.T cooling water temperature 25 °C). The above values are based on IMO Tier II emission level on diesel mode without selective catalyst reduction operation.

- 1) Mass flow tolerance $\pm 5\%$, temperature tolerance $\pm 25^{\circ}\text{C}$ ($50\% < \text{load} \leq 110\%$).

Mass flow tolerance $\pm 10\%$, temperature tolerance $\pm 35^{\circ}\text{C}$ (Load $\leq 50\%$).

- 2) Heat dissipation tolerance $+ 10\%$ for cooler, $- 15\%$ for heat recovery.

Additional heat for lube oil purification should be included. (30 kJ/kWh).

- 3) Specific fuel oil consumption tolerance $+ 5\%$ at 100 % load.

Engine driven pumps attached : lubricating oil pump, high temperature cooling water pump, low temperature cooling water pump.

Specific fuel oil consumption includes the pilot oil consumption and excludes clean leakage fuel oil.

Main fuel oil based on marine diesel oil, lower calorific value 42700 kJ/kg.

Specific fuel oil consumption is warranted at 100 % engine load without selective catalyst reduction operation.

- 4) When an engine is operated with exhaust gas after-treatment system (for example: SCR), the values may change to ensure the proper operation of after-treatment system.

Table 3.7 Engine performance data (Gas mode - rated power : 215 kW / cylinder at 900 rpm)

Performance data		Engine load (%)				
		110	100	85	75	50
1. Cylinder data						
Cylinder output	kW	-	215	183	161	108
Mean effective pressure	bar	-	22.9	19.4	17.1	11.4
2. Combustion air data ^{1), 4)}						
Mass flow	kg/kWh	-	5.6	5.8	6.0	6.8
Air temperature after cooler	°C	-	45	45	45	45
3. Exhaust gas data ^{1), 4)}						
Mass flow	kg/kWh	-	5.8	6.0	6.2	6.7
Gas temperature after turbine	°C	-	353	371	382	432
4. Heat balance data ²⁾						
Charge air	kJ/kWh	-	1140	1055	990	910
Lubricating oil	kJ/kWh	-	515	565	610	815
Jacket cooling water	kJ/kWh	-	770	755	760	830
Exhaust gas	kJ/kWh	-	2005	2175	2315	2990
Radiation	kJ/kWh	-	175	185	195	230
5. Fuel consumption ^{3), 4)}						
Specific fuel gas consumption	kJ/kWh	-	8141	8296	8436	9042
Specific pilot oil consumption	g/kWh	-	3.5	5.1	6.4	10.5
Total heat rate	kJ/kWh	-	8290	8512	8710	9490

Remark

Reference condition is based on ISO 3046-1 (turbocharger air inlet pressure 1 bar, intake air temperature 25 , L.T cooling water temperature 25 °C). The above values are based on IMO Tier III emission level on gas mode without selective catalyst reduction operation.

- 1) Mass flow tolerance $\pm 5 \%$, temperature tolerance $\pm 25^{\circ}\text{C}$ ($50 \% < \text{load} \leq 110 \%$).

Mass flow tolerance $\pm 10 \%$, temperature tolerance $\pm 35^{\circ}\text{C}$ ($\text{Load} \leq 50\%$).

- 2) Heat dissipation tolerance $+ 10 \%$ for cooler, $- 15 \%$ for heat recovery.

Additional heat for lube oil purification should be included. (30 kJ/kWh).

- 3) Specific fuel oil consumption tolerance $+ 5 \%$ at 100 % load.

Engine driven pumps attached : lubricating oil pump, high temperature cooling water pump, low temperature cooling water pump.

Fuel gas based on natural gas, lower heating value 36 MJ/Nm^3 ($\approx 50 \text{ MJ/kg}$), min. methane number (MN) 80.

The methane number of the fuel gas is to be calculated by using " AVL Methane version 3.20 " of AVL's software.

Pilot fuel oil based on marine diesel oil, lower calorific value 42700 kJ/kg.

Warranted total heat rate at 100% load only.

- 4) When an engine is operated with exhaust gas after-treatment system (for example: SCR), the values may change to ensure the proper operation of after-treatment system.

Table 3.8 Engine performance data (Diesel mode - rated power : 220 kW / cylinder at 1000 rpm)

Performance data		Engine load (%)				
		110	100	85	75	50
1. Cylinder data						
Cylinder output	kW	242	220	187	165	110
Mean effective pressure	bar	23.1	21.0	17.9	15.8	10.5
2. Combustion air data ^{1), 4)}						
Mass flow	kg/kWh	6.4	6.7	7.1	7.4	8.3
Air temperature after cooler	°C	45	45	45	45	45
3. Exhaust gas data ^{1), 4)}						
Mass flow	kg/kWh	6.6	6.9	7.3	7.6	8.6
Gas temperature after turbine	°C	319	302	293	287	322
4. Heat balance data ²⁾						
Charge air	kJ/kWh	1520	1490	1465	1400	1150
Lubricating oil	kJ/kWh	515	530	580	610	800
Jacket cooling water	kJ/kWh	810	795	785	785	865
Exhaust gas	kJ/kWh	2075	2045	2085	2135	2485
Radiation	kJ/kWh	180	180	185	190	225
5. Specific fuel oil consumption ^{3), 4)}						
Specific fuel oil consumption	g/kWh	197.8	197.0	198.0	200.0	214.1

Remark

Reference condition is based on ISO 3046-1 (turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, L.T cooling water temperature 25 °C). The above values are based on IMO Tier II emission level on diesel mode without selective catalyst reduction operation.

- 1) Mass flow tolerance $\pm 5\%$, temperature tolerance $\pm 25^{\circ}\text{C}$ ($50\% < \text{load} \leq 110\%$).

Mass flow tolerance $\pm 10\%$, temperature tolerance $\pm 35^{\circ}\text{C}$ (Load $\leq 50\%$).

- 2) Heat dissipation tolerance $+ 10\%$ for cooler, $- 15\%$ for heat recovery.
Additional heat for lube oil purification should be included. (30 kJ/kWh).

- 3) Specific fuel oil consumption tolerance $+ 5\%$ at 100 % load.

Engine driven pumps attached : lubricating oil pump, high temperature cooling water pump, low temperature cooling water pump.

Specific fuel oil consumption includes the pilot oil consumption and excludes clean leakage fuel oil.

Main fuel oil based on marine diesel oil, lower calorific value 42700 kJ/kg.

Specific fuel oil consumption is warranted at 100 % engine load without selective catalyst reduction operation.

- 4) When an engine is operated with exhaust gas after-treatment system (for example: SCR), the values may change to ensure the proper operation of after-treatment system.

Table 3.9 Engine performance data (Gas mode - rated power : 220 kW / cylinder at 1000 rpm)

Performance data		Engine load (%)				
		110	100	85	75	50
1. Cylinder data						
Cylinder output	kW	-	220	187	165	110
Mean effective pressure	bar	-	21.0	17.9	15.8	10.5
2. Combustion air data ^{1), 4)}						
Mass flow	kg/kWh	-	5.8	5.9	6.8	8.0
Air temperature after cooler	°C	-	45	45	45	45
3. Exhaust gas data ^{1), 4)}						
Mass flow	kg/kWh	-	6.0	6.1	7.1	8.3
Gas temperature after turbine	°C	-	365	374	376	421
4. Heat balance data ²⁾						
Charge air	kJ/kWh	-	1240	1140	1070	1015
Lubricating oil	kJ/kWh	-	520	565	615	825
Jacket cooling water	kJ/kWh	-	775	755	770	840
Exhaust gas	kJ/kWh	-	2135	2315	2460	3010
Radiation	kJ/kWh	-	180	185	195	235
5. Fuel consumption ^{3), 4)}						
Specific fuel gas consumption	kJ/kWh	-	8194	8252	8523	9137
Specific pilot oil consumption	g/kWh	-	3.5	5.3	6.4	10.5
Total heat rate	kJ/kWh	-	8343	8478	8797	9585

Remark

Reference condition is based on ISO 3046-1 (turbocharger air inlet pressure 1 bar, intake air temperature 25 °C, L.T cooling water temperature 25 °C). The above values are based on IMO Tier III emission level on gas mode without selective catalyst reduction operation.

- 1) Mass flow tolerance $\pm 5\%$, temperature tolerance $\pm 25^{\circ}\text{C}$ ($50\% < \text{load} \leq 110\%$).

Mass flow tolerance $\pm 10\%$, temperature tolerance $\pm 35^{\circ}\text{C}$ ($\text{Load} \leq 50\%$).

- 2) Heat dissipation tolerance $+ 10\%$ for cooler, $- 15\%$ for heat recovery.
Additional heat for lube oil purification should be included. (30 kJ/kWh).

- 3) Specific fuel oil consumption tolerance $+ 5\%$ at 100 % load.

Engine driven pumps attached : lubricating oil pump, high temperature cooling water pump, low temperature cooling water pump.

Fuel gas based on natural gas, lower heating value 36 MJ/Nm^3 ($\approx 50 \text{ MJ/kg}$), min. methane number (MN) 80.

The methane number of the fuel gas is to be calculated by using " AVL Methane version 3.20 " of AVL's software.

Pilot fuel oil based on marine diesel oil, lower calorific value 42700 kJ/kg.

Warranted total heat rate at 100% load only.

- 4) When an engine is operated with exhaust gas after-treatment system (for example: SCR), the values may change to ensure the proper operation of after-treatment system.

3.4 Exhaust gas emission

3.4.1 General

HiMSEN H22CDF is designed for environment-friendly engine and complies with the IMO NO_x emission limits with low fuel consumption and less smoke.

Typical composition of exhaust gas emission in volume ratio at full load are as follows:

Table 3.10 Typical compositions of exhaust gas emission

Typical exhaust compositions	Volume[%]
Nitrogen, N ₂	approx. 73
Oxygen, O ₂	approx. 13
Carbon Dioxide, CO ₂	approx. 6
Water (Vapor), H ₂ O	approx. 6
Argon, Ar	approx. 1
Soot, Ash, NO _x , CO, HC, etc.	residue

Residue is little in amount but ecologically critical. Therefore, a careful attention on the treatment of fuel oil shall be required for engine operating conditions.


If there is no special requirements from customer regarding the exhaust gas emission, HiMSEN Generating-set shall be delivered with optimized performance conditions fulfilling the MARPOL 73/78 ANNEX VI, Regulation 13 of value of NO_x emissions.

Therefore, it is strongly requested to contact the engine maker if there are any further requirements regarding exhaust gas emission or special operating conditions.

3.4.2 Engine international air pollution prevention (EIAPP) certificates

The Engine International Air Pollution Prevention (EIAPP) certificate is related to NO_x emissions. If an engine complies with the NO_x emission limits defined in regulation 13 of Annex VI, the EIAPP certificate with approved NO_x technical file shall be issued by the administration or organization on behalf of the administration. Those are necessary for renewal of EIAPP certificate through the on-board NO_x verification. The approved NO_x technical file and EIAPP certificate shall accompany the engine throughout its life and shall be available at all times on the ship.

IMO tier II and tier III limits (MARPOL ANNEX VI (73/78))

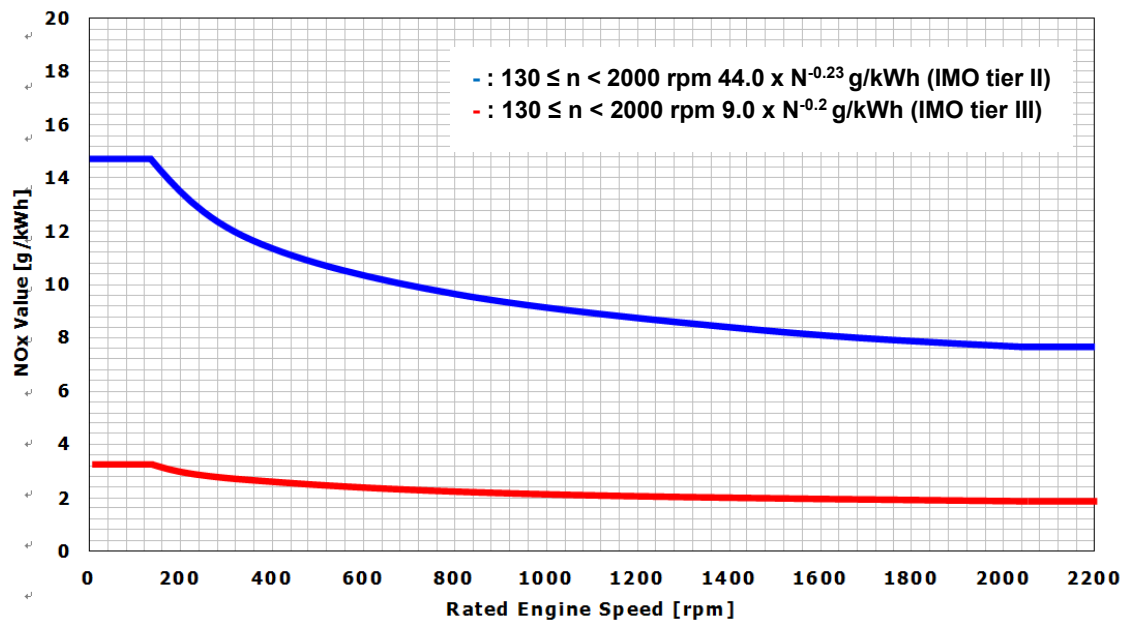

NO_x Emission from marine diesel engine test Cycle D2
In accordance with ISO 8178-4 and IMO NO_x technical code

Figure 3.3 IMO tier II and tier III limits

3.5 Power de-rating diagram

3.5.1 Gas operation

De-rating due to suction air temperature and altitude

Engine output power at maximum continuous rating shall be reduced depending on the suction air temperature and site altitude.

NOx : IMO Tier III

Charge air coolant temperature : 35 °C

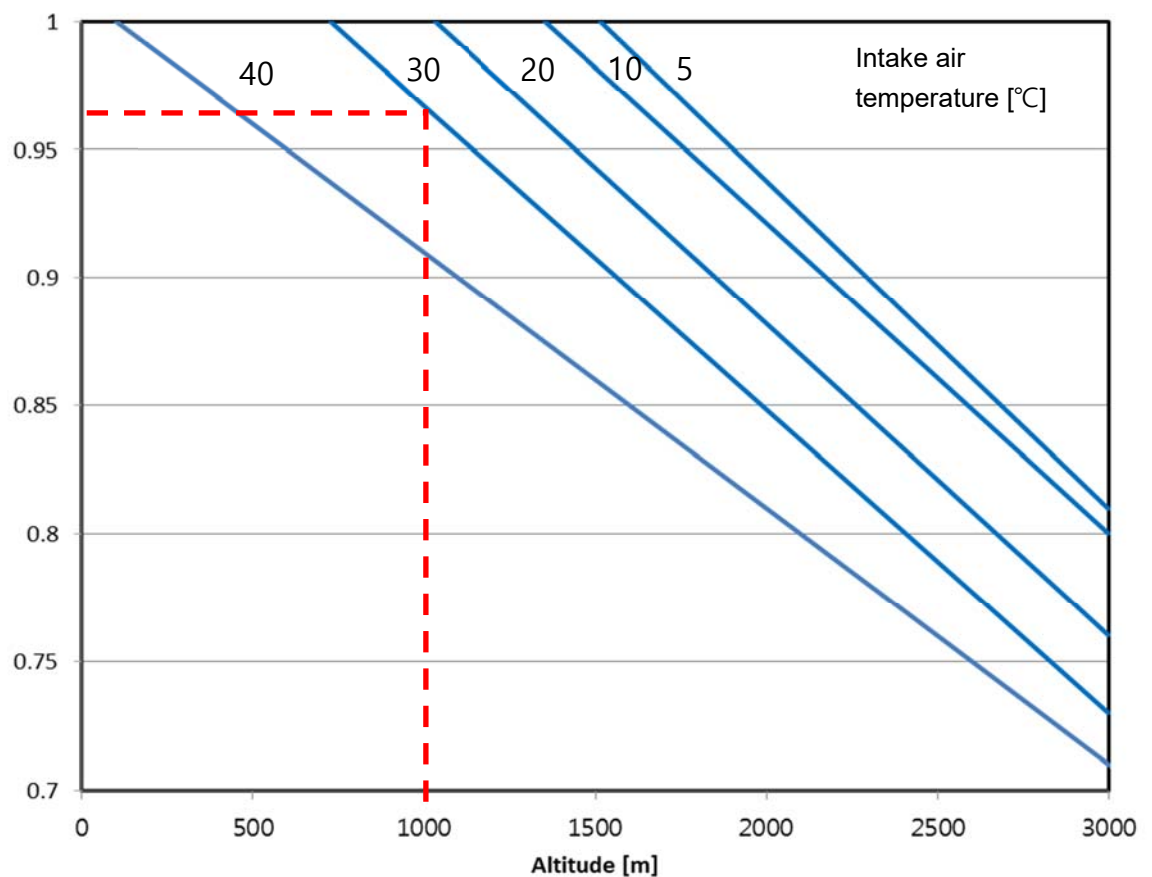


Figure 3.4 De-rating due to suction air temperature and altitude

1. Minimum suction air temperature is 5 °C
2. Temperatures given above are maximum (continuous) operating temperature at site.
3. For intake air temperatures above 40 °C or charge air coolant temperatures above 36 °C, please contact HHI-EMD.
4. All design modifications related to the combustion may change characteristics of power de-rating. For example; turbocharger specification, compression ratio of cylinder, external exhaust gas system and etc. Beside the power de-rating factors (ambient condition, charge air coolant, the fuel gas properties, the fuel gas supply condition and the supply gas pressure), can reduce the engine maximum power.

Example

Cooling water temperature before charge air cooler : 36 °C

Suction air temperature : 30 °C

Site altitude : 1000 m

From the power de-rating diagram, the power de-rating factor at actual operating condition is 0.97 therefore the engine output power at actual operating condition should be de-rated to the 97 % of the standard engine rated power.

The power de-rating diagram of dual fuel engine is usually determined by gas mode de-rating. Therefore, it has been evaluated for gas mode de-rating and the de-rating factors of diesel mode is not provided.

Minimum de-rating due to charge air temperature and methane number (MN)

Engine output power at maximum continuous rating shall be reduced depending on the charge air temperature and methane number.

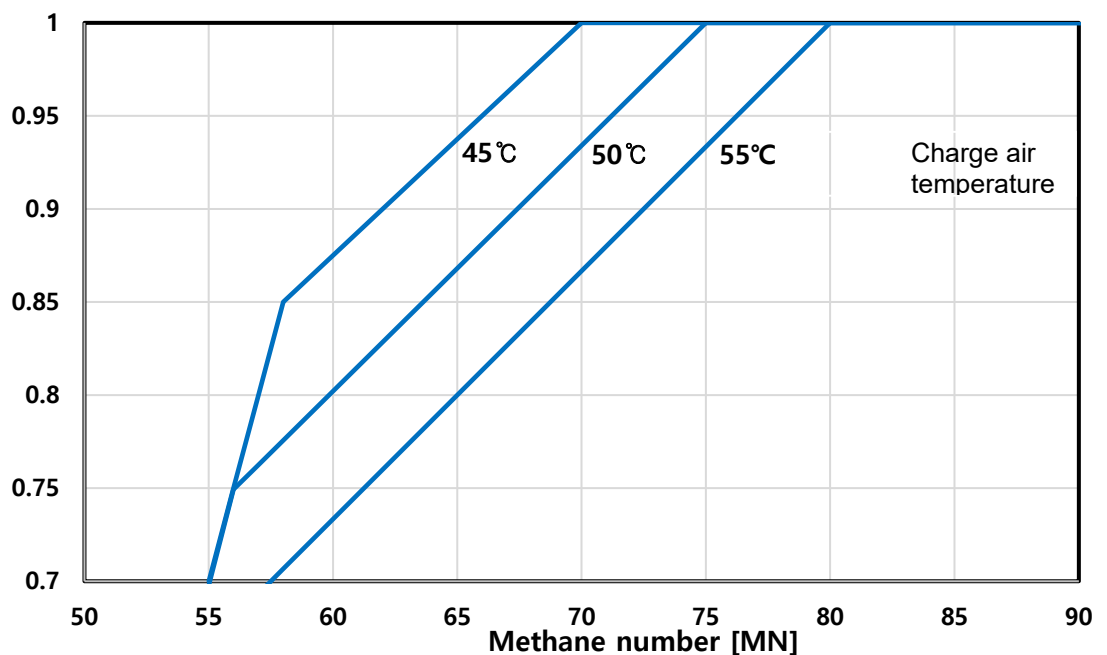


Figure 3.5 Minimum de-rating due to charge air temperature and methane number

100 % load operation of gas mode is possible when operating with min MN 70 gas fuel and below 45 °C of charge air temperature. In the case, the pilot oil consumption and total heat rate are permanently changed in gas mode operation.

De-rating due to gas lower calorific value (LCV) and gas feed pressure

Engine output power at maximum continuous rating shall be reduced depending on the gas lower heating value and gas feed pressure.

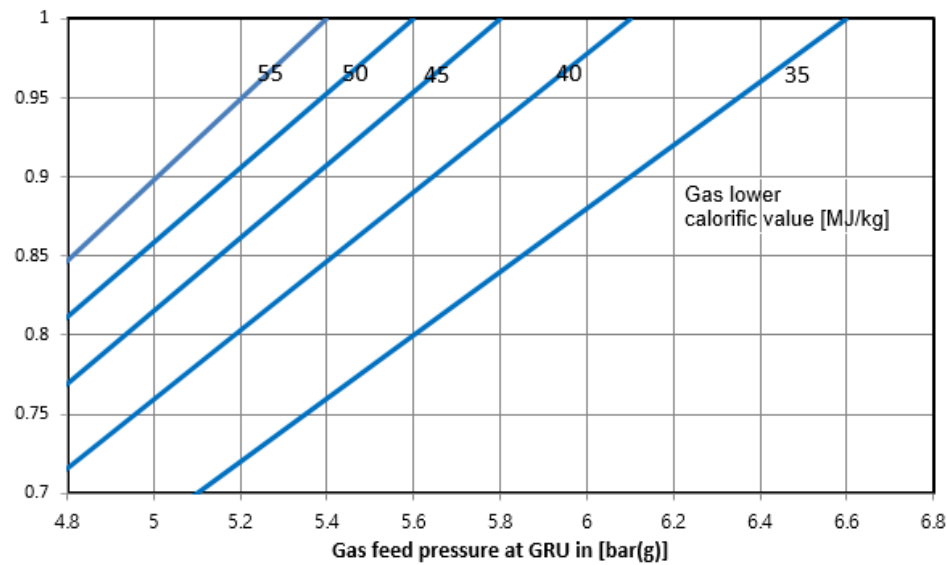


Figure 3.6 De-rating due to gas lower calorific value and gas feed pressure

Engine output power at maximum continuous rating shall be reduced depending on the charge air coolant temperature.

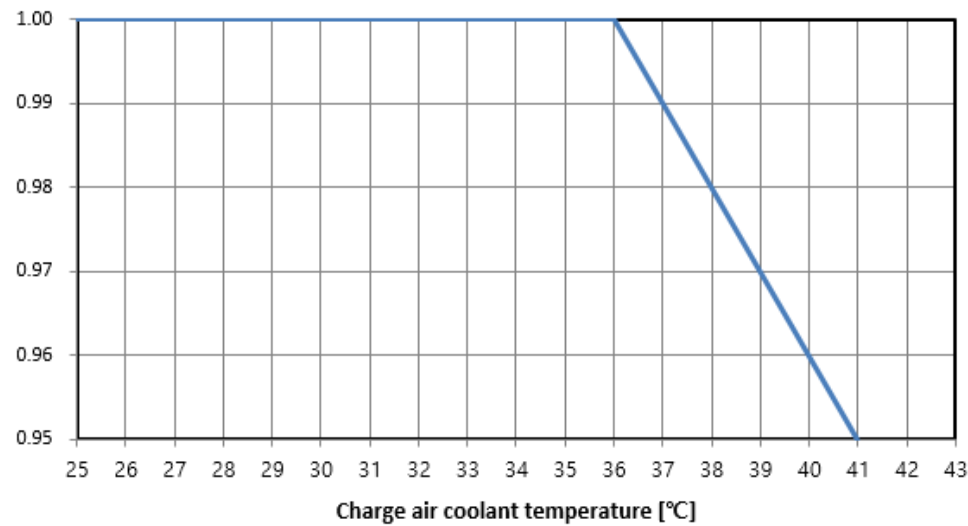


Figure 3.7 De-rating due to charge air coolant temperature

Engine output power at maximum continuous rating shall be reduced depending on the anti-freezing coolant volume.

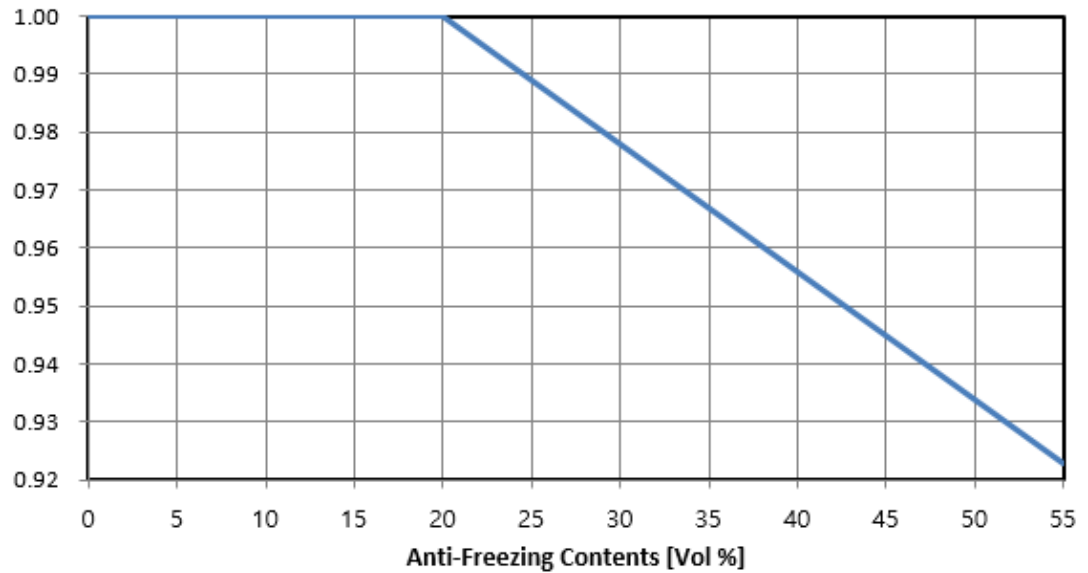


Figure 3.8 De-rating due to contents of anti-freezing coolant

When using anti-freezing coolant inevitably, it is recommended to use up to 55 % maximum, because using anti-freezing coolant more than 55 % of the total mixture does not affect further decrease of freezing point.

Table 3.11 Anti-freezing coolant, fresh water, freezing points

Anti-freezing coolant (Volume %)	20	25	30	35	40	45	50	55
Fresh water (Volume %)	80	75	70	65	60	55	50	45
Freezing Points (°C)	-10.5	-13.5	-16.5	-20.5	-26.5	-31.5	-37.5	-43.5

3.6 Correction of fuel oil consumption

3.6.1 Correction of ambient condition

Specific Fuel Oil Consumption (SFOC) is referred to the ISO 3046-1 standard condition in normally.

However, for the condition other than ISO 3046-1:2002 standard condition, the SFOC at maximum continuous rating can be estimated according to the below formula.

$$\text{SFOC}_{\text{amb}} = \text{SFOC}_{\text{ISO}} \times \text{dSFOC}$$

$$\text{dSFOC} = [100 + (T_{\text{intake}} - 25) \times 0.05 - (P_{\text{amb}} - 1000) \times 0.007 + (T_{\text{cw}} - 25) \times 0.07] / 100 \times (42700 / \text{LCV})$$

Where :

SFOC_{amb} (g/kWh) : Specific fuel oil consumption at actual operating condition

SFOC_{ISO} (g/kWh) : Specific fuel oil consumption at ISO 3046-1 standard condition

T_{intake} (°C) : Intake air temperature at actual operating condition

P_{amb} (mbar) : Turbocharger inlet air pressure at actual operating condition

T_{cw} (°C) : Cooling water temperature before charge air cooler at actual operating condition

LCV (kJ/kg) : Lower calorific value of the fuel oil

Example,

Intake air temperature (T_{intake}) : 30 °C, P_{amb} : 1000 (mbar)

Cooling water temperature (T_{cw}) : 30 °C

Lower calorific value (LCV) : 42700 kJ/kg

SFOC_{ISO} : 183 g/kWh at 720 rpm, maximum continuous rating

then, dSFOC = 1.006 and the SFOC at site condition will be increased to 184.1 g/kWh.

3.6.2 Clean leak fuel oil

Clean leak fuel oil (recycling fuel oil) during engine operation is subtracted from measured fuel oil consumption.

(Refer to 6.2 Internal fuel oil system)

$$\text{FOC}_{\text{amb}} = \text{FOC} - \text{clean leak fuel oil}^*)$$

*) The FOC and clean leak fuel oil (kg/h) are measured over minimum 10 mins.

3.6.3 Correction of additional fuel oil consumption

If additional devices are attached on the engine or operation fuel is changed, the specific fuel oil consumption at maximum continuous rating will be increased as follows approximately:

Table 3.12 Correction of additional fuel oil consumption

Item	Additional SFOC [g/kWh]
Lubricating oil pump	+ 2
Low temperature cooling water pump.	+ 1
High temperature cooling water pump	+ 1
Fuel oil feed pump	Contact to HHI-EMD
Charge air pressure control device	Contact to HHI-EMD
Operation with marine gas oil	+ 2
500 mmWC > Exhaust gas back pressure after turbine > 300 mmWC	+ 0.5 / 100 mmWC

When low and high temperature cooling water pump is attached on engine,
Additional specific fuel oil consumption by water pump

$$= \text{Additional specific fuel oil consumption at 100 \% load} \times \left(\frac{100}{\text{load}} \right)^x \times \left(\frac{\text{actual rpm}}{\text{nominal rpm}} \right)^3 \text{ g/kWh}$$

When lubricating oil pump is attached on engine,

Additional specific fuel oil consumption by lubricating pump

$$= \text{Additional specific fuel oil consumption at 100 \% load} \times \left(\frac{100}{\text{load}} \right)^x \times \left(\frac{\text{actual rpm}}{\text{nominal rpm}} \right) \text{ g/kWh}$$

Table 3.13 Additional specific fuel oil consumption of each load

Load	100 ~ 25 %	Under 25 %
x	1.15	1.28

3.7 Correction of fuel gas consumption

3.7.1 General

Correction for ambient condition (Gas operation)

Heat rate of the gas operation normally refers to the ISO 3046-1 standard condition.

However, for the condition other than ISO 3046-1:2002 standard condition, the heat rate at maximum continuous rating can be estimated according to the below mentioned formula.

First, there is a relationship between the Heat Rate and the Efficiency, the heat rate is the inverse of the efficiency.

$$\text{Heat Rate (kJ/kWh)} = \text{Thermal Energy Input (kJ/h)*} / \text{Engine Output (kW)}$$

$$\text{Efficiency [\%]} = 3600 / \text{Heat Rate [kJ/kWh]} \times 100$$

$$\text{Eff}_{\text{amb}} = \text{Eff}_{\text{ISO}} \times d_{\text{Eff}}$$

$$d_{\text{Eff}} = [100 - (T_{\text{intake}} - 25) \times 0.021 - (1000 - P_{\text{amb}}) \times 0.0025 - (T_{\text{charge}} - 45) \times 0.008] / 100$$

where :

Eff_{amb} : Engine efficiency at actual operating condition [%]

Eff_{ISO} : Engine efficiency at ISO 3046-1 standard condition [%]

d_{Eff} : Deviation of the efficiency

T_{intake} : Intake air temperature at actual operating condition [°C]

P_{amb} : Ambient air pressure at actual operating condition [mbar]

T_{charge} : Charged air temperature after charge air cooler(CAC) at actual operating condition [°C]

Notice)

- 1) Maximum value of d_{Eff} is 1.
- 2) Between ISO and ambient condition, same operating parameters must be used.
- 3) If there is a change of main component, this correction should be updated.
- 4) The Heat Rate is a term commonly used for consumption of thermal energy in gaseous fuels, LCV (Lower Calorific Value) of gaseous fuel is not corrected.

Example,

Intake air temperature (T_{intake}) : 30 °C

P_{amb} : 990 [mbar]

Charge air temperature(T_{charge}) : 47 °C

Eff_{ISO} : 48.38 [%] at 720[rpm], MCR (Total Heat rate : 7,441 [kJ/kWh])

then, $d_{\text{Eff}} = 0.9985$ and the efficiency (Eff_{amb}) at site condition will be decreased to 48.31[%]

for the heat rate at site condition will be increased to 7,452 [kJ/kWh].

*) Remark

Fuel gas consumption should be measured at the point of stable operation without any leaks on fuel gas line and without any gas ventilation from gas supply - pressure regulation system.

3.7.2 Calculation of fuel gas flow

Since the heat rate is defined by the amount of thermal energy consumption for gas operation, the calorific value and density of fuel gas are necessary in order to calculate the flow consumption amount.

Volume flow or mass flow of gas consumption are simply calculated by LCV and density of the fuel gas.

Volume flow of fuel gas [Nm³/h] = Heat rate [kJ/kWh] x Engine output [kW] / LCV [kJ/Nm³]
Mass flow of fuel gas [kg/h] = Volume flow of fuel gas [Nm³/h] x Density [kg/Nm³]

3.7.3 Correction of additional fuel gas consumption

If additional devices are attached on the engine or operation condition is changed, the heat rate for MCR will be increased approximately as follows:

Table 3.14 Correction of additional fuel gas consumption

Item	Additional heat [kJ/kWh]
Lubricating oil pump	+ 86
Low temperature cooling water pump.	+ 43
High temperature cooling water pump	+ 43
Fuel oil feed pump	Contact to HHI-EMD
Charge air pressure control device	Contact to HHI-EMD
400 mmWC > Exhaust gas back pressure after turbine > 240 mmWC (Gas mode*)	+ 120 Per 80 mmWC of Gas mode
Fuel gas with lower methane number (MN70)	+ 187

Remark)

*) The exhaust back pressure of the gas mode is defined as a value changed over from the diesel mode.
The maximum back pressure of gas mode is approximately the back pressure of diesel mode x 0.8.

LT & HT Pump attached engine(Genset & Propulsion)

Additional heat rate by water pump =

Additional heat rate at 100% load * (100/Load)^x * (actual rpm/nominal rpm)³ [g/kWh]

LO Pump attached engine(Genset & Propulsion)

Additional heat rate by LO pump =

Additional heat rate at 100% load * (100/Load)^x * (actual rpm/nominal rpm) [g/kWh]

Table 3.15 Additional specific fuel gas consumption of each load

Load	100 ~ 25 %	Under 25 %
x	1.15	1.28

3.8 Correction of exhaust gas temperature

3.8.1 General

Correction for ambient condition

Exhaust gas temperature after turbine is referred to ISO 3046-1 standard condition in normally.

However, for the condition other than ISO 3046-1 standard condition, the exhaust gas temperature after turbine could be estimated according to the below formula :

$$T_{\text{exh.amb}} = T_{\text{exh.ISO}} + dT_{\text{exh}}$$

$$dT_{\text{exh}} = (T_{\text{intake}} - 25) \times 1.5 + (T_{\text{cw}} - 25) \times 0.7$$

where :

$T_{\text{exh.amb}}$ (°C) : Exhaust gas temperature after turbine at actual operating condition

$T_{\text{exh.ISO}}$ (°C) : Exhaust gas temperature after turbine at ISO 3046-1 standard condition

dT_{exh} (°C) : Deviation of the exhaust gas temperature after turbine

T_{intake} (°C) : Intake air temperature at actual operating condition

T_{cw} (°C) : Cooling water temperature before charge air cooler at actual operating condition

Example,

Intake air temperature (T_{intake}) : 35 °C

Cooling water temperature (T_{cw}) : 35 °C

$T_{\text{exh.ISO}}$: 290 °C at 720 rpm, maximum continuous rating

then, $dT_{\text{exg}} = 22$ °C and the $T_{\text{exh.amb}}$ at actual operating condition will be increased to 312 °C.

4 Dynamic characteristics and noise

4.1 External forces and couples

Table 4.1 External forces and couples

Engine type	Speed	External forces and moments				Guide force moments		
		Order		Moment		Order		Moment
	rpm			Horizontal	Vertical			
		No.	Hz	kNm	kNm	No.	Hz	kNm
5H22CDF	900	1	15.0	0.4	13.0	2.5	37.5	28.1
		2	30.0	0.0	36.3	5	75.0	10.8
	1000	1	16.7	0.5	16.0	2.5	41.7	28.1
		2	33.3	0.0	44.9	5	83.3	10.9
6H22CDF	900	1	15.0	0.0	0.0	3	45.0	13.2
		2	30.0	0.0	0.0	6	90.0	8.3
	1000	1	16.7	0.0	0.0	3	50.0	9.8
		2	33.3	0.0	0.0	6	100.0	8.3
7H22DF	900	1	15.0	0.3	7.7	3.5	52.5	27.9
		2	30.0	0.0	7.3	7	105.0	6.5
	1000	1	16.7	0.3	9.6	3.5	58.3	27.9
		2	33.3	0.0	9.1	7	116.7	6.5
8H22CDF	900	1	15.0	0.0	0.0	4	60.0	23.9
		2	30.0	0.0	0.0	8	120.0	5.0
	1000	1	16.7	0.0	0.0	4	66.7	23.5
		2	33.3	0.0	0.0	8	133.3	5.0

Engine type	Speed	External forces and moments				Guide force moments		
		Order		Moment		Order		Moment
				Horizontal	Vertical			
	rpm	No.	Hz	kNm	kNm	No.	Hz	kNm
9H22CDF	900	1	15.0	0.2	5.6	4.5	67.5	23.2
		2	30.0	0.0	4.0	9	135.0	3.8
	1000	1	16.7	0.2	6.9	4.5	75.0	23.2
		2	33.3	0.0	4.9	9	150.0	3.8

4.2 Moment of inertia

Table 4.2 Moment of inertia

Engine type	Speed	Rating	Moments of inertia ; J ₁				
			Engine MOI	Flywheel		Alternator MOI ₂	Total MOI
				MOI	Mass		
	rpm	kW	kgm ²	kgm ²	kg	kgm ²	kgm ²
5H22CDF	900	1075	68.7	154.0	973.5	93.5	316.2
	1000	1100	68.7	154.0	973.5	97.3	320.0
6H22CDF	900	1290	93.2	244.0	1283.9	143.8	481.0
	1000	1320	93.2	244.0	1283.9	124.2	461.4
7H22CDF	900	1505	103.6	154.0	973.5	152.8	410.4
	1000	1540	103.6	154.0	973.5	143.0	400.6
8H22CDF	900	1720	110.1	154.0	973.5	184.5	448.6
	1000	1760	110.1	154.0	973.5	161.5	425.6
9H22CDF	900	1935	120.5	154.0	973.5	225.1	499.6
	1000	1980	120.5	154.0	973.5	214.6	489.1

1) Moment of Inertia : $GD^2 = 4 \times J$ (kgm²)

2) Recommended values, the case of different MOI should be confirmed by a torsional vibration analysis.

4.3 Noise measurement

4.3.1 General description

The airborne noise of the engine is defined as a sound pressure level according to ISO 6798 and ISO 8528-10. The total 19 point at distance 1 m away from the engine surface at full load should be measured. The values are averaged with A-weighting in one octave band. In the octave level diagram, the minimum and maximum octave levels of all measuring points have been linked by results. The data can be changed, depending on the acoustical properties of the environment and the number of cylinder

900 rpm (Diesel mode)

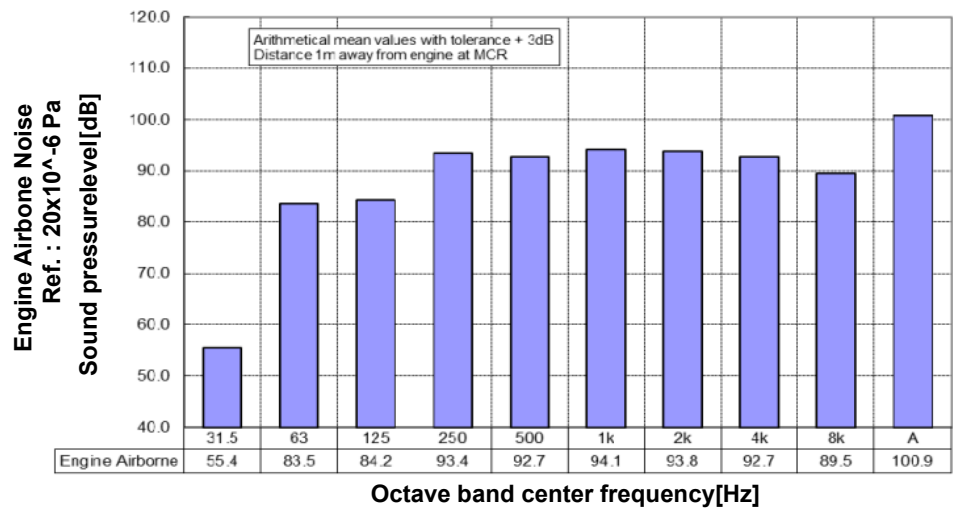


Figure 4.1 Engine air airborne noise level (Diesel mode)

900 rpm (Gas mode)

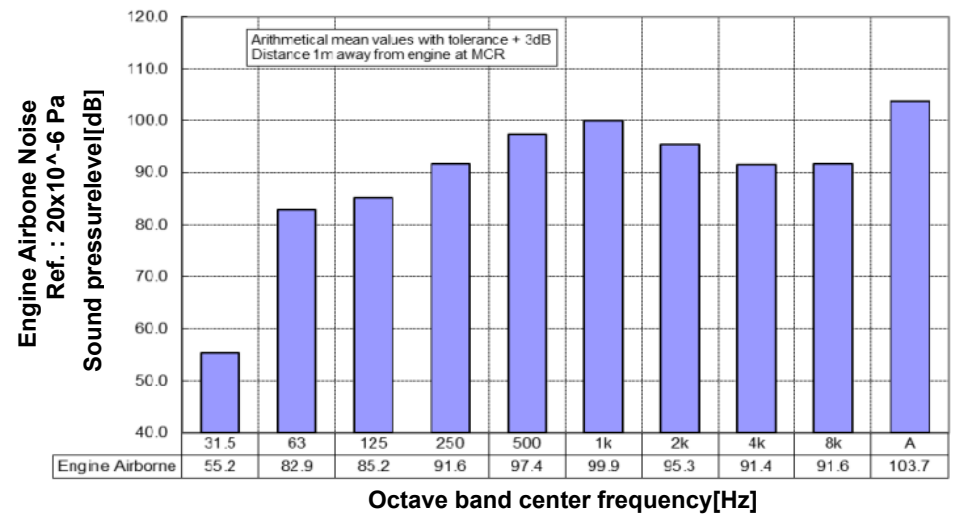


Figure 4.2 Engine air airborne noise level (Gas mode)

5 Operation and control system

5.1 Engine operation

5.1.1 General

HiMSEN dual fuel engine is able to run in both diesel oil fuel and gas fuel.

The operation characteristics at diesel and gas mode are different. Suitable fuel mode should be selected at each required operation capacity and proper action should be taken based on fuel mode.

5.1.2 Engine fuel mode

Diesel mode

- ✓ Diesel fuel and pilot fuel system active.
- ✓ Diesel fuel is injected by conventional injection system and the actuator adjusts the amount of fuel injection.
- ✓ Pilot fuel system is electrically controlled by common rail system.
- ✓ When manually selected or gas mode operation is not available (gas trip condition).

Gas mode

- ✓ Gas fuel and pilot fuel system active.
- ✓ Gas fuel is electronically injected by gas admission valve and the amount of gas injection is adjusted by its opening duration.
- ✓ When manually selected.
- ✓ MSS (Methane slip solution) operation¹⁾ for reducing CH₄ slip.
MSS operation is available for low load condition if predefined conditions are satisfied in gas mode.

Backup mode operation

- ✓ Only diesel fuel system active (Heavy fuel oil / marine diesel oil / marine gas oil).
- ✓ In heavy fuel oil application, maximum backup mode operation time : 30 minutes
- ✓ In marine diesel oil, marine gas oil application, maximum backup mode operation time : 10 hours
- ✓ In case, backup mode operation exceeds the above specified time, abnormal conditions (blocking of injection hole or wear) of the micro pilot injector may occur by backup mode which not activate pilot injection system. After backup mode operation, Engine and Auxiliary facility check is required if necessary.

1) Description for MSS operation is excluded in this document.
Contact HHI-EMD for detailed information of MSS operation.

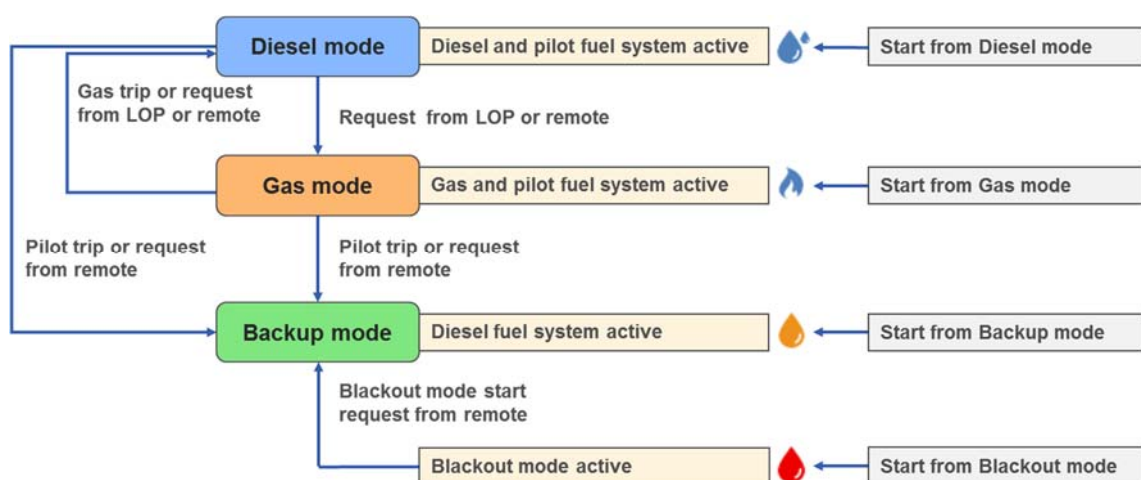


Figure 5.1 Engine fuel mode

Fuel mode can be selected from

- ✓ At switch on local operating panel (On engine)
- ✓ From remote system (Power management system or ship management system)

The Gas and pilot trip condition is specified in safety list.

5.1.3 Starting condition

Normal starting condition

Lubricating oil

- ✓ Continuous pre-lubrication is required
- ✓ Temperature : over 40 °C (Preheated)

Cylinder cooling water

- ✓ Start on marine diesel oil / marine gas oil : over 40 °C (Preheated)
- ✓ Start on heavy fuel oil : over 60 °C (Preheated)

Combustion Air

- ✓ Intake air temperature : between 0 °C and 45 °C

Fuel oil (Marine diesel oil / marine gas oil or heavy fuel oil)

- ✓ Pre-circulation is required
- ✓ Engine inlet viscosity : 12 ~ 18 cSt (Heavy fuel oil)
2 ~ 14 cSt (Marine diesel oil / marine gas oil)

Fuel gas

- ✓ Temperature : 0 ~ 50 °C
- ✓ Refer to Figure 5.2 for required gas pressure

Emergency cold starting condition

Fuel oil : only marine diesel oil / marine gas oil is acceptable

Cooling water : minimum 15 °C

Lubricating oil : minimum 10 °C, pre-lubricated
(Approx.1000 cSt based on SAE 40)

Intake air temperature : minimum 0 °C

Required gas supply pressure

Gas supply pressure can be interpolated in case of 36 MJ/Nm^3 and 28 MJ/Nm^3 of gas lower heating value as Figure 5.2. The gas supply pressure at gas regulating unit inlet, G11 (See the diagram Figure 6.7) should be considered as followings;

- 1) Pressure loss at the GRU (Generally, 0.6 bar can be used.),
- 2) Pressure loss in the pipe between GRU and engine.

The fuel gas specification should be satisfied the requirements in the table 6.16. Admissible gas supply pressure fluctuation : Less than 0.1 bar/sec of pressure variation (peak ± 0.5 bar) can be absorbed in gas regulating unit and no effect on engine operation. The supplied gas pressure with deviation should be set higher than the required gas pressure at corresponding engine operating condition.

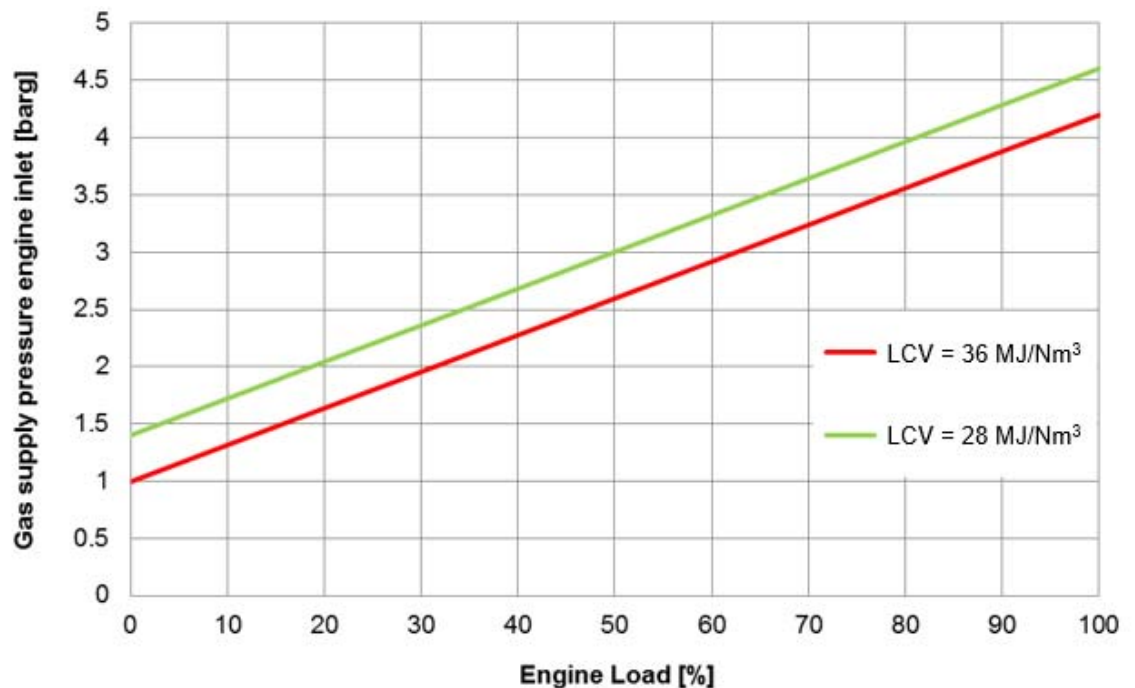


Figure 5.2 Gas supply pressure at engine inlet

5.1.4 Engine start

Engine start ready

Engine start ready condition is indicated in local and remote. It is recommended that engine is to be in warm condition before start.

Start block signals

- ✓ Lubricating oil pressure at engine inlet low
- ✓ Starting air pressure at engine inlet low (Option)
- ✓ High temperature cooling water at engine inlet low (Option)
- ✓ Turning gear engaged
- ✓ Slow turning failure
- ✓ Engine speed high before start
- ✓ Exhaust gas vent sequence in active
- ✓ Low inert gas pressure during engine shutdown sequence (Gas natural ventilation in progress)
- ✓ Start block in test mode
- ✓ Start block from remote system

Engine start at different fuel mode

The air starting motor is installed in engine side and drives flywheel through gears. The air motor is operated by compressed air and controlled by pneumatic solenoid valve (See the diagram Figure 9.1).

Start from each fuel mode is available when predefined condition for selected fuel mode is satisfied.

Engine start at diesel mode

- ✓ For diesel mode start, there should not be any pilot trip condition before start.
- ✓ Air starting motor is engaged and turn the flywheel and initial firing is made by main diesel fuel injection.
- ✓ As soon as combustion chamber is fired and speed is quickly increased, the starting air injection is deactivated.
- ✓ At idle speed, pilot injection test is performed. Idle speed is normally 500 rpm.
- ✓ During pilot injection test, engine run only by pilot fuel injection and check each cylinder's exhaust gas temperature or indicated mean effective pressure.
- ✓ If all conditions are satisfied, the speed is ramp up to rated speed automatically.
- ✓ Circuit breaker can be closed after about 1.0 min. from diesel mode start.

Engine start at gas mode

- ✓ For gas mode start, there should not be any gas trip condition before start.
- ✓ Air starting motor is engaged and turn the flywheel and initial firing is made by main diesel fuel injection. Even at gas mode start, the fuel is initiated by diesel fuel until reaching idle speed.
- ✓ As soon as combustion chamber is fired and speed is quickly increased, the air starting motor is disengaged.
- ✓ At idle speed, pilot injection test is performed idle speed is normally 500 rpm
- ✓ During pilot injection test, engine run only with pilot fuel injection and check each cylinder's exhaust gas temperature or indicated mean effective pressure.
- ✓ If pilot fuel injection test is successfully completed, the gas valves are open and after predefined CH₄ purging delay, gas is injected and gas fuel takes over diesel fuel.
- ✓ The engine speed is ramp up to rated speed automatically.
- ✓ Circuit breaker can be closed after about 2.5 min. from gas mode start.

Engine start at backup mode

- ✓ Backup mode start will be initiated in any case of start under pilot trip condition or emergency situation e.g. blackout start.
- ✓ Air starting motor is engaged and turn the flywheel and initial firing is made by main diesel fuel injection.
- ✓ As soon as combustion chamber is fired and speed is quickly increased, the air starting motor is disengaged.
- ✓ Pilot injection test is skipped at backup mode.
- ✓ The engine speed is ramp up to rated speed automatically.
- ✓ Circuit breaker can be closed after about 20 sec. from backup mode start.
- ✓ If block-out start mode is activated, start block conditions as below are overridden and engine is operated on backup mode.
 - Lubricating oil pressure at engine inlet low
 - Starting air pressure at engine inlet low
 - High cooling water temperature at engine inlet low
 - Slow turning failure
- ✓ The speed is increased without staying in idle speed and reach to rated speed as fast as possible.

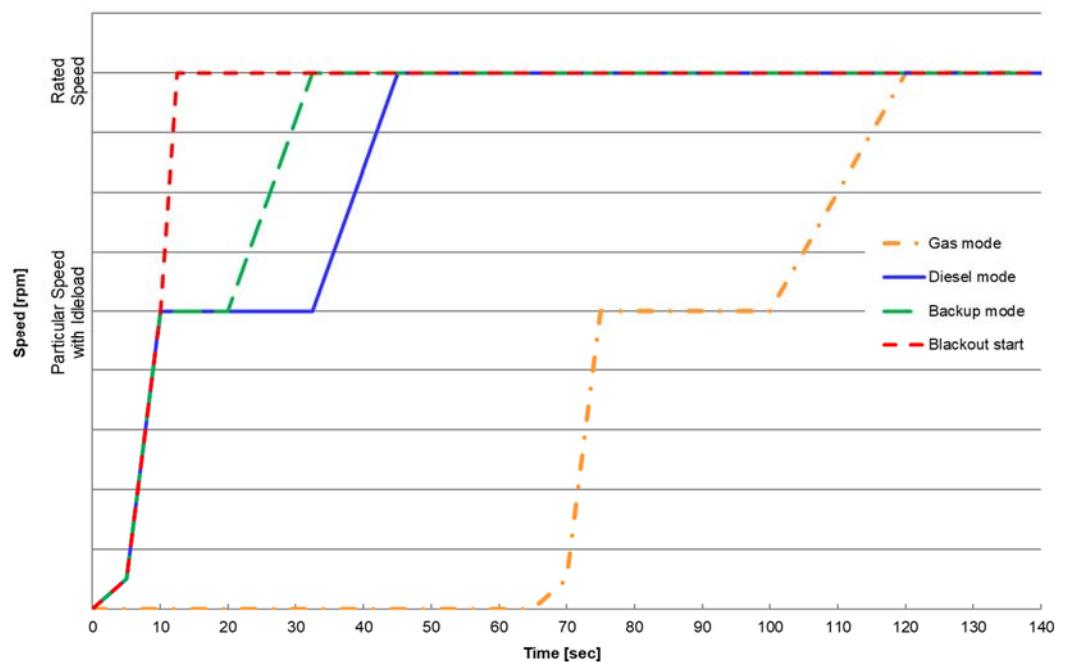


Figure 5.3 Engine start at different fuel mode

5.1.5 Restriction for low load operation

Idle running

- ✓ Less than 5 minutes of idle running is permitted if the engine is going to stop.
- ✓ Maximum 30 minutes of idle running is permitted if the engine is loaded after idle running.

Long term low load operation

Gas and marine diesel oil and marine gas oil operation

- ✓ Over 15 % load operation : no restriction
- ✓ Below 15 % load operation : load up over 70 % load at every limited time at corresponding load in Figure 5.4

Heavy fuel oil operation

- ✓ Over 20 % load operation : no restriction
- ✓ Below 20 % load operation : load up over 70 % load at every limited time at corresponding load in Figure 5.4

Duration of flushing operation (See Figure 5.4)

'Time limits for low load operation' (left) shows admissible operation time at certain load, and 'Duration of flushing operation' (right) shows the required time for duration that engine operates at not less than 70 % of full load in order for burning the deposits away.

Example

1. Time limits for low load operation (line A, A')
At 10 % of full load, heavy fuel oil operation is permissible for about 17 hours (line A), whereas marine diesel oil/marine gas oil operation for 37 hours. (line A').
2. Duration of flushing operation (line B, B')
Engine should be operated for roughly 1.15 hours (heavy fuel oil) and 0.75 hours (marine diesel oil / marine gas oil) at not less than 70 % of full load.

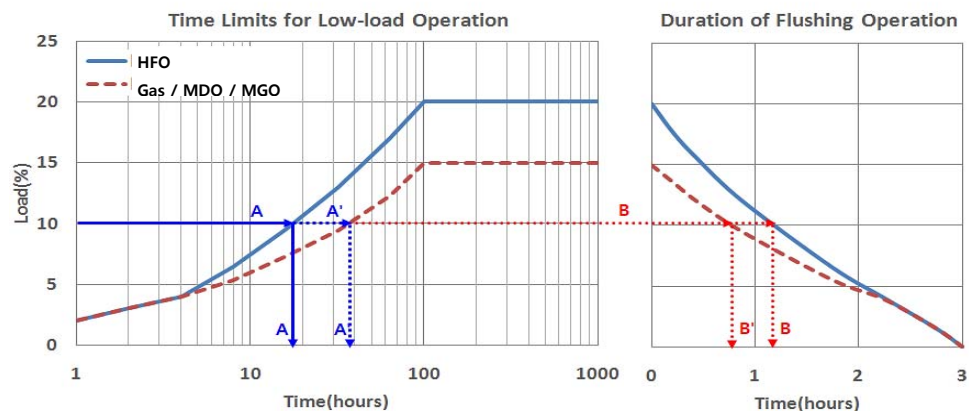


Figure 5.4 Time limits for low load operation

5.1.6 Engine load-up

HiMSEN engines fulfill all requirements regarding the load application of all major classification societies and IACS at diesel mode.

At gas mode, both continuous and step by step load up should be taken carefully for stable and safe operation of engine.

The engine has to be in warm condition for normal or emergency load up. When the engine is in cold condition, the continuous load up should be slower than normal and high step load should be prohibited.

Continuous load-up

The continuous load up capacity at each fuel mode is referred in Figure 5.5

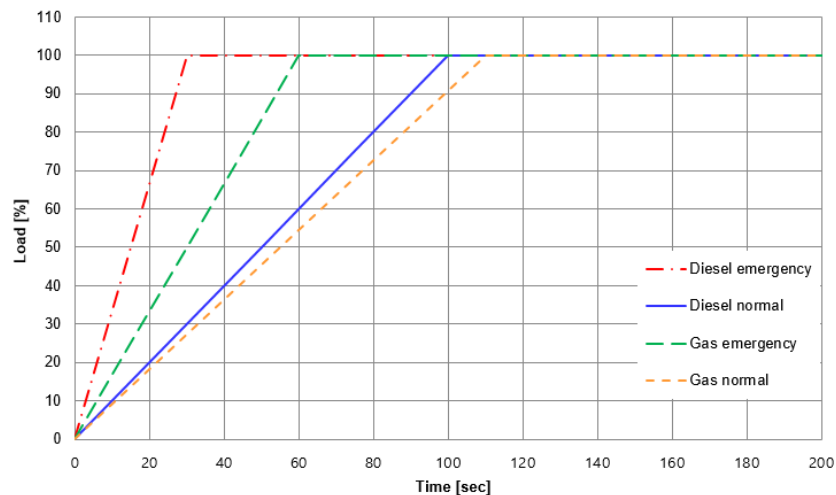


Figure 5.5 Engine load up capacity in ramp

Diesel mode

At warm condition, the 100 % load can be achieved in 100 sec. by continuous ramping up at normal condition. At emergency condition, the load can be more quickly increased to 100 % in 30 sec.

Gas mode

At warm condition, the 100 % load can be achieved in 110 sec. by continuous ramping up at normal condition. For fast loading, the load can be more quickly increased to 100 % in 60 sec. It should be taken into account that load increase at gas mode need to be more careful. Emergency load up should be only possible when it's really needed. This fast load up shall cause mechanical stress on engine and shall not be repeated too often.

Step by step load-up

Considering the time and safety required for stabilizing the frequency due to sudden load up, it is recommended to load up from idle to full load by more than three steps in diesel mode and five steps in gas mode. Frequency deviation and recovery time when loading up by step is referred in Figure 5.6 and Figure 5.7. At gas mode, the amount of load step is decreased at high load due to the higher knock tendency at high load.

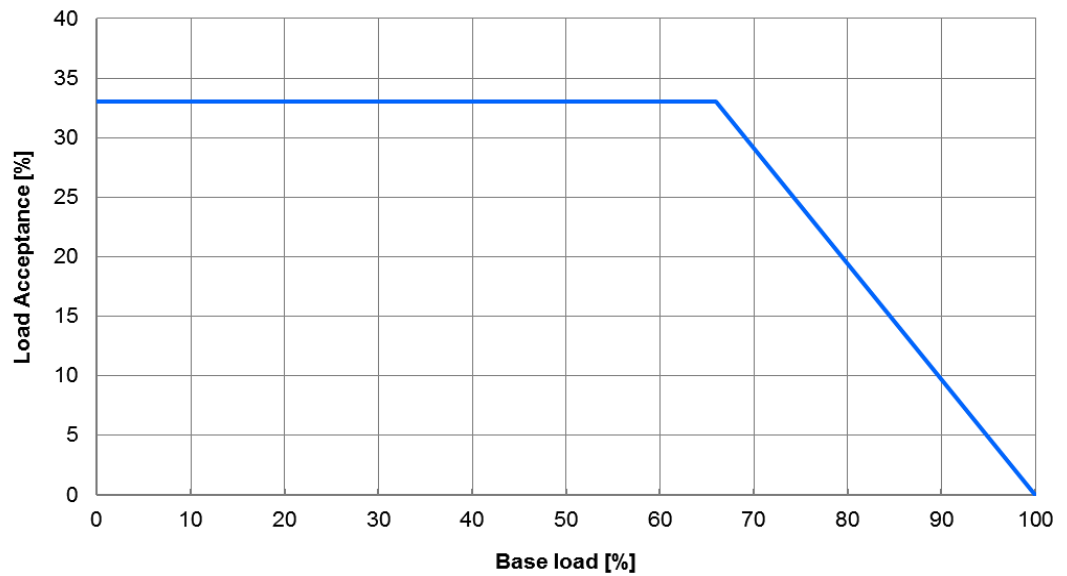


Figure 5.6 Step load acceptance at diesel mode

1. Max instant load step: 0 – 33 – 66 – 100
2. Max speed variation $\leq 10\%$
3. Steady-state speed band $\leq 1.0\%$
4. Recovery time ≤ 5 sec
5. Time between next load step ≥ 10 sec

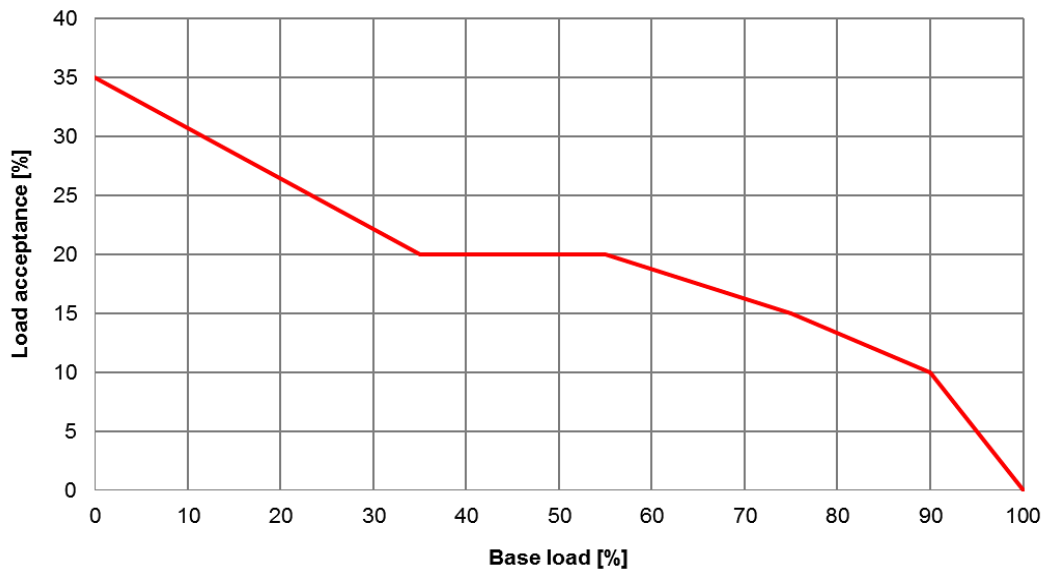


Figure 5.7 Step load acceptance at gas mode

1. Max instant load step: 0 – 35 – 55 – 75 – 90 – 100
2. Max speed variation $\leq 10\%$
3. Steady-state speed band $\leq 1.5\%$
4. Recovery time ≤ 10 sec
5. Time between next load step ≥ 15 sec

5.1.7 Fuel mode changeover

HiMSEN dual fuel engine operation at diesel or gas mode is possible when predefined condition for each mode is satisfied.

Fuel mode changeover is available from

- ✓ Switch in local (Engine room),
- ✓ Switch in remote (Engine control room).

When predefined trip condition at each fuel mode is detected, fuel mode is automatically transferred to safer fuel mode (gas to diesel, diesel to backup) for continuous operation without engine shutdown (Refer to Figure 5.1).

From gas to diesel mode

- ✓ Changeover is available at entire load range 0 % ~ 100 %.
- ✓ Changeover takes only a second (Refer to Figure 5.8)

From diesel to gas mode

- ✓ Changeover is available at load range of 0 % ~ 80 %.
- ✓ Gas leakage test is performed before changeover.
- ✓ Changeover takes approx. 2 min. including gas leakage test (Refer to Figure 5.9).
- ✓ In order to change over heavy fuel oil to gas operation, marine diesel oil / marine gas oil flushing operation is required.

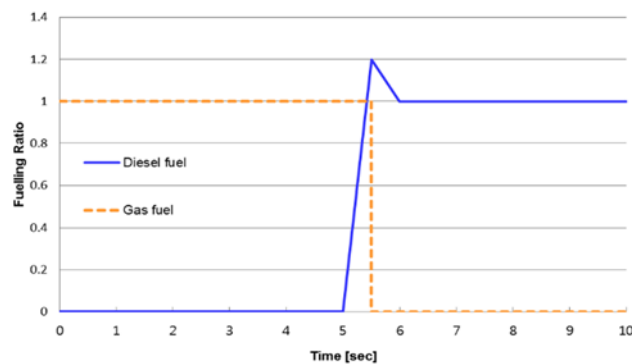


Figure 5.8 Fuel mode changeover from gas to diesel

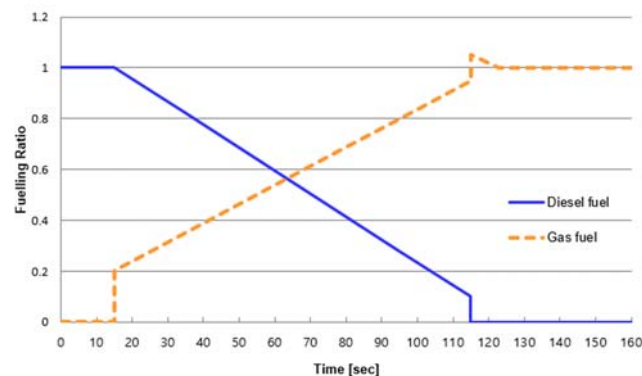


Figure 5.9 Fuel mode changeover from diesel to gas

5.1.8 Engine stop

Normal stop

When stop command is activated at gas mode, the fuel mode is automatically changeover to diesel mode. Before engine stop, the engine will run at cool-down speed to dissipate the heat of engine. After cool-down phase, the fuel rack goes back to zero position and the pilot injection system is activated until predefined speed in order to prevent clogging on nozzle holes by carbon deposits.

Engine shutdown

When the engine enters predefined shutdown condition due to certain abnormality, the engine is stopped immediately and the circuit breaker is opened automatically without de-load.

If the engine is shutdown at gas mode operation, the shut-off valves and venting valves in gas regulating unit are activated and gas supply pipe on engine is purged with inert gas.

The pilot injection system is active until predefined speed to burn the rest of gas in chamber. After the engine stop from gas mode, the external exhaust gas system should be ventilated and blow-out by exhaust gas ventilation unit during certain time to prevent unexpected explosion of unburned gas. And before completion of this sequence, the engine start is blocked.

If the engine is shutdown at diesel mode operation, solenoid valve or stop air cylinder is activated so that it pushes fuel rack to move zero position.

At both shutdown phases from gas and diesel mode, the pilot injection system is activated except the cases that overspeed and/or malfunction of both speed pick up sensors. In this case, the pilot injection system is deactivated at once.

Emergency stop

When emergency stop signal is entered from local operating panel and/or remote system by activating the switch signal, the engine will be stopped immediately.

The stop sequence is similar with shutdown except that pilot injection system is deactivated at once in emergency stop case.

5.1.9 Engine safety

The HiMSEN dual fuel engine control system monitors the signals from all sensors on engine and takes an appropriate action against abnormality of engine for safe operation. All engine reaction including limit value and delay defined in HiMSEN dual fuel engine control system.

HiMSEN dual fuel engine control system fulfills and satisfies redundant and independent safety function against critical shutdown conditions. HiMSEN dual fuel engine control system implements safety functions written in next. Figure 5.10 describes layout of HiMSEN dual fuel engine safety system.

Alarm

Engine control system release alarm message against abnormal sensor signal or sensor failure. No influence to engine operation but operator has to monitor the value carefully.

Start block

Engine control system release alarm message and engine start is blocked. The start block condition has to be cleared before start the engine.

Load reduction

Engine control system release alarm message and the load is reduced automatically (in fixed kW mode) or request a command to its power management system for the load reduction (in droop mode).

Gas trip

Engine control system release alarm message and the fuel mode is transferred from gas to diesel mode. The gas trip condition has to be cleared before go back to gas fuel mode.

Pilot trip

Engine control system release alarm message and the fuel mode is transferred from gas (diesel) to backup mode. The pilot trip condition has to be cleared before go back to gas fuel mode. If pilot trip is released, gas fuel mode is blocked due to former backup mode operation. And, pilot fuel injection test has to be performed by restart in order to clear gas mode block.

Shutdown

Engine control system release shutdown message and the engine is shutdown after predefined delay. Pilot injection system is alive until injection-off speed to burn the rest of gas in combustion chamber.

Emergency stop

Engine control system release emergency stop message and the engine is shutdown immediately.

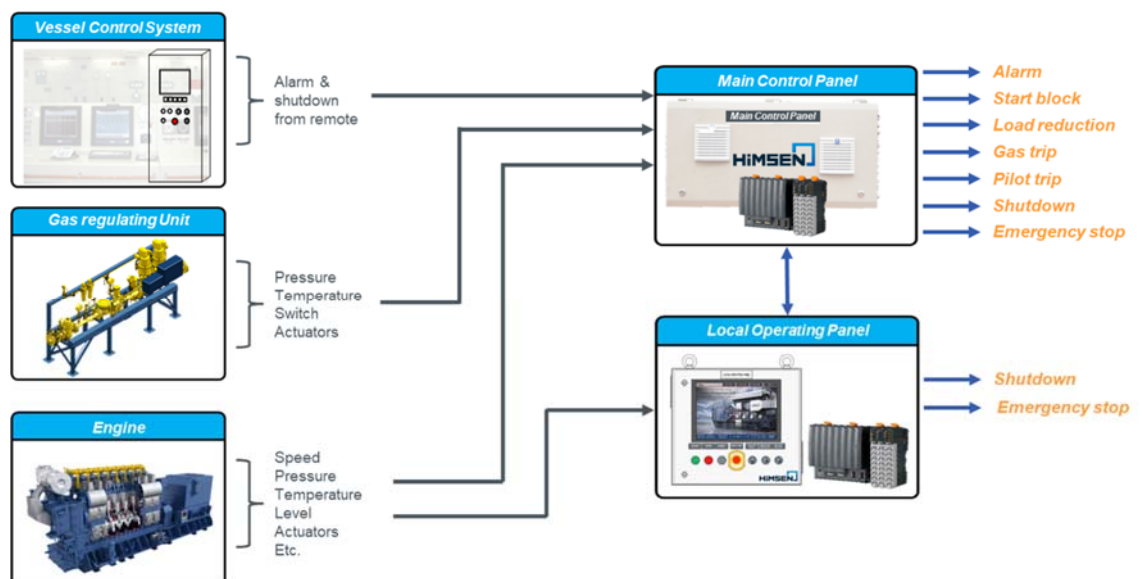


Figure 5.10 H22CDF engine safety function layout

5.2 Engine control system

5.2.1 General

The HiMSEN DF ECS (Engine Control System), performs the complete engine management with all marine application of HiMSEN 4-stroke dual fuel engines.

For the V-type engine application, only fuel injection driving and sensing part for extended cylinder will be added and main controller will stay in identical with in-line engine. The applications of HiMSEN DF ECS (Engine Control System) shall be marine auxiliary generator engine and multiple propulsion engines.

Since all HiMSEN DF(Dual Fuel) engines shall be equipped with double wall gas piping system, machinery space is regarded as 'gas safe area' and thus HiMSEN DF(Dual Fuel) ECS (Engine Control System) is not required to be explosion proof design. However based on explosion zone definition of the engine and auxiliary components, some signals can be interfaced with IS barrier.

The HiMSEN DF ECS mainly consists of MCP (Main control panel), ICM (Injection Control Module integrated with Cylinder Monitoring Module), KMM (Knock Monitoring Module / Optional applied), IOP (Input & Output Panel), LOP (Local Operating Panel), and ACP (Auxiliary Control Panel).

HiMSEN DF ECS is responsible for operation, full monitoring of engine and safety function. All sensors and actuators are connected and dedicated actions are taken for more optimized and safe operation condition.

It is also connected to external system via hardwired signal and bus communication. This configuration provides full operation and monitoring capability to remote system.

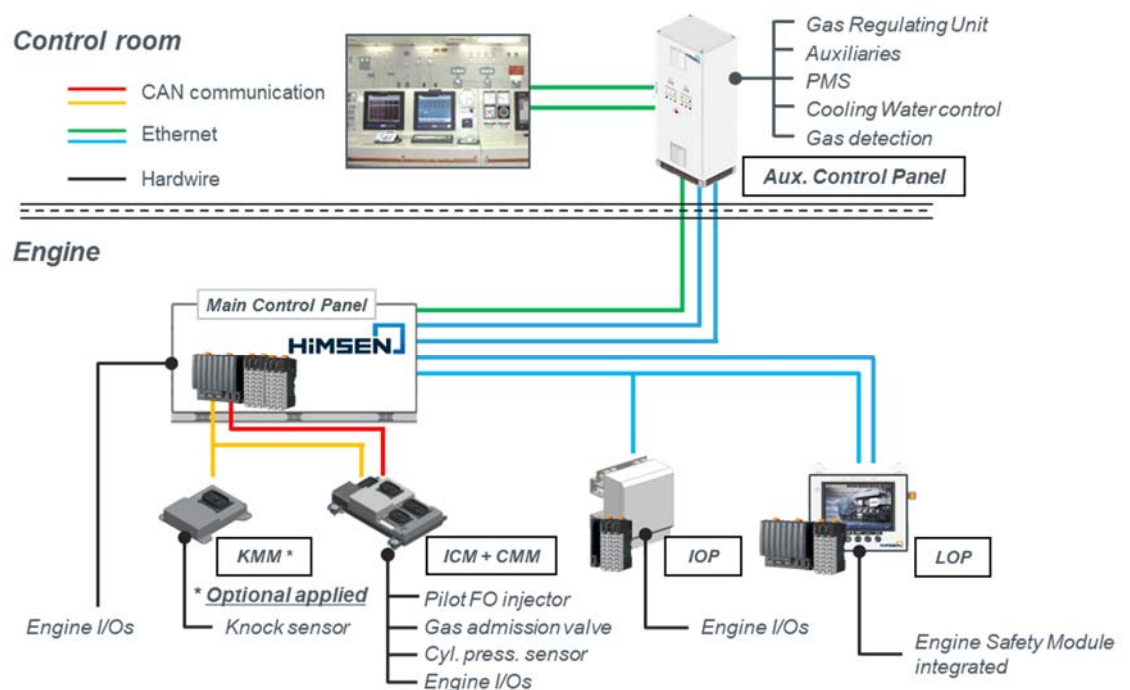


Figure 5.11 HiMSEN DF ECS overview

5.2.2 Hardware description

Main Control Panel (MCP)

MCP is the central control unit of HiMSEN DF ECS which consists of the main processor module for engine control and I/O modules for communication and I/O interfaces. MCP is mounted directly on the engine and interfaced with all other panels and modules of HiMSEN DF ECS and all instruments on engine for control and monitoring.

- ✓ Location : Mounted on engine (1 set per engine)
- ✓ Consist of
 - Main Control & Alarm Module
 - I/O modules and terminals
 - Communication switches
- ✓ Responsible for
 - Main control and monitoring of DF engine
 - Engine safety control
 - Engine control and safety parameter tuning

Injection Control Module (ICM + CMM)

ICM is integrated with Cylinder Monitoring Module (CMM). ICM is mounted on the engine and connected to gas admission valves, pilot fuel injectors, exhaust gas temperature sensor and cylinder pressure sensor on each cylinder. CMM is integrated as stack on ICM and monitors both combustion characteristics and knock intensity of each cylinder and communicates this information with MCP for control and monitoring.

- ✓ Location : Mounted on engine (1 set per engine)
- ✓ Responsible for
 - Driving gas admission valve
 - Driving pilot fuel injector
 - Actuating high pressure pump for pilot fuel oil
 - Measurement and process of engine I/O
- ✓ Transmit data to MCP for control
 - Measurement and process of cylinder pressure signal and transmit data to MCP for control
 - Calculation of combustion characteristics and knock intensity

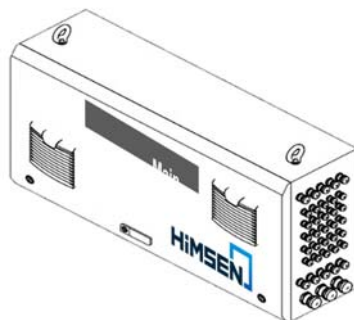


Figure 5.12 Main control panel



Figure 5.13 Injection control module

Knock Monitoring Module (KMM)

When knock sensor is installed, they are connected to KMM (Knock Monitoring Module) and it calculates the knock intensity and send the information to MCP (Main Control Panel) for knock control.

- ✓ Location : Mounted on engine(1 set per engine : Optionally applied)
- ✓ Responsible for
 - Measurement and process of knock signal
 - Calculation of knock intensity
 - Transmission of data to MCP for control

Local Operating Panel (LOP)

LOP (Local Operating Panel) is mounted on engine to offer operators the operation and monitoring environment of the engine. All engine information and status can be monitored via HMI on LOP.

Moreover, Engine Safety Module is installed in LOP which shutdown the engine independently from Main control & Alarm Module.

- ✓ Location : Mounted on engine (1 set per engine)
- ✓ Consist of
 - Touch screen HMI PC
 - Switches and buttons for engine operation
 - Engine Safety Module (ESM)
- ✓ Responsible for
 - Operation through hardwired contacts
 - Display of engine measurement and status
 - Alarm / event display and handling
 - Alarm / event logging
 - Emergency stop button
 - Test of actuators, valves and GRU on engine
 - standstill
 - Independent engine shutdown



Figure 5.14 Knock monitoring module



Figure 5.15 Local operating panel

Input Output Panel (IOP)

IOP (Input Output Panel) is the control unit of HiMSEN DF ECS which consists of Input, Output processor module for engine control and modules for communication and I/O interfaces. IOP is mounted directly on the engine and interfaced with all other panel and module of HiMSEN DF ECS and instruments on engine for control and monitoring.

- ✓ Location : Mounted on engine (1 set per engine)
- ✓ Responsible for
 - Measurement and process of engine I/O
 - Transmit data to MCP for control

Auxiliary Control Panel (ACP)

ACP (Auxiliary Control Panel) is normally installed in ECR (Engine control room) as self-standing cabinet.

ACP is in charge of not only GRU and cooling water control but also interface with VCS, MSB and PMS via communication and hard-wire.

- ✓ Location : Standalone separated from engine (1 set per engine)
- ✓ Consist of
 - Remote Control Module
 - Buttons and lamps for status indication
- ✓ Responsible for
 - Control of GRU and cooling water valve
 - Engine status indication via lamp
 - Emergency stop button
 - Interface with MSB, PMS and VCS

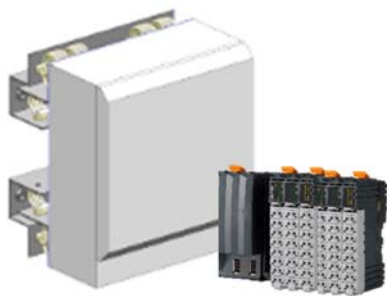


Figure 5.16 Input output panel



Figure 5.17 Auxiliary control panel

5.2.3 Local and remote operation of engine

Engine operation at local (Engine)

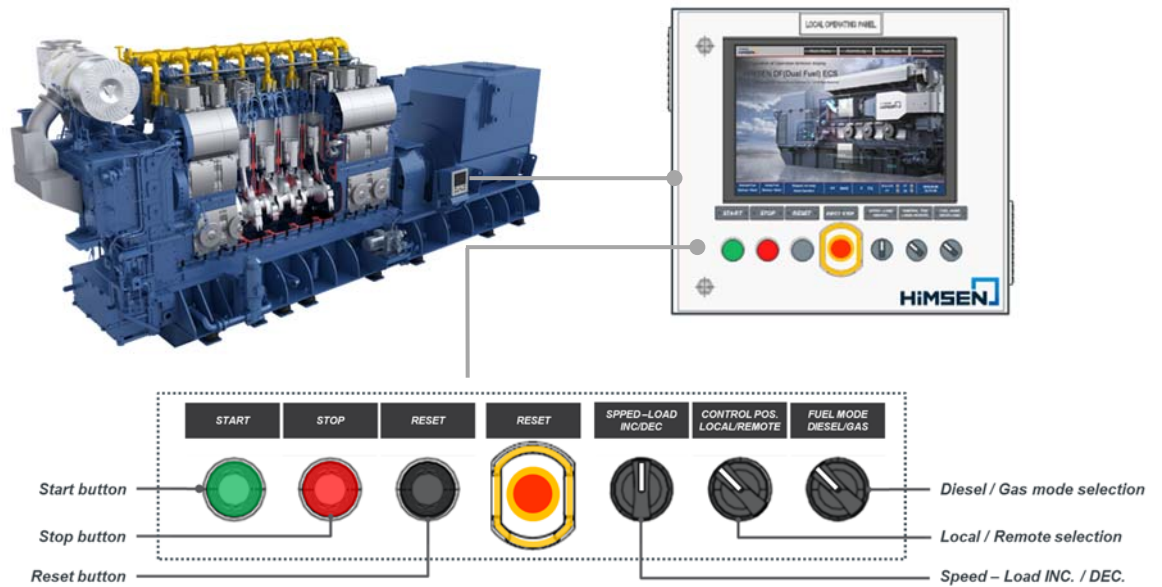


Figure 5.18 Engine operation at local

Engine operation at Remote (VCS or PMS / MSB)

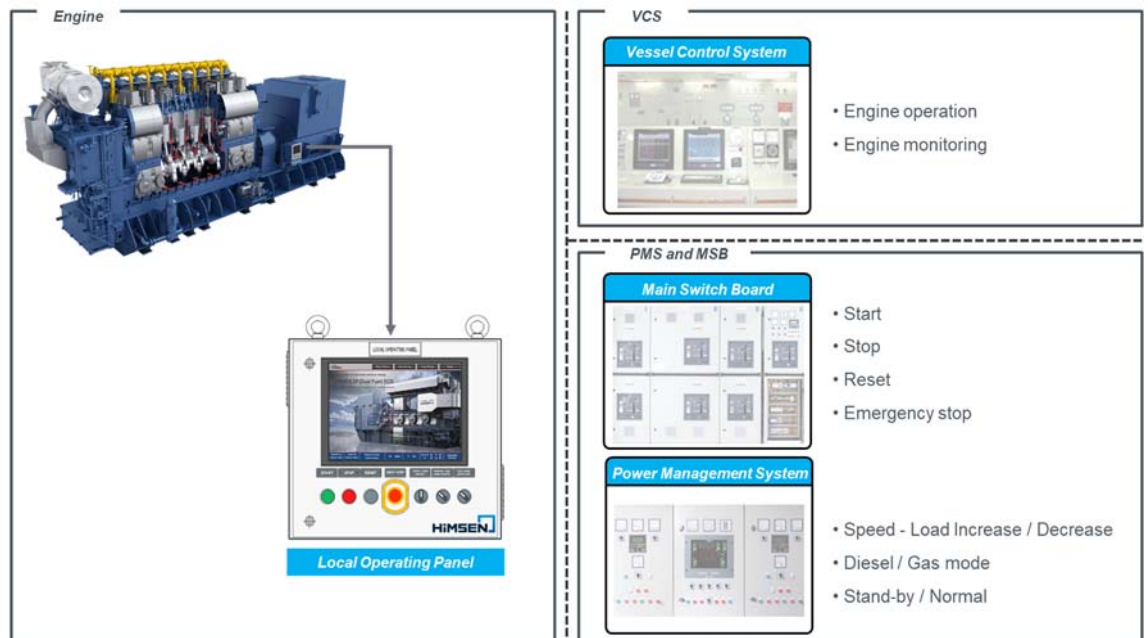


Figure 5.19 Engine operation at remote (VCS or PMS / MSB)

5.2.4 Functional description

Speed control

At gas fuel mode, ECS regulate the duration of gas admission valve for speed and power control. At diesel fuel mode, ECS regulate the diesel actuator to adjust the amount of fuel to main fuel injector.

Air Fuel ratio control

AFR is controlled by adjusting the opening ratio of wastegate. The wastegate control the amount of bypassed gas of exhaust gas to turbocharger.

The operating point shall be defined by charged air pressure at each load point.

Pilot fuel injection control

In HiMSEN DF engine, pilot injection is ignition source of combustion. Pilot fuel injection system is common rail electronic fuel injection system. ECS should control pilot fuel injection timing and duration of electronic pilot fuel injector and pilot fuel injection pressure of HP pump.

Fuel gas pressure and valve control

HiMSEN DF ECS manages the control of gas pressure regulating, the sequential gas valve operation and the operation of gas admission valve.

Knocking and cylinder balancing control

Cylinder combustion pressure and knock monitoring function is integrated in HiMSEN DF ECS. This control function guarantees sophisticated anti-knocking control and cylinder combustion balancing control.

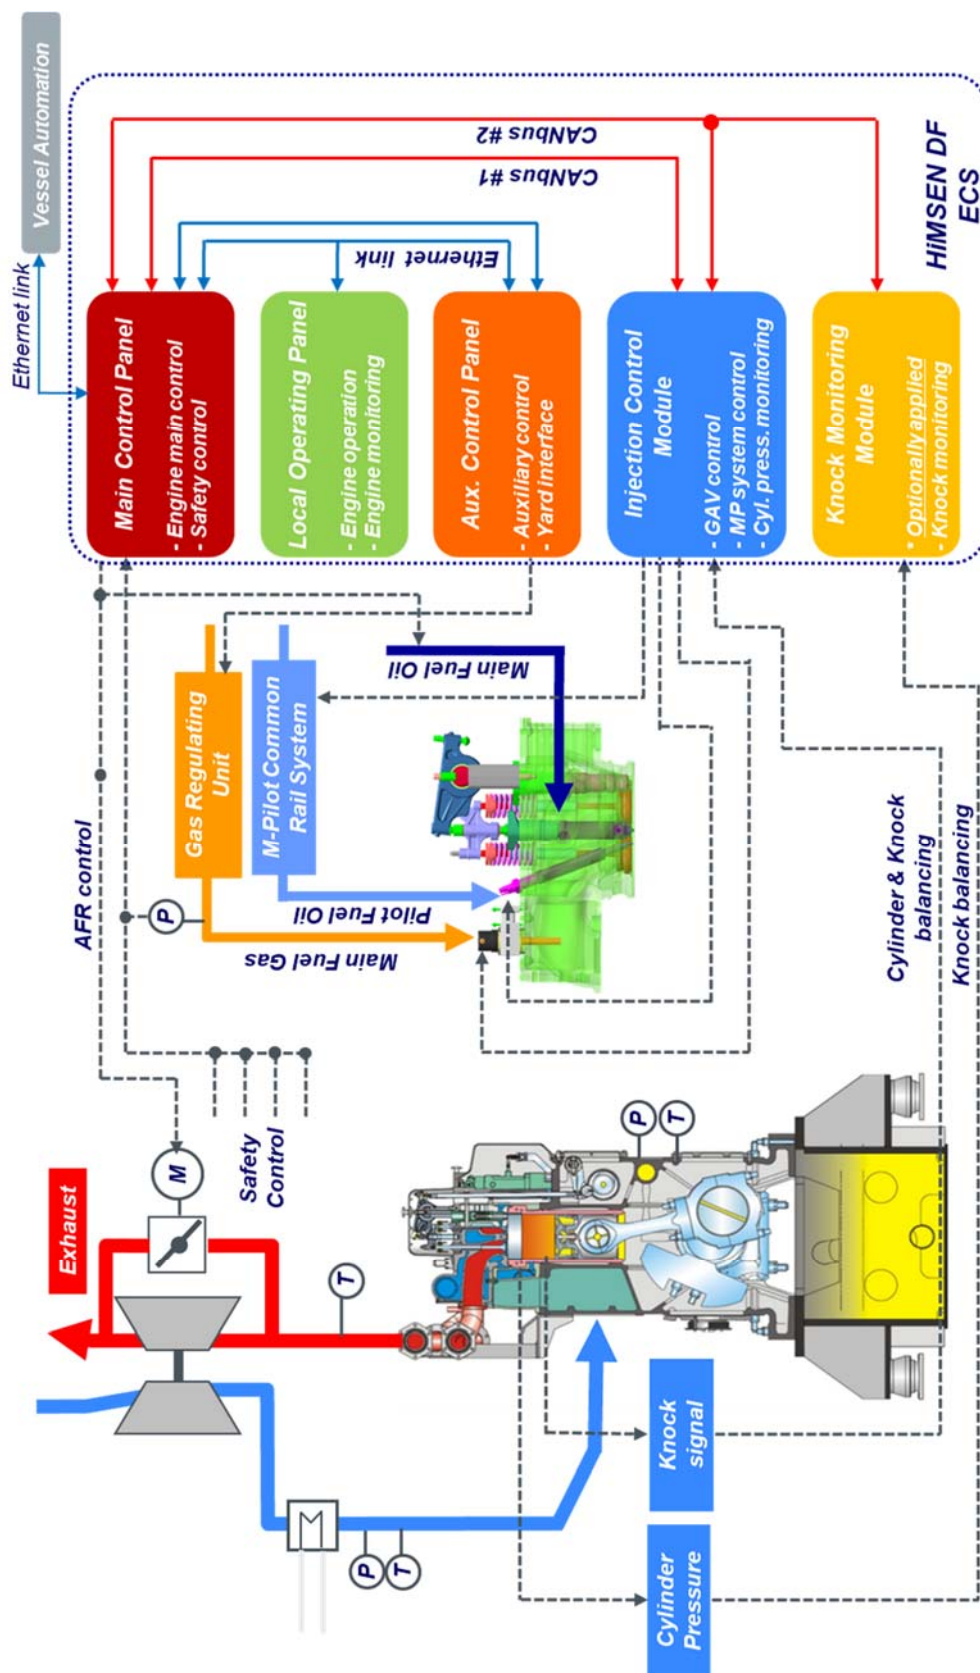


Figure 5.20 Overview of HIMSEN DF engine control function

5.3 Outline of engine automation

5.3.1 General

HiMSEN DF ECS is closely interfaced with external system and provide full capability for optimum operation at different fuel mode.

The external system should also recognize the current fuel mode and take a proper action based on fuel mode.

Refer to Fig. 5.21 for system schematic of the external interface.

This information is only for reference with single engine diagram.

The external interface can be different and depending on the project.

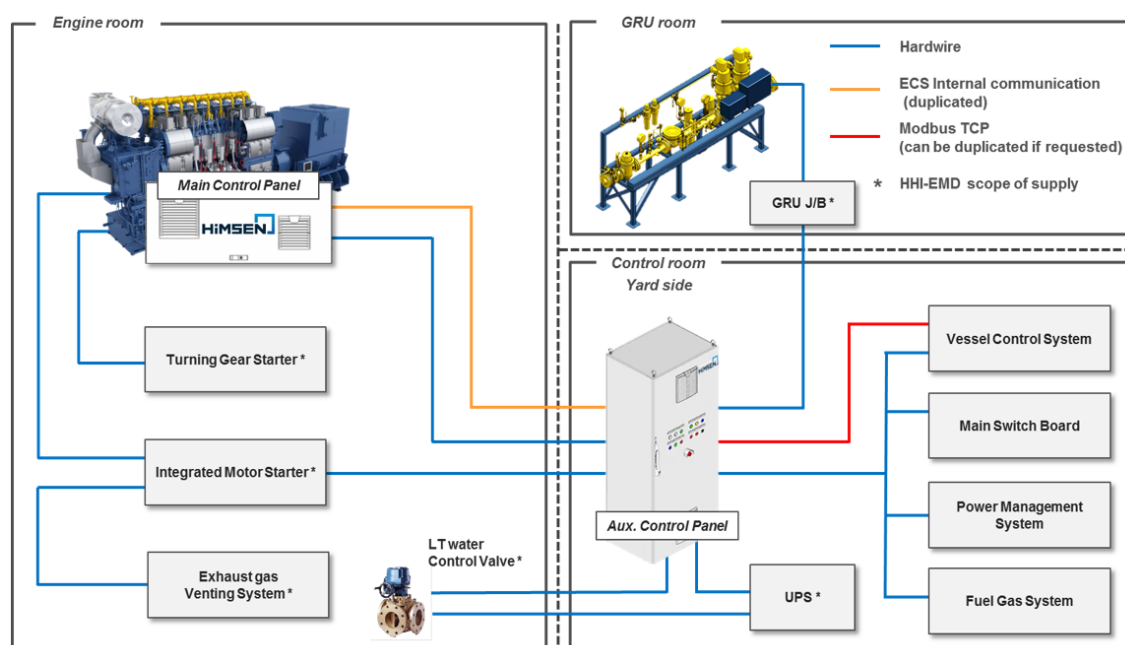


Figure 5.21 HiMSEN DF ECS external interface (system schematic)

5.3.2 Communication interface

HiMSEN DF ECS provides all information including status of engine, monitored value and operation condition through ether net (mod bus TCP) to external system.

The external system is mod bus master and HiMSEN DF ECS is always mod bus slave.

Refer to Fig. 5.22 for concept of system bus.

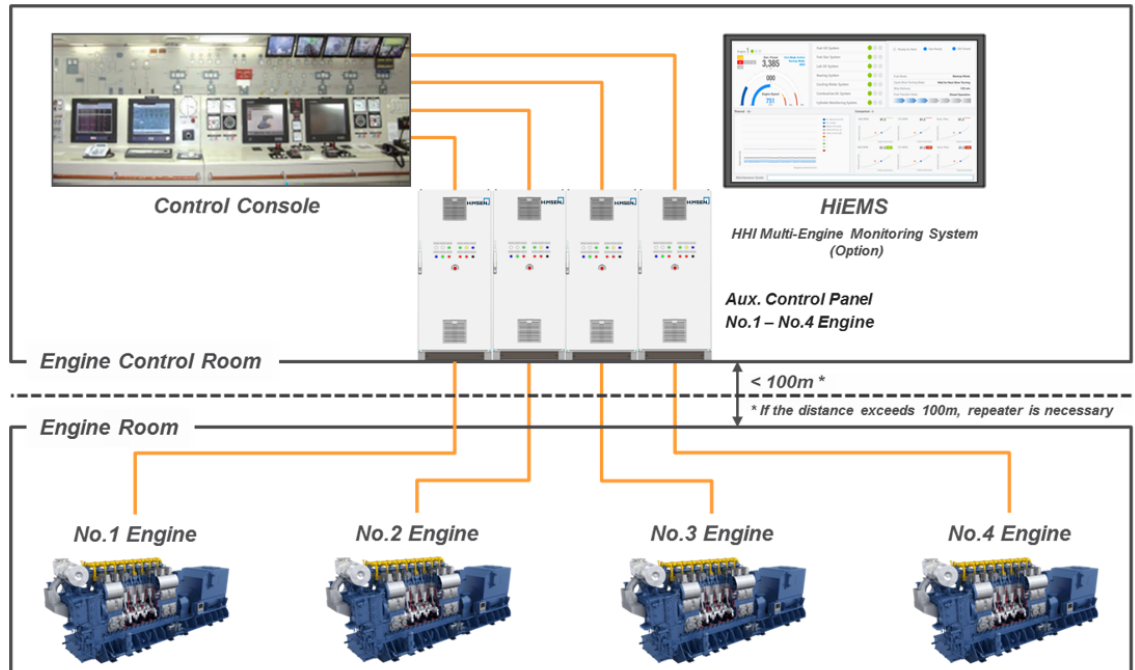


Figure 5.22 HiMSEN DF ECS communication interface

5.3.3 Power distribution

Redundant powers are supplied to HiMSEN DF ECS and provide high availability to operate the engine against single power failure.

Moreover, the power for ESM can be supplied independently to satisfy the requirement for specific applications.

Redundant 220 VAC power should be supplied to Uninterrupted Power Supply (UPS).

UPS converts 24 VDC power for control and the battery for 30 min. of engine running at backup mode is installed inside.

Refer to Fig. 5.23 for the concept of power distribution to ECS and specification of UPS.

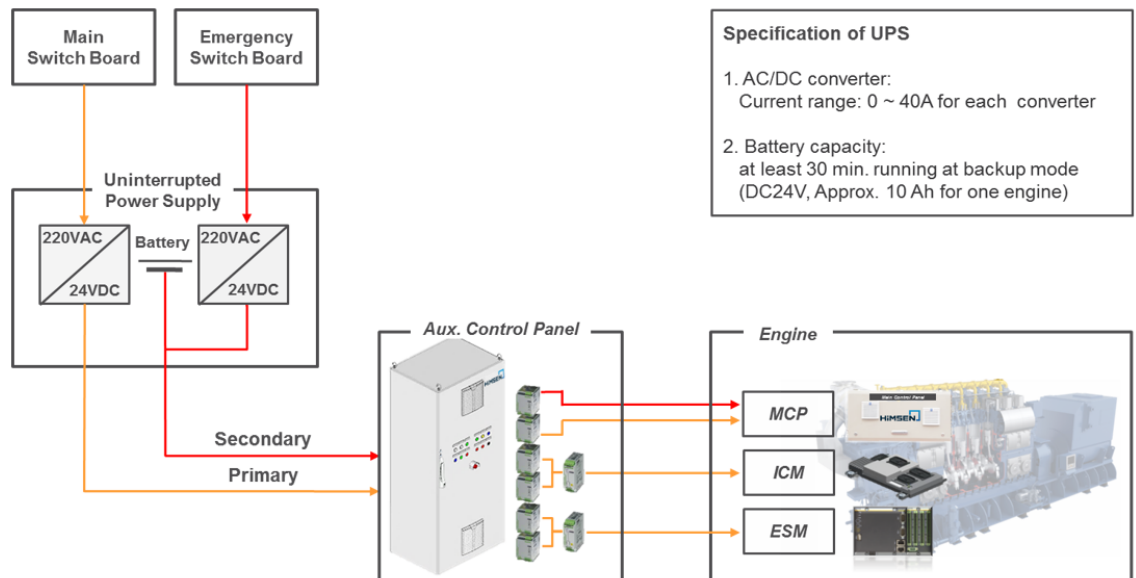


Figure 5.23 HiMSEN DF ECS power distribution

5.4 Operation data and alarm points

Operation data of the engine is listed below.

Some data may be subject to change and shall be informed separately for specific project.

Table 5.1 Operation data of the engine

	Descriptions	Normal operation range at rated power		Alarm and sensor		Auto stop of engine	
Speed control	Engine speed	SE11	900 rpm	AL High	110 %	SD High	115 %
			1000 rpm				
	Engine speed and position	SE12	900 rpm				
			1000 rpm				
	TC speed	SE14		AL High	(A)		
Fuel oil system	Fuel oil filter differential pressure	PT51-52		AL High	1.5 bar		
	Fuel oil pressure engine inlet	PT52					
	For continuous HFO operation	(MDO / MGO)	4.0 ~ 6.0 bar	AL Low	4 bar		
		(HFO)	7.0 ~ 10.0 bar	AL Low	6 bar		
	For continuous MDO operation	(MDO / MGO)	7.0 ~ 8.0 bar	AL Low	6 bar		
	Fuel oil temperature engine inlet	TE52					
		(MDO / MGO)	30 ~ 45 °C	AL High	50 °C		
		(HFO)	110 ~ 140 °C	AL High	155 °C		
	Pilot fuel oil filter differential pressure	PT30-31		AL High	1.5 bar		
	Pilot fuel oil pressure HP pump inlet	PT31	5 ± 1 bar	PT Low	3 bar		
				PT High	7 bar		
	Pilot fuel pressure engine inlet	PT32	800 ~ 1000bar	PT Low	750 bar		
				PT High	1300 bar		
				PT High	200 bar from ref.		
	Pilot fuel oil temperature HP pump inlet	TE31	30 ~ 45 °C	AL High	50 °C		
	Clean fuel oil leakage tank level	LS54		AL High	High level		

	Descriptions	Normal operation range at rated power		Alarm and sensor		Auto stop of engine	
Fuel gas system	Main gas pressure engine inlet	PT87	depends on load	AL High	0.5 bar from ref		
				GT High	1.0 bar from ref.		
	Gas supply pressure filter outlet	PT81	1.0 ~ 6.0 bar	GT High	9.0 bar		
				AL Low	1.8 bar from C.A		
				GT Low	1.5 bar from C.A		
	Gas filter differential pressure	PT80-81		AL High	0.5 bar		
	Gas supply temperature filter inlet	TE80	10 ~ 35 °C	AL Low	5 °C		
				GT Low	0 °C		
				AL High	65 °C		
				GT High	70 °C		
	Control air pressure gas regulating unit	PT83	5 ~ 10 bar	GT Low	4 bar		
	Inert gas pressure	PT89	6.5 ~ 8 bar	AL Low	3.5 bar		
Lubricating oil system	Lubricating oil filter differential pressure	PT61-62		AL High	1.5 bar		
	Lubricating oil pressure engine inlet	PT62	4.0 ~ 5.0 bar	AL Low	3.3 bar	SD Low	3 bar
				LR Low	(Option)		
	Lubricating oil temperature engine inlet	TE62	60 ~ 70 °C	AL High	80 °C		
	Lubricating oil pressure TC inlet	PT63	(A)	AL Low	(A)		
	Lubricating oil temperature TC outlet	TE64	(A)	AL High	(A)		
	Lubricating oil pressure HP pump inlet	PT66*)	4.0 ~ 5.0 bar	AL Low	3.0 bar		
				PT Low	2.7 bar		
	Lubricating oil sump tank level	LS68		AL High	High level		
				AL Low	Low level		
Cooling Water System	High temperature water pressure engine inlet	PT75	2.0 ~ 5.0 bar	AL Low	mapped (B)		
				LR Low	(Option)		
	High temperature water temperature engine inlet	TE75	70 ~ 80 °C	AL Low	50 °C		
	High temperature water temperature engine outlet	TE76	75 ~ 85 °C	AL High	92 °C	SD High	95 °C
	Low temperature water pressure air cooler inlet	PT71	2.0 ~ 5.0 bar	AL Low	mapped (B)		
	Low temperature water temperature air cooler inlet	TE71	30 ~ 40 °C	AL High	55 °C		

	Descriptions	Normal operation range at rated power		Alarm and sensor		Auto stop of engine
Combustion gas / air system	Exhaust gas temperature cylinder outlet	TE25	350 ~ 580 °C	AL High	610 °C	
				GT High	615 °C	
				LR High	620 °C	
				GT High	mapped ± (C)	
				LR High	100 °C ± (C)	
	Exhaust gas temperature T/C inlet	TE26	480 ~ 590 °C	AL High	620 °C	
				LR High	640 °C	
	Exhaust gas temperature TC outlet	TE27	250 ~ 500 °C	AL High	500 °C	
	Intake air temperature. before TC compressor	TE29		AL High	50 °C	
	Charge air pressure air cooler outlet	PT21	Depends on load			
	(At gas mode)			GT High	5.0 barA	
	(At diesel mode)			AL High	6.0 barA	
	(At gas mode)			GT High	0.5 bar ± (G)	
	(At diesel mode)			AL High	Dev. ± (G)	
	Charge air temperature air cooler outlet	TE21	43 ~ 50 °C			
	(At gas mode)			AL High	53 °C	
	(At gas mode)			GT High	55 °C	
	(At diesel mode)			AL High	60 °C	
	(At diesel mode)			LR High	(Option)	
Compressed air system	Starting air pressure engine inlet	PT40	30 bar	AL Low	18bar	
	Control air pressure engine inlet	PT41	4.5 ~ 8.0 bar	AL Low	4 bar	
				GT Low	3.5 bar	
	Control air pressure DVT inlet	PT43		AL Low	3 bar (D)	
				LL High	3 bar (D)	

	Descriptions	Normal operation range at rated power		Alarm and sensor		Auto stop of engine	
Cylinder monitoring system	Knock intensity	PT24/LT94★)		AL High	(E) > 6 °CA		
				GT High	(E) > 10 °CA		
	Cylinder combustion pressure	PT24					
	(At gas mode)			AL High	220 bar(F)		
	(At gas mode)			GT High	230 bar(F)		
	(At diesel mode)			AL High	195 bar(F)		
	(At diesel mode)			LR High	205 bar(F)		
Liner and bearing	Main bearing temperature	TE05★)		AL High	95 °C	SD High	100 °C
Miscellaneous system	Oil mist detector	LS92		AL High	High level	SD High	High level
	Crankcase pressure	PT03	1 ~ 4 mbar				
	(At gas mode)			AL High	6 mbar		
	(At gas mode)			GT High	10 mbar		
	(At diesel mode)			AL High	12 mbar		

Table 5.2 Definition of code

Code	Description	Code	Description
AL	Alarm	SB	Start block
GT	Gas trip	PT	Pilot trip
LR	Load reduction	LL	Load limitation
SD	Shutdown	ESD	Emergency stop

- (A). Depending on cylinder No. and T/C maker
(B). Depend on the height of expansion tank
(C). Average exhaust temperature
(D). Depends on DVT on/off condition
(E). Total retardation of ignition timing generated by knocking
(F). When predefined times of last 10 cycle exceed this value
(G). Predefined Charge air pressure at Diesel / Gas mode

★) Can be applied as an option.

Table 5.3 Operation data for each T/C maker

T/C maker	T/C type	T/C lubricating inlet pressure		T/C lubricating outlet temperature	
		Pressure range	Alarm	Pressure temperature	Alarm
		Bar	Bar	°C	°C
KBB	ST - series	2.0 ~ 4.0	1.5	70 ~ 100	120
ABB	TPS - series	2.0 ~ 3.0	1.5	70 ~ 140	160
	A130 ~ A145	2.0 ~ 4.5	1.5	70 ~ 140	160
	A150 ~ A155	2.0 ~ 3.5	1.3	70 ~ 125	145
	TPL - series	1.5 ~ 2.5	1.3	70 ~ 120	140
MHI	MET30SRC	0.6 ~ 1.5	0.6	60 ~ 95	105
	MET37SRC	0.6 ~ 1.5	0.6	60 ~ 95	105
Napier	Na - series	1.5 ~ 2.5	1.3	60 ~ 95	115

1. Note. This value was selected after review by the engine builder based on the turbocharger maker manual.

5.5 Local instrumentations

Table 5.4 The symbol number and measuring range for local instrument

	Description	Symbol No.	Measuring range
Pressure	Fuel oil pressure at engine inlet	PI 52	0 ~ 16 bar
	Gas supply pressure at filter outlet	PI 81	0 ~ 10 bar
	Gas supply pressure at regulator outlet	PI 82	0 ~ 10 bar
	Lubricating oil pressure at engine inlet	PI 62	0 ~ 10 bar
Temperature	Fuel oil temperature at engine inlet	TI 52	0 ~ 200 °C
	Low temperature water temperature at air cooler inlet	TI 71	0 ~ 120 °C
	Low temperature water temperature at air cooler outlet	TI 72	0 ~ 120 °C
	Gas supply temperature	TI 80	0 ~ 50 °C

1. All measurement can be monitored on local operating panel.

5.6 Hyundai intelligent Equipment Management Solution (HiEMS)

Introduction

HiEMS, offers a real-time engine status monitoring, troubleshooting guidance to marine engineers and provides connectivity between engines and on shore monitoring center.

With HiEMS, HiMSEN customers can get our experts of engine and service close to you.

With intuitive UI, engine operators can figure out the root cause of a certain alarm and get the technical advice and troubleshooting guide. When detecting the abnormalities in engine, HiEMS transfers alarm/fault information and sensor data to onshore for the detail analysis.

Also, HiEMS keeps long term data for fleet and engine managements.

Benefits

On Ship

HiEMS provides guidance for the engine operator, maintenance function with engineering based instruction guide and integrated trouble shooting guide, which enables engine operators to run and maintain HiMSEN Engine at optimal condition.

On Shore

Ship managers can manage the fleet of HiMSEN engines with HiEMS, accessible 24*7 through the Digital Innovation (DI) center of HD Hyundai Marine Solution (HMS).

Ship managers can get real-time remote diagnostics, qualified advices and services from our engineers and service experts (On reporting service version).

Main features

On Ship

Real-time status monitoring of the HiMSEN engine

- ✓ Status of the engine, indicator of sub systems, trend and surveillance with FAT.

Analysis tools for engine data

- ✓ Performance, deviation, correlation analysis and statistics.

Maintenance and guidance based on the instruction guide

- ✓ Alarm manager, maintenance manager, wearing parts manager.

On Shore

Status monitoring of the fleet of HiMSEN engines

- ✓ Overall status of alarm and running hour.
- ✓ Long term data management and reporting service.

License policy

Standard version

All main features for “On ship” is available, data of a specific time interval is sent to on shore, such as alarm, statistics and operational data.

Reporting service version

Including “Standard version” features, regular reporting service is available through HD Hyundai Marine Solution (HMS).

Contact HD Hyundai Marine Solution (HMS) for reporting service.

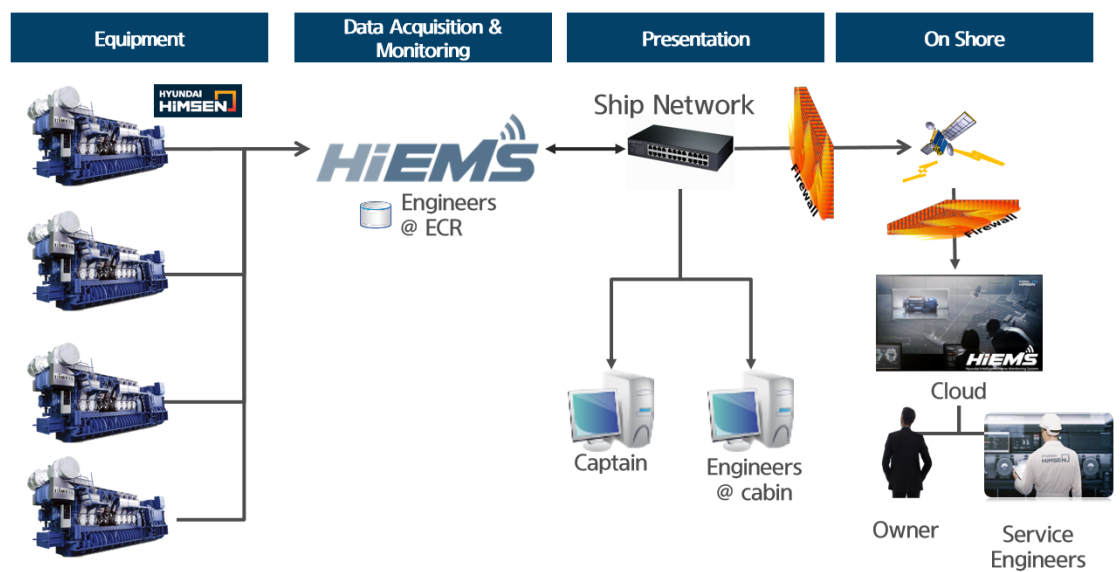


Figure 5.24 HiEMS configuration and network

Key functions

Real-time status monitoring of the HiMSEN engine

- ✓ Indicators of sub systems, running information.
- ✓ Status information by location through P&ID (DF only).

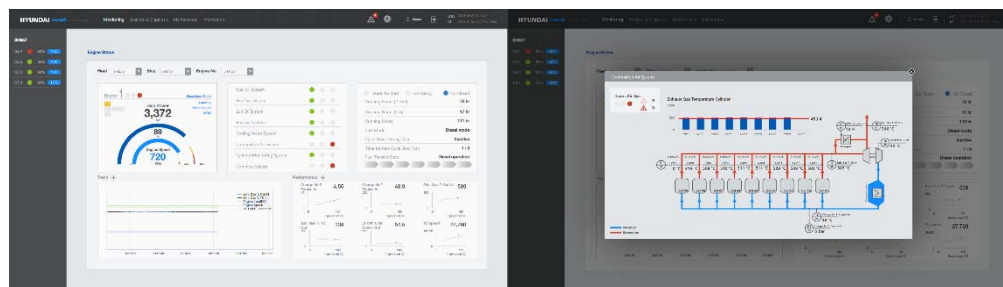


Figure 5.25 display of real-time status monitoring

Maintenance

Maintenance and guidance based on the instruction guide

- ✓ Alarm/Event, maintenance, wearing parts manager.

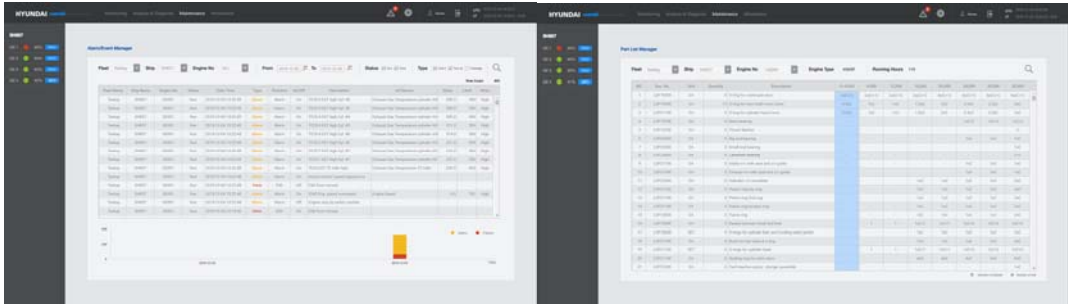


Figure 5.26 Display for the maintenance and guide

Analysis and diagnosis

Analysis tools for engine data

- ✓ Performance, deviation, correlation analysis and statistics.
- ✓ Compare FAT data with current state.

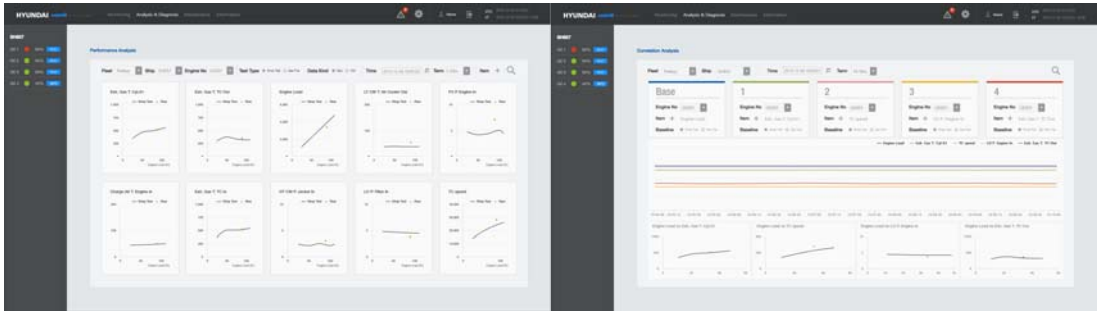


Figure 5.27 Display for the engine analysis

Fleet management (Option)

On shore, status monitoring of the fleet of HiMSEN engines

- ✓ Overall status of alarm, running hour and reporting service.



Figure 5.28 Digital innovation center

6 Fuel system

6.1 Modes of engine operation

Engine operation mode

Dual fuel engine can be operated by using the diesel oil or natural gas as main fuel. The operating mode can be changed without any interruption while engine is running. The fuel mode for the engine can be chosen by operator depending on the condition of vessel or plant. Also if there are any abnormal conditions in gas mode, the engine is automatically transferred to diesel mode without power de-rating. The engine operating modes are as follows :

- ✓ Gas mode : Natural gas + pilot oil
- ✓ Diesel mode : Main fuel oil + pilot oil
- ✓ Backup mode : Main fuel oil

Gas mode

In gas mode, the natural gas as main fuel is injected to the intake ports of each cylinder through the gas admission valve. The fuel gas is ignited by the micro pilot oil which is injected by pilot injector to the main combustion chamber.

The gas admission valve and pilot injector are operated by solenoid and electric controlled. The injection timing, the amounts of the fuel gas and / or pilot oil shall be adjusted at each cylinder by the engine control system.

Diesel mode

In diesel mode, it is same as the conventional diesel engine operation, i.e. heavy fuel oil or marine diesel oil can be used as the main fuel. When the charge air is compressed in the combustion chamber, the liquid oil is injected through the main injector which is controlled mechanically.

The micro pilot oil system is activated same as gas operating mode to keep the injector nozzles clean and ready for gas operating mode.


Backup mode

Backup mode is for the safety operation. When the engine control system, safety system or blackout detection system are activated, the engine is transferred to backup mode.

In backup mode, the engine is operated by just the main fuel (marine diesel oil / marine gas oil) while the micro pilot oil system is not operated. Please refer to the 5.1.2 regarding the operating time of the backup mode.

6.2 Internal fuel oil system

Diagram for Internal fuel oil system

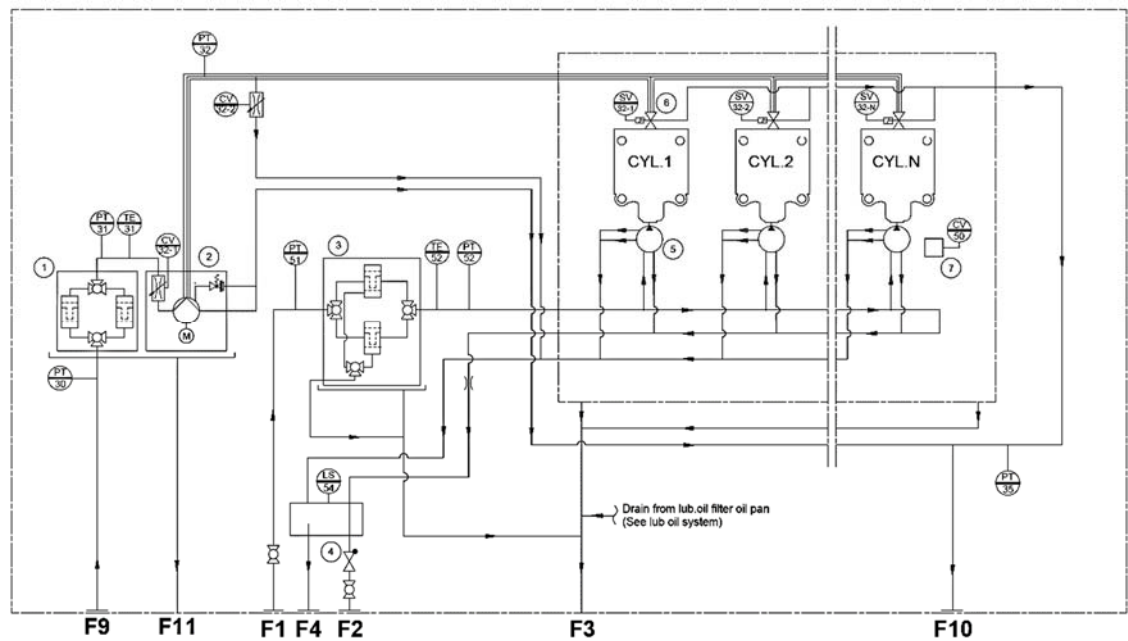

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 6.1 Diagram for Internal fuel oil system [BP0068377-0.0]

Table 6.1 Size of external pipe connections

Code	Description	Size	Remark
F1	Fuel oil inlet	25A	JIS B 2220
F2	Fuel oil outlet	25A	JIS B 2220
F3	Waste oil drain (dirty)	Ø15	JIS B 2220
F4	Leaked fuel oil drain (clean)	15A	JIS B 2220
F9	Pilot fuel oil inlet	15A	JIS B 2220
F10	Pilot fuel oil outlet	15A	JIS B 2220
F11	Leaked pilot fuel oil drain (dirty)	Ø10	JIS B 2220

Table 6.2 System components

No	Description	Remark
1	Pilot oil filter	6µm

No	Description	Remark
2	Pilot fuel pump	
3	Fuel oil filter	50 μ m
4	Clean fuel oil leakage alarm tank	
5	Fuel injection pump	
6	Micro pilot injector	
7	Governor	

6.2.1 General description

Fuel system for the dual fuel engine is designed for a reliable combustion of heavy fuel oil or marine diesel oil as well as the natural gas. Therefore, it is possible to change over the fuel mode between HFO, MDO and natural gas without loss of the rated output.

The micro pilot oil system is designed as ignition source in gas operation. But it is also active in diesel to prevent the clogging of the pilot injector.

Fuel oil system

The fuel injection equipment comprises an injection pump, connection block, injection pipe and injection valve, which are installed on each cylinder. The system is designed for operating the high pressure of the fuel injection with better combustion.

The amount of fuel injection is controlled by the engine control system via the common regulating shaft and spring loaded linkage.

The control system can maintain the engine speed at the preset-value by continuous positioning of the fuel injection pump rack.

The clean fuel oil from each injection pump, high pressure connection block, etc. is drained for their normal operation and collected to the recycling fuel oil leakage alarm tank. The estimated drain amount of recyclable fuel oil is like follows;

- Estimated fuel oil drain amount [liter/hr per a cylinder]
 - For heavy fuel oil : 0.3 (50% tolerance) at 12 cSt
 - For distillate fuel oil : 1.2 (50% tolerance) at 2 cSt

The recycling fuel oil can be led to external tank to be reused and this value is only for reference to design this external system for its recycle. It can be recycled without additional separation process. Recycling fuel oil leakage alarm tank is a modularized box for the external connections, which provides :

- ✓ Connections for fuel oil return pipes 25 A
- ✓ Connection for a recycling drain pipe 15 A
- ✓ Alarm switch and tank for excessive leakage

The dirty leak oil is collected to the common drain pipe led to the sludge tank.

6.2.2 Micro pilot oil system

The micro pilot oil system comprises the pilot fuel pump, duplex filter and micro pilot injector on each cylinder. It is applied with the common rail system which is able to control the injection of the small amount of pilot oil with suitable timing and duration.

At the pilot fuel pump, the pilot oil is pressurized up to 1000 bar and conveyed to each injector via the high pressure pipes which are made of the double walled structure for safety.

The return pilot oil from injectors and the pilot fuel pump is collected to common return pipes and can be recycled. The return flow rate of pilot fuel oil is can be estimated as following formula:

$$Q = 15.4 \times \text{No. of cylinder} + 30 \text{ (Tolerance } \pm 50 \% \text{)}.$$

Q(liter/hour) = clean pilot fuel oil return rate at maximum continuous rating

The leak rate of the micro pilot oil system is normally zero. Any leak from high pressure pipes, it is drained via the intermediate space of double walled pipes or the safety valve of the distribute block and collected to the recycling fuel oil alarm tank for clean oil. The clean leak oil is led to recycling fuel oil drain and can be reused.

For the micro pilot oil system, marine diesel oil (DMB) and marine gas oil (DMA, DMZ) can be used.

6.3 External fuel oil system

Diagram for heavy fuel oil system – Normal operation

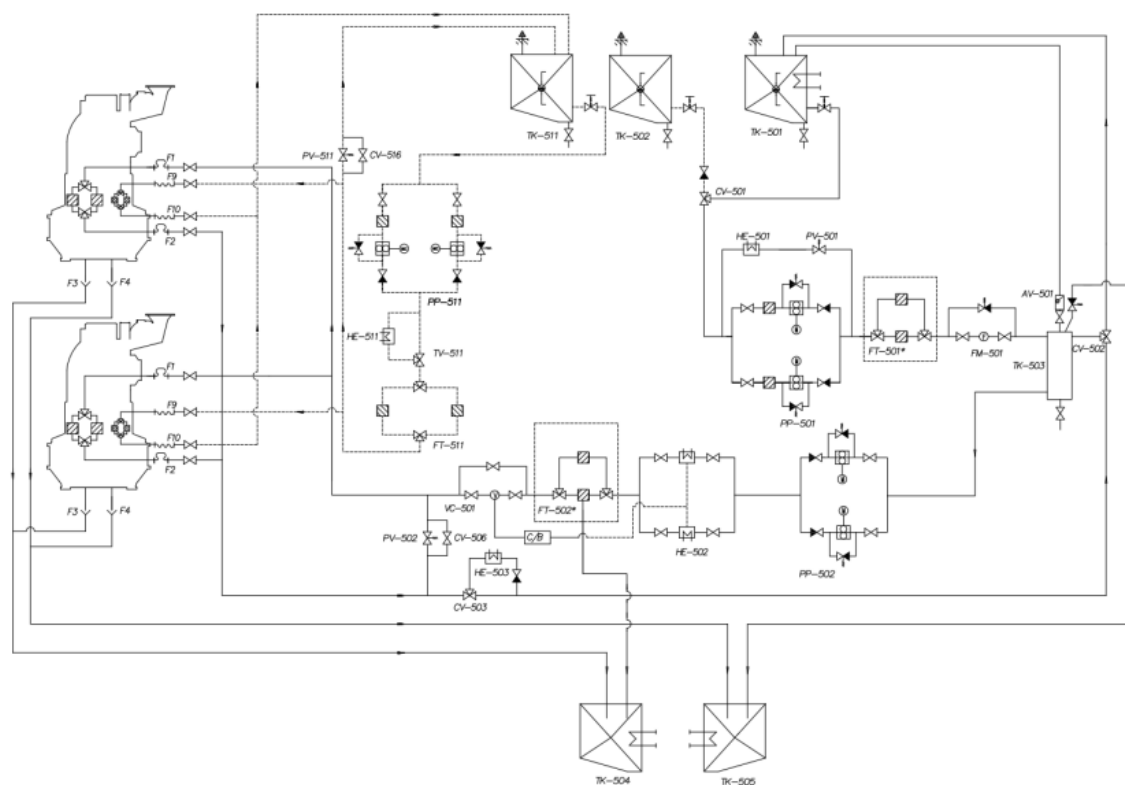


Figure 6.2 Diagram for heavy fuel oil system

Table 6.3 System components

Code	Description	Code	Description
TK-501	Day tank, heavy fuel oil	VC-501	Viscosity controller
TK-502	Day tank, marine diesel oil	AV-501	Auto deaerating valve
TK-503	Mixing tank	PP-501	Supply pump
TK-504	Drain tank for dirty oil	PP-502	Booster pump
TK-505	Drain tank for clean oil	PP-511	Pilot oil supply pump
TK-511	Day tank, pilot oil	CV-501	Changeover valve
FT-501	Main filter	CV-502	Flushing valve
FT-511	Fine filter for pilot oil	CV-503	Changeover valve (marine diesel oil cooler)
FM-501	Flow meter	HE-501	Cooler for supply pump

Code	Description	Code	Description
HE-502	Heater	PV-502	Pressure control valve (8 bar)
HE-503	Marine diesel oil cooler	PV-511	Pressure control valve for pilot oil (6 bar)
HE-511	Pilot oil cooler	CV-506	Overflow valve
TV-511	Thermostatic valve for pilot oil	CV-516	Overflow valve for pilot oil
PV-501	Pressure control valve (4 bar)		

1. In case of continuous marine diesel oil operation, contact to HHI-EMD.
2. Additional day tanks for low sulfur heavy fuel oil and/or marine diesel oil could be required due to IMO MARPOL Annex VI, a special notation of classification societies, a local regulation, or other reasons.
3. This external fuel oil system is only for guidance for generator engines. All external piping design and system arrangement should be designed by shipbuilder in accordance to the classification rules and building specifications.

Diagram for marine diesel oil (marine gas oil) system – Normal operation

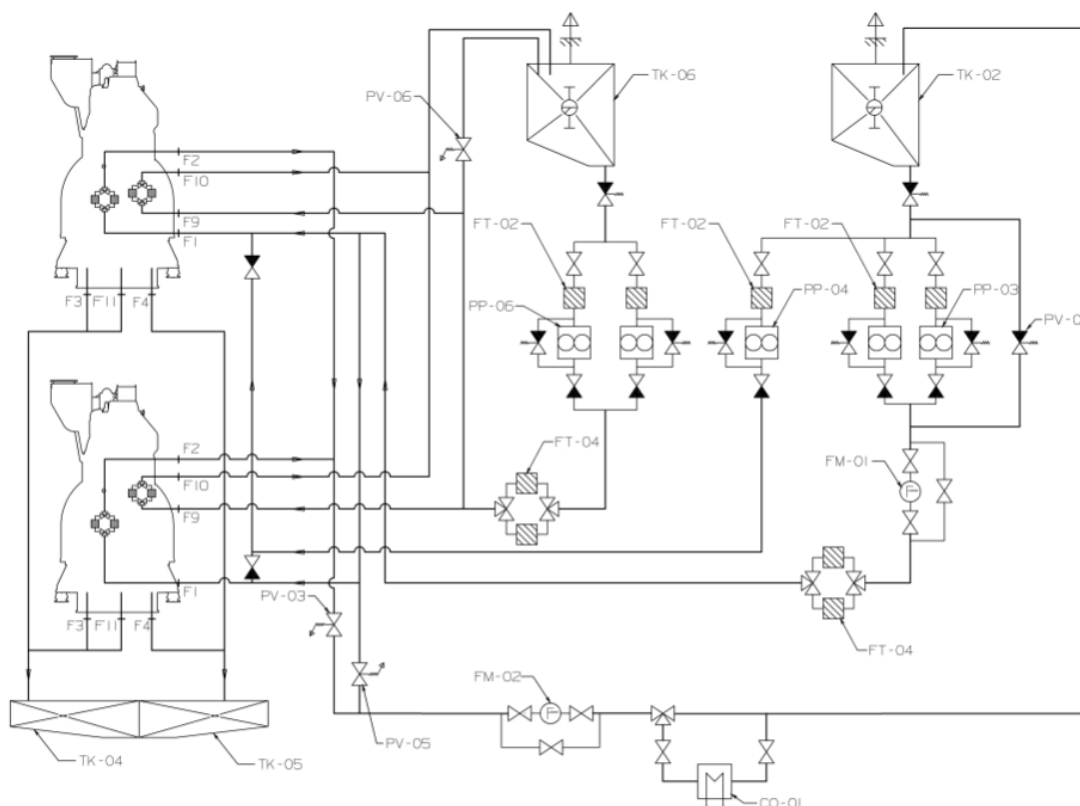


Figure 6.3 Diagram for marine diesel oil(marine gas oil) system [B91-328884-8.1]

Table 6.4 System components

Code	Description	Code	Description
TK-02	Day tank, marine diesel oil	CO-01	Marine diesel oil cooler
TK-04	Drain tank for dirty oil	PV-01	Pressure control valve (Main fuel)
TK-05	Drain tank for clean oil	PP-03	Marine diesel oil supply pump (8 bar)
TK-06	Day tank, pilot oil	PP-04	Emergency marine diesel oil pump (6 bar)
FM-01	Flow meter	PP-06	Pilot fuel oil pump (6 bar)
FT-02	Suction strainer, marine diesel oil, pilot oil	PV-03	Marine diesel oil outlet pressure control valve (2 bar)
FM-02	Flow meter	PV-05	Pressure control valve (8 bar)
FT-04	Duplex filter	PV-06	Pressure control valve (Pilot fuel)

1. In case of continuous marine diesel oil operation, contact to HHI-EMD.
2. Additional day tanks for low sulfur heavy fuel oil and / or marine diesel oil could be required due to IMO MARPOL Annex VI, a special notation of classification societies, a local regulation, or other reasons.
3. This external fuel oil system is only for guidance for generator engines. All external piping design and system arrangement should be designed by shipbuilder in accordance to the classification rules and building specifications.

6.3.1 General requirements

The external fuel system for the auxiliary engines can be a common system with other engines or an independent system depending on the shipbuilder's choice. In any cases, the condition of fuel oil, especially heavy fuel oil, is critical for the reliable operation of the engine. The most important conditions and requirements of the external fuel oil system are described as follows :

Well cleaned fuel

Solid particles and water in the fuel cause over wearing and frequent maintenance for the engine itself as well as external fuel system. Therefore, the proper and reliable separation equipment should be included in the external fuel oil system not only for heavy fuel oil but also for distillate fuel.

Proper viscosity, temperature, pressure

The appropriate viscosity, temperature and pressure are necessary. Therefore, preheating, insulation with heat tracing, and pressurizing equipment should be included in the external fuel oil system. Especially if the fuel is at low viscosity, fuel temperature should be controlled to meet the required viscosity by fuel cooling device such as cooler unit.

In order to prevent excessive pressure losses and also to minimize possible pressure pulses in the piping system, the fuel oil velocity should not exceed :

- ✓ Marine diesel oil suction pipe : 0.5 ~ 1.0 m/s
- ✓ Marine diesel oil pressure pipe : 1.5 ~ 2.0 m/s
- ✓ Heavy fuel oil suction pipe : 0.3 ~ 0.8 m/s
- ✓ Heavy fuel oil pressure pipe : 0.5 ~ 1.2 m/s

Marine diesel fuel oil

Diesel fuel oil system is necessary to back up (especially for emergency situations) and, it is also used for flushing before engine stop for long period standstill and in the event of major overhaul.

External fuel oil system

Normally comprises the fuel treatment system and fuel feed system. General requirements described on next section and more detailed information can be provided if needed for specific vessel or plant.

Fuel oil treatment system

The fuel treatment system should be designed for proper cleaning of heavy fuel oil considering total fuel consumption of the vessel. Centrifugal separators should be an automatic type with the same additional stand-by unit. The separator should be capable of purifying the worst grade of the fuel oil. Normally, the fuel oil grade of H380 to H700 requires the capability of up to 1010 kg/m³.

For distillate fuel, an independent purifier system is required.

It is necessary to ensure a proper cleaning of heavy fuel oil as follows :

- ✓ Selection and operation of fuel oil centrifuge according to supplier's recommendation
- ✓ Correct heavy fuel oil temperature at inlet to centrifuge
(The centrifuge should be always operated with an inlet temperature of 98 °C for heavy fuel oil)
- ✓ Correct throughput of fuel oil through centrifuge

$$Q = \frac{P \times b \times 24(h)}{p \times t}$$

P = maximum continuous output of the engine(s) [kW]

b = specific fuel consumption + safety margin (15 %) [g/kWh]

p = density of the fuel [kg/m³]

t = daily separating time(h) (usually = 23 h or 23.5 h)

- ✓ Proper density of heavy fuel oil in conformance with centrifuge specification
- ✓ Proper maintenance of centrifuge

The centrifuges should be operated in parallel, unless the centrifuge installation comprises manually operated centrifuges, with the purifier followed by the clarifier. To achieve the maximum separation efficiency, it is recommended to always use all available heavy fuel oil centrifuges whenever possible, and to operate them in parallel with an adjusted feed rate lowering the throughput in the centrifuges. This will ensure the longest possible retention time in the centrifuges and optimal efficiency for removal of catalytic fines.

It is important that maintenance and operation of the centrifuge is done according to the recommendations of the manufacturer.

The required capacity of the daily (service) tank and the settling tank for heavy fuel oil is minimum 24 operating hours feed for continuous full load operation. Each tank should be heated to have stable temperature between 50 ~ 70 °C. Each tank should be equipped with effective sludge and water drain system.

6.3.2 Fuel feed system

The fuel feed system can be common with other engines. The one of the most important is the proper control of the fuel viscosity. So the fuel feed system should have appropriated heating equipment and insulation accordingly. In addition, the fuel oil should be pressurized to avoid the gas separation due to high temperature.

Day tank for heavy fuel oil and marine diesel oil

The heavy fuel day tank should be filled with cleaned fuel by continuous fuel separation.

- ✓ Tank capacity : minimum 8 operating hours feed for full load operation.
- ✓ Tank heating : approx. 90 °C for HFO, 20 ~ 40 °C for MDO, as stable as possible.
- ✓ Sludge / water space and drain provided.

Heavy fuel oil / marine diesel oil changeover valve

The heavy fuel oil / marine diesel oil changeover valves should be installed before the supply pump and the cooler for fuel oil outlet respectively. The valve can be a manual type or an electro-pneumatic remote control type for the flexible fuel mode selection at any load conditions.

Suction strainer

To protect the supply pump, a suction strainer with a fineness of approx. 0.5 mm with magnet should be installed on the pump suction side.

Supply pump

- ✓ Capacity : min. 1.5 x total fuel consumption at maximum continuous rating + back flushing quantity
- ✓ Pump head : 4 bar (HFO)
- ✓ Operating temperature : 100 °C
- ✓ Viscosity (for electric motor) : 1000 cSt

Flow meter

If a measuring device for fuel oil consumption is required, it has to be fitted between the supply pump and the mixing tank.

A by-pass line has to be installed in parallel with the flow meter to ensure the fuel oil supply free from possible clogging.

Mixing tank

The major purpose of mixing tank is to ensure the ventilation of the gas from the hot fuel oil and a gradual temperature balance by mixing the hot returned oil from the engine with the oil from the day tank.

The volume of mixing is tank is required not less than 100 liters.

Pressure control valve

The pressure control valves maintain constant system pressure. The surplus oil return to the supply pump suction side or to the fuel oil return line.

Booster pump

Since the heated fuel oil has to be continuously recirculated, the booster pump should ensure the fuel circulation with the required pressure in the system.

- ✓ Capacity : min. 4.0 x total fuel consumption at maximum continuous rating + back flushing quantity
- ✓ Pump head : 8 bar at fuel oil inlet, F1
- ✓ Operating temperature : 150 °C
- ✓ Viscosity (for electric motor) : 500 cSt

Heater and viscosity controller

In order to ensure the correct injection viscosity at 12 ~ 18 cSt (HFO), the dual heaters are controlled by the viscosity controller.

Each heater should have sufficient capacity for heating the fuel oil for all engines at full load, one heater can therefore be overhauled while the other one is in service.

Auto back flushing filter

In the circulating lines, absolute 10 µm automatic back-flushing filter must be installed before the branch pipe for each engine to ensure the cleanness of the fuel oil. If the cleaning cycles of the automatic back-flushing filter are increased, the fuel oil treatment system must be optimized in order to protect the engine. If a stand-by filter is equipped, the absolute 25 µm is required. The location of installing filter is acceptable in the supply lines.

Drain tank for dirty oil

The dirty leak oil from the engine is drained by gravity and collected to the drain tank for dirty oil, where heating coils are required. The drain tank should be transferred to the sludge tank.

Drain tank for clean oil

The clean leak oil from the engine is drained by gravity and collected to the drain tank for clean oil, in where heating coils are required. It can be pumped to the day tank and reused to the engine without additional separation process.

Marine diesel oil cooling system

The marine diesel oil cooler or alternative should be applied on the fuel oil return line of engines in order to maintain suitable viscosity of marine diesel oil in continuous marine diesel oil operation.

When changeover from heavy fuel oil to marine diesel oil, the fuel oil return passes through the marine diesel oil cooler or alternative by changeover valve operation.

Emergency start

In emergency situation such as black out, marine diesel oil must be supplied to start up stand-by engines with a sufficient fuel oil pressure, which can be supplied by emergency booster pump or a gravity tank which is located minimum 8 m above the engine.

6.3.3 Pilot fuel oil supply system

Pilot fuel oil is supplied from marine diesel oil / marine gas oil day tank via the feed pump and filter, which system can be common with other engines. The pilot fuel oil supply pressure should be constant and heavy fuel oil is not allowed to enter the pilot oil system.

The pilot oil return from the engine can be led to marine diesel oil / marine gas oil day tank directly.

The back pressure in the return line is allowed maximum 2.0 bar to ensure function and reliability of the pilot oil system on the engine.

Suction strainer

To protect the pilot fuel oil supply pump, a suction strainer with a fineness of approx. 0.5 mm with magnet should be installed on the pump suction side.

Pilot fuel oil supply pump

- ✓ Capacity : min. 0.3 m³ / hour
- ✓ Pump head : 5 ± 1 bar at pilot oil inlet, F9
- ✓ Operating temperature : 40 °C
- ✓ Viscosity (For electric motor) : 1.8 ~ 11 cSt

Fine filter

We recommend the installation of the fine filter before the engine on the pilot oil supply system, which is a duplex type with filtration of 34 µm absolute and equipped with differential pressure indicator. The filter should be placed as close to the engine as possible.

Pressure control valve

The pressure control valve is required for the constant supply pressure at the pilot fuel oil supply line with bypassing to the marine diesel oil / marine gas oil day tank.

The pressure control valve should be controlled to set the target pressure 5 bar of pilot oil to engine.

The bypassing pilot oil after pressure control valve (PV-06) should not be connected to the returned pilot line.

6.3.4 Pilot fuel oil cooling system

If the viscosity of marine diesel oil / marine gas oil in day tanks drops under the minimum value of recommended viscosity ranges for pilot fuel oil system, it is required to install a pilot fuel oil cooler on the engine supply line for reliable viscosity of fuel oil.

The pilot fuel oil cooling system should maintain the temperature of marine diesel oil low than 50 °C at engine inlet. For very light sulfur fuel oil, the temperature should be adjusted in accordance to the fuel oil specification.

The cooler should be installed at the return line after the engine(s) and composed with the by-pass pipe and manual valve to ensure fuel oil circulation while the cooler is overhauled. The minimum required capacity of pilot fuel oil cooler can be estimated as following formula:

$$P=Q \times \rho \times c \times dT$$

P (kcal/h) = required capacity of the cooler

Q (m³/h) = maximum delivery quantity of fuel oil
(Equal to the flow capacity of pilot fuel oil supply pump)

ρ (kg/m³) = fuel oil density at 15 °C (Typical value: 900 kg/m³)

c (kcal/kg°C) = specific heat of fuel oil (Typical value: 0.478 kcal/kg°C)

dT (°C) = temperature difference between the fuel oil of marine diesel oil /marine gas oil day tank and the cooler outlet

1. The cooler outlet temperature should be obtained in order to meet the minimum value of the recommended viscosity range for pilot fuel oil system.
2. These parameters suggested typically are only for reference. When dimensioning pilot fuel oil cooler capacity, the parameters must be taken into account based on actual fuel oil properties.

6.4 Fuel oil specification

The fuel oil specifications are based on ISO 8217 : 2017. The fuel is largely classified into two categories as distillate fuel and residual fuel. Distillate fuels are categorized into DMX, DMA, DFA, DMZ, DFZ, DMB, and DFB. Residual fuels are categorized into RMA 10, RMB 30, RMD 80, RME 180, RMG 180 to 700, RMK 380 to 700. The usage of DMX is restricted by SOLAS requirement due to its low flash point.

The terminologies of marine fuel oil to be called after 1st January 2020 have been determined as below Table 6.5. In accordance with the most relevant characteristics.

HiMSEN is able to operate with all fuels specified in the below table. The simplified terminologies listed in Table 6.5 allows easy determination if the fuel can be applicable for HiMSEN.

Table 6.5 Designation of fuel grades

Fuel grade		Sulfur content (%)	Typical viscosity (cSt) (at 50 °C for residual fuels and 40 °C for distillate fuels)		ISO 8217 : 2017
			Minimum	Maximum	
HFO (Heavy fuel oil)	HSFO (High sulfur fuel oil)	1.0 < S ≤ 3.5 (or even higher)	10	700	Residual marine fuels (RMB, RMD, RME, RMG, RMK)
	LSFO (Low sulfur fuel oil)	0.5 < S ≤ 1.0			
	VLSFO (Very low sulfur fuel oil)	0.1 < S ≤ 0.5	2 ~ 380 (Not decided yet)		Not defined
	ULSFO (Ultra low sulfur fuel oil)	S ≤ 0.1	9 ~ 67 (Not decided yet)		
MGO (Marine gas oil)		S ≤ 1.0	2	6	Distilled marine fuels (DMA, DFA, DMZ, DFZ)
MDO (Marine diesel oil)		S ≤ 1.5	2	11	Distillate marine fuels (DMB, DFB) Residual marine fuels (RMA 10)

Table 6.6 Specifications of distillate fuel

Characteristics	Unit	Limit	Category ISO-F-							Test method reference
			DMX	DMA	DFA	DMZ	DFZ	DMB	DFB	
Kinematic viscosity at 40 °C	mm ² /s ^{a)}	max.	5.5	6.0		6.0		11.0		ISO 3104
		min.	1.4	2.0		3.0		2.0		
Density at 15 °C	Kg/m ³	min.	-	890.0		890.0		900.0		ISO 3675 or ISO 12185
Cetane index	-	min.	45	40		40		35		ISO 4264
Sulfur ^{b)}	wt %	max.	1.0	1.0		1.0		1.5		ISO 8754 ISO 14596 ASTM D4294
Flash point	°C	min.	43.0	60.0		60.0		60.0		ISO 2719
Hydrogen sulfide	mg/kg	max.	2.0	2.0		2.0		2.0		IP 570
Acid number	mg KOH/g	max.	0.5	0.5		0.5		0.5		ASTM D664
Total sediment by hot filtration	wt %	max.	-	-		-		0.10 ^{c)}		ISO 10307-1
Oxidation stability	g/m ³	max.	25	25		25		25 ^{d)}		ISO12205
Fatty acid methyl ester(FAME) ^{e)}	vol %	max.	-	-	7.0	-	7.0	-	7.0	ASTM D7963 or IP579
Carbon residue : micro method on the 10 % volume distillation residue	wt %	max.	0.3	0.30		0.30		-		ISO 10370
Carbon residue : micro method	wt %	max.	-	-		-		0.30		ISO 10370
Cloud point ^{f)}	Winter	°C	max.	-16	report	report		-		ISO 3015
	Summer	°C	min.	-16	-	-		-		
Cold filter plugging point ^{f)}	Winter	°C	max.	-	report	report		-		IP 309 or IP 612
	Summer	°C	min.	-	-	-		-		
Pour point (upper) ^{f)}	Winter	°C	max.	-	-6	-6		0		ISO 3016
	Summer	°C	max.	-	0	0		6		
Appearance	-	-	Clear and bright ^{g)}					^{c)}		
Water ^{h)}	vol %	max.	-	-		-		0.30 ^{c)}		ISO 3733
Ash	wt %	max.	0.01	0.01		0.01		0.01		ISO 6245
Lubricity, corrected wear scar diameter (WSD 1,4) at 60 °C ⁱ⁾	µm	max.	520	520		520		520 ^{d)}		ISO 12156-1

- a) $1 \text{ mm}^2 / \text{s} = 1 \text{ cSt}$
- b) Notwithstanding the limits given, a purchaser shall define the maximum sulfur content in accordance with relevant statutory limitations. See introduction of ISO 8217 : 2017.
- c) If the sample is not clear and bright, the total sediment by hot filtration and water tests shall be required. See 6.8 and 6.12 of ISO 8217 : 2017.
- d) If the sample is not clear and bright, the test cannot be undertaken and therefore, compliance with this limit cannot be shown.
- e) See 5.1 and Annex A ISO 8217 : 2017
- f) Pour point cannot guarantee operability for all ships in all climates. The purchaser should confirm that the cold flow characteristics (pour point, cold filter plugging point) are suitable for the ship's design and intended voyage. See 6.11 of ISO 8217 : 2017.
- g) If the sample is dyed and not transparent, then the water limit and test method as given in 6.12 of ISO 8217 : 2017 shall apply.
- h) Water content at engine inlet should be controlled under max. 0.02 mass % specified in the chapter 6.6.1.
- i) This requirement is applicable to fuels with a sulfur content below 500 mg/kg (0.050 mass %).

Table 6.7 Specifications of residual fuel

Characteristics	Unit	Limit	Category ISO-F-				Test method reference
			RMA	RMB	RMD	RME	
			10	30	80	180	
Kinematic viscosity at 50 °C	mm ² /s _{a)}	max.	10.0	30.0	80.0	180.0	ISO 3104
Density at 15 °C	kg/m ³	max.	920.0	960.0	975.0	991.0	ISO 3675 or ISO 12185
CCAI	-	max.	850	860	860	860	
Sulfur ^{b)}	wt %	max.	Statutory requirements ^{*)}				ISO 8754 ISO 14596 ASTM D4294
Flash point	°C	min.	60.0	60.0	60.0	60.0	ISO 2719
Hydrogen sulfide	mg/kg	max.	2.0	2.0	2.0	2.0	IP 570
Acid number ^{c)}	mg KOH/g	max.	2.5	2.5	2.5	2.5	ASTM D664
Total sediment aged	wt %	max.	0.1	0.1	0.1	0.1	ISO 10307-2
Carbon residue : micro method	wt %	max.	2.5	10.0	14.0	15.0	ISO 10370
Pour point(upper) _{d)}	Winter	°C	max.	0	0	30	ISO 3016
	Summer	°C	max.	6	6	30	
Water ^{e)}	vol %	max.	0.30	0.50	0.50	0.50	ISO 3733
Ash	wt %	max.	0.04	0.07	0.07	0.07	ISO 6245
Vanadium	mg/kg	max.	50	150	150	150	IP 501, IP 470 or ISO 14597
Sodium	mg/kg	max.	50	100	100	50	IP 501, IP 470
Aluminum plus silicon	mg/kg	max.	25	40	40	50	IP 501, IP 470 or ISO 10478
Used lubricating oils (ULO) Calcium and Zinc ; or calcium and phosphorus	mg/kg	-	Do not use if : calcium > 30 and zinc > 15 or Calcium > 30 and phosphorus > 15				IP 501 or IP 470, IP 500

a) 1 mm²/s = 1 cSt

b) The purchaser shall define the maximum sulfur content in accordance with relevant statutory limitations.

c) See Annex H of ISO 8217 : 2017.

d) The purchaser should confirm that this pour point is suitable of the ship's intended area of operation.

e) Water content at engine inlet should be controlled under max. 0.2 mass % specified in the chapter 6.6.1.

*) International statutory requirements

This document specifies allowable minimum flash point limits following the provisions given in the SOLAS convention. MARPOL Annex VI, which controls air pollution from ships, includes a requirement that either the fuel shall not exceed a specified maximum sulfur or an approved equivalent alternative means be used. During the lifetime of this document, regional and/or national bodies may introduce their own local emission requirements, which can impact the allowable sulfur content, for example, the EU sulfur directive. It is the purchaser's and the user's responsibility to establish which statutory requirements are to be met and specify on that basis the corresponding maximum fuel sulfur content to the supplier.

Characteristics		Unit	Limit	Category ISO-F-						Test method reference	
				RMG				RMK			
				180	380	500	700	380	500		700
Kinematic viscosity at 50 °C		mm ² /s _{a)}	max.	180.0	380.0	500.0	700.0	380.0	500.0	700.0	ISO 3104
Density at 15 °C		kg/m ³	max.	991.0				1,010.0			ISO 3675 or ISO 12185
CCAI		-	max.	870				870			
Sulfur ^{b)}		wt %	max.	Statutory requirements ^{*)}						ISO 8754 ISO 14596 ASTM D4294	
Flash point		°C	min.	60.0				60.0			ISO 2719
Hydrogen sulfide		mg/kg	max.	2.0				2.0			IP 570
Acid number ^{c)}		mg KOH/g	max.	2.5				2.5			ASTM D664
Total sediment aged		wt %	max.	0.1				0.1			ISO 10307-2
Carbon residue : micro method		wt %	max.	18.0				20.0			ISO 10370
Pour point(upper) _{d)}	Winter	°C	max.	30				30			ISO 3016
	Summer	°C	max.	30				30			
Water ^{e)}		vol %	max.	0.50				0.50			ISO 3733
Ash		wt %	max.	0.10				0.15			ISO 6245
Vanadium		mg/kg	max.	350				450			IP 501, IP 470 or ISO 14597
Sodium		mg/kg	max.	100				100			IP 501, IP 470
Aluminum plus silicon		mg/kg	max.	60				60			IP 501, IP 470 or ISO 10478
Used lubricating oils (ULO) Calcium and Zinc ; or calcium and phosphorus		mg/kg	-	Do not use if : calcium > 30 and zinc > 15 or Calcium > 30 and phosphorus > 15						IP 501 or IP 470, IP 500	

a) 1 mm²/s = 1 cSt

b) The purchaser shall define the maximum sulfur content in accordance with relevant statutory limitations.

c) See Annex H of ISO 8217 : 2017.

d) The purchaser should confirm that this pour point is suitable of the ship's intended area of operation.

e) Water content at engine inlet should be controlled under max. 0.2 mass % specified in the chapter 6.6.1.

*) International statutory requirements

This document specifies allowable minimum flash point limits following the provisions given in the SOLAS convention. MARPOL Annex VI, which controls air pollution from ships, includes a requirement that either the fuel shall not exceed a specified maximum sulfur or an approved equivalent alternative means be used. During the lifetime of this document, regional and/or national bodies may introduce their own local emission requirements, which can impact the allowable sulfur content, for example, the EU sulfur directive. It is the purchaser's and the user's responsibility to establish which statutory requirements are to be met and specify on that basis the corresponding maximum fuel sulfur content to the supplier.

Biofuels

Biofuels are largely classified into 3 categories as transesterified biofuels(biodiesel), bio-blends and others. (Classify biofuels with or without International standard)

- ✓ Transesterified Biofuels (International standards EN 14214 or ASTM D 6751-19)
ex) Biodiesel (Fatty Acid Methyl Ester – FAME)
- ✓ HVO (Hydrotreated Vegetable Oil) (International standards EN 15940, Paraffinic Diesel Fuel from Hydrotreatment)
- ✓ Bio-blends (Mixture of Biofuels and Fossil fuels)
- ✓ Other biofuels
ex) Crude biofuels (Palm oils, Vegetable oil, Animal fat), Refined biofuels, etc.

HiMSEN is able to operate continuously with biofuels specified in the below Table 6.8 and Table 6.9

- ✓ When using biofuels included in quality standards Table 6.8 and Table 6.9, you need to get confirmation from HiMSEN.

Biodiesel / Fatty Acid Methyl Ester (FAME)

Biodiesel (FAME) is derived from Crude biofuels by using transesterification processes. It can be used alone or blended with petro-diesel in any proportions.

International standards EN 14214 or ASTM D 6751-19 are commonly used to specify the quality of biodiesel. (See the Table 6.8)

Table 6.8 Specifications of biodiesel(FAME)

Characteristics b)	Unit	Min. limit	Max. limit	Test method reference
FAME content	% (m/m)	96.5	-	EN 14103
Density at 15°C	kg/m ³	860	900	EN ISO 3675 / EN ISO 12185
Viscosity at 40°C	mm ² /s	3.5	5.0	EN ISO 3104 / EN 14105
Cold filter plugging point(CFPP)	°C	-	a)	EN 116
Flash point	°C	101	-	EN ISO 2719 / EN ISO 3679
Sulfur content	mg/kg	-	10	EN ISO 20846 / EN ISO 20884
Cetane number	-	51.0	-	EN ISO 5165
Sulfated ash content	% (m/m)	-	0.02	ISO 3987
Water content	mg/kg	-	500	EN ISO 12937
Total contamination	mg/kg	-	24	EN 12662

Characteristics b)	Unit	Min. limit	Max. limit	Test method reference
Copper strip corrosion (3 hours at 50 °C)	rating	1b(Class1)	1a	EN ISO 2160
Oxidation stability, 110°C	hours	8	-	EN 14112
Total Acid Number (TAN)	mg KOH/g	-	0.5	EN 14104
Iodine value	-	-	120	EN 14111
Linolenic Acid Methylester	% (m/m)	-	12	EN 14103
Polyunsaturated (≥ 4 Double bonds) Methylester	% (m/m)	-	1	EN 14103
Methanol content	% (m/m)	-	0.2	EN 14110
Monoglyceride content	% (m/m)	-	0.7	EN 14105
Diglyceride content	% (m/m)	-	0.2	EN 14105
Triglyceride content	% (m/m)	-	0.2	EN 14105
Free Glycerine	% (m/m)	-	0.02	EN 14105 / EN 14106
Total Glycerine	% (m/m)	-	0.25	EN 14105
Group I metals (Na+K)	mg/kg	-	5	EN 14108 / EN 14109 / EN 14538
Group II metals (Ca+Mg)	mg/kg	-	5	EN 14538
Phosphorus content	mg/kg	-	4	EN14107

a) The temperatures related to filterability have to be at least 10~15°C above the minimum fuel oil temperature (maximum temperature among cloud point, pour point, CFPP, and LTFT) in the whole fuel treatment process, even during engine stop unless flushing using pure diesel oil were performed before engine stop.

b) The information of storage and deterioration of Biodiesel regarding EN14214 should be discussed/checked by fuel oil supplier before biodiesel is applied to engine.

Hydrotreated Vegetable Oil (HVO)

The EN 15940:2016 + A1:2018 + AC:2019 standard covers hydrotreated paraffinic renewable diesel fuel and synthetic Fischer-Tropsch products GTL, BTL and Coal-to-Liquid (CTL).

Since HVO consists of paraffinic hydrocarbons, it cannot meet the requirements set by EN 14214:2013+ A2:2019, which is a standard developed and valid only for methyl ester chemistry type biodiesel, namely FAME. As a matter of fact, HVO meets EN 590, except the requirement for minimum density. International standards EN 15940 are commonly used to specify the quality of HVO. (See the Table 6.9)

Table 6.9 Specifications of HVO(EN15940)

Characteristics	Unit	Min. limit	Max. limit	Test method reference
FAME content	% (v/v)	-	7.0	EN 14103
Density at 15°C	kg/m³	765	800	ISO 3675 / ISO 12185
Total aromatics	% (m/m)	-	1.1	EN 12916
Kinematic viscosity at 40°C	mm²/s	2.0	4.5	ISO 3104 / EN 14105
Cold filter plugging point(CFPP)	°C	-	a)	EN 116
Flash point	°C	55.0	-	ISO 2719
Sulfur content	mg/kg	-	5	ISO 20846 / ISO 20884
Cetane number	-	70	-	ISO 5165 / EN 15195
Sulfated ash content	% (m/m)	-	0.01	ISO 3987
Water content	% (m/m)	-	0.020	ISO 12937
Total contamination	mg/kg	-	24	EN 12662
Copper strip corrosion (3 hours at 50 °C)	rating	-	Class 1	ISO 2160
Oxidation stability	hours	20	-	EN 14112
Oxidation stability	g/m3	-	25	EN 14112
Carbon residue : on the 10% volume distillation residue	mass %	-	0.30	ISO 10370
Ash	% (m/m)	-	0.010	ISO 6245
Lubricity HFRR at 60°C	µm	-	460	EN 12156-1
Evaporated at 250°C	% (v/v)	-	65	ISO 3405
Evaporated at 350°C	% (v/v)	-	85	ISO 3405
Distillation 95% (v/v)	°C	-	360.0	ISO 3924

a) The temperatures related to filterability have to be at least 10~15°C above the minimum fuel oil temperature (maximum temperature among cloud point, pour point, CFPP, and LTFT) in the whole fuel treatment process, even during engine stop unless flushing using pure diesel oil were performed before engine stop.

Bio-blends

Bio-blends are mixture of biofuels and fossil fuels.

The volume ratio of the biofuel in the bio-blends are referred to as follows.

- ✓ B##, BD## (## : the volume ratio of the biofuel in the bio-blends)
 ex) BD20 = Biodiesel 20% + Distillate marine fuels 80%
 (In the case of Biodiesel mixture, it is specially referred to as BD##)
 B20 = Biofuel 20% + Fossil fuel 80%
 (Except for Biodiesel mixture, the other bio-blends are referred to as B##)

The quality standards of biodiesel-blends(BD##) are referred to the Table 6.8 and the bio-blends(B##) except for biodiesel-blends(BD##) are referred to the Table 6.10.

General biofuels

The quality standards of general liquid biofuels except biodiesel(FAME) are as shown below Table 6.10.(General biofuels include a wide range of specifications. In order to reduce confusion when applying biofuel standards, HiMSEN set the integrated standard with the Table 6.10.)

Only biofuels that meet EN14214 or EN15940 can be applied to Micro-Pilot (MP) injector. The information of storage and deterioration of biofuels should be discussed/checked by fuel oil supplier before the biofuel is applied to engine.

Table 6.10 Specifications of general biofuel, bio-blends.

Characteristics	Unit	Min. limit	Max. limit	Test method reference
Viscosity before injection pumps	cSt	2	18	ISO 3104
Kinematic viscosity at 50°C	mm ² /s	-	700	
Density at 15°C	kg/m ³	-	1010	ISO 3675 / ISO 12185
Sulfur	mass %	Statutory requirements		ISO 8754 / ISO 14596 / ASTM D4294
Flash point	°C	60	-	ISO 2719
Cloud point	°C	-	a)	ISO 3015
Cold filter plugging point (CFPP)	°C	-	a)	IP 309
Pour point	°C	-	a)	ISO 3016
Total sediment by hot filtration	mass %	-	0.1	ISO 10307-1
Total sediment aged	mass %	-	0.1	ISO 10307-2


Characteristics	Unit	Min. limit	Max. limit	Test method reference
Ash	mass %	-	0.15	ISO 6245
Carbon residue (a) : micro method on the 10% volume distillation residue	mass %	-	0.3	ISO 10370
Carbon residue (b) : micro method	mass %	-	20	ISO 10370
Asphaltenes	mass %	-	8	-
Water	vol %	-	0.5	ISO 3733
Total Acid number (TAN)	mg KOH/g	-	2.5 b)	ASTM D664
Strong acid number	mg KOH/g	-	0	ASTM D664
Oxidation stability	g/m ³	-	25	ISO 12205
Hydrogen sulfide	mg/kg	-	2	IP 570
Copper strip corrosion (3h at 50°C)	Rating	1b	1a	ASTM D130
Lubricity, corrected wear scar diameter	µm	-	520	ISO 12156-1
Vanadium	mg/kg	-	450	IP 501 / IP 470 / ISO 14597
Sodium	mg/kg	-	100	IP 501 / IP 470
Aluminium + Silicon	mg/kg	-	60 c)	IP 501 / IP 470 / ISO 10478
Used lubricating oils (ULO):	-	-	-	IP 501 / IP 470 / IP 500
- Calcium (Ca)	mg/kg	30	-	
- Zinc (Zn)	mg/kg	15	-	
- Phosphorus (P)	mg/kg	15 d)	-	
Cetane number	-	51	-	ISO 4264
Alkali content (Na+K)	mg/kg	-	100	EN 14108 / EN 14109 / 14538
Alkali content (Ca+Mg)	mg/kg	-	30	EN 14538
Lead (Pb) content	mg/kg	-	10	ASTM D 5059
Steel corrosion (24/72h at 20, 60, 120degC)	rating	No signs of corrosion		LP 2902

Characteristics	Unit	Min. limit	Max. limit	Test method reference
Iodine number	g l/100g	-	120	ISO 3961
Oxidation stability	h	5	-	EN 14112
Synthetic polymers	%m	-	0	LP 2501
Lower calorific value	MJ/kg	35	-	DIN 51900-3

- a) The temperatures related to filterability have to be at least 10~15°C above the minimum fuel oil temperature (maximum temperature among cloud point, pour point, CFPP, and LTFT) in the whole fuel treatment process, even during engine stop unless flushing using pure diesel oil were performed before engine stop.
- b) It is required the agreement of FIP maker and HHI if the total acid number is more than 2.5 mg KOH/g.
- c) Aluminium and Silicon contents shall be less than 10 ppm at engine inlet although those contents is required less than 60 mg/kg in fuel oil.
- d) It is required the agreement of SCR maker if the project is required the SCR with engine.

6.5 Fuel oil viscosity diagram

The viscosity of heavy fuel oil to the engine should be kept within the value of 12 ~ 18 cSt. However, the viscosity varies depending on the properties and the temperature of the fuel oil. Maximum preheating temperature of heavy fuel oil is limited up to 155 °C to avoid the vaporization of the fuel oil. A typical fuel oil viscosity diagram with temperature is as follows :

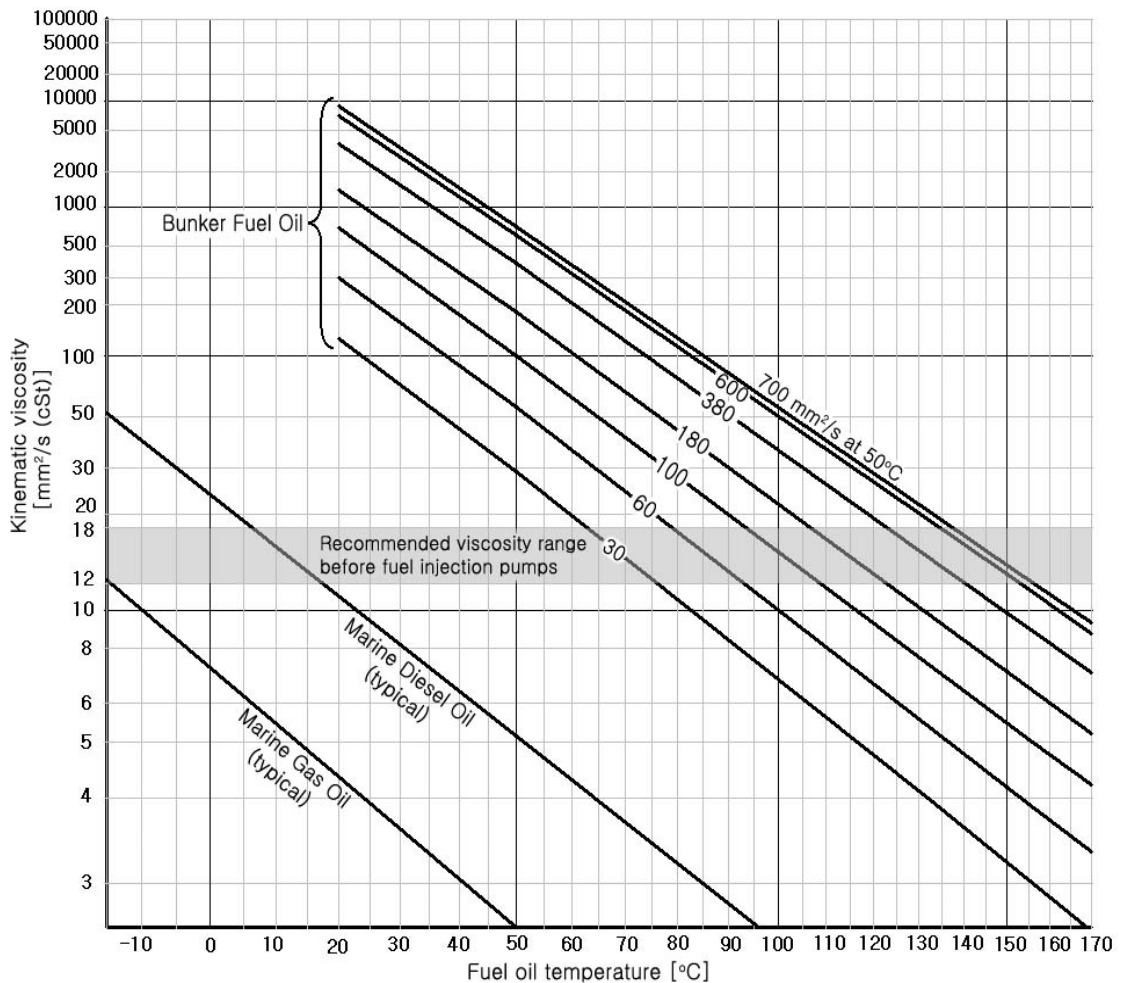

1. The viscosity of marine diesel oil / marine gas oil to the engine should be kept within the value of 2 ~ 14 cSt in order to avoid possible sticking of fuel injection pump due to low lubricity of marine diesel oil / marine gas oil.

Figure 6.4 Diagram for fuel oil viscosity

6.6 Fuel oil quality

6.6.1 Fuel characteristics

Viscosity

The viscosity of fuel oil to the engine should be kept within the value of 12 ~ 18 cSt for heavy fuel oil and 3 ~ 14 cSt for marine diesel oil / marine gas oil, which could be achieved by proper heating recommended by fuel supplier as the viscosity varies depending on the properties of the fuel oil.

Density

If the density of the fuel oil is over the maximum density (991 kg/m³ at 15 °C), the fuel oil is hard to be used because it is highly expected to be contaminated by water or solid unfiltered from system. The special centrifuging system should be installed for the fuel oil with the maximum density (1010 kg/m³ at 15 °C).

Sulfur

It is important to keep proper sulfur contents in the fuel oil. The high sulfur content in the fuel may increase the risk of low temperature corrosion in the combustion chamber and contribute to the formation of high temperature deposit. It is also recommended to keep the proper alkalinity of the lubricating oil for neutralizing.

Ash

The ash content comes from natural crude oil and also from contamination during treatment of the fuel. The solid ingredients can be removed mostly by centrifuging of the fuel. However there are soluble compounds such as vanadium and sodium, which can be transformed as ash after combustion. As the ash in any form promotes mechanical wear of engine parts and harmful deposits in the combustion chamber, the ash components should be carefully analyzed and removed in advance.

Vanadium and sodium

Vanadium is oil – soluble and comes from crude oil mostly. However sodium is water-soluble and comes from crude oil as well as contaminated fuel by salt water. As vanadium and sodium become corrosive ash after combustion, these should be removed as possible. A sodium compound contributes to lower the melting point of vanadium ash, which is very corrosive and harmful to exhaust valves and turbocharger. Therefore, compounds should be less than 1/3 of vanadium contents in weight.

Conradson carbon

Including much conradson carbon may impair combustion properties of the fuel and cause deposit formation in combustion chamber and exhaust system particularly at low engine output.

Asphaltenes

High asphaltene contents shall contribute to forming of deposit in combustion chamber as well as exhaust system at low loads and stick the fuel injection pump. It also causes excessive centrifuge sludge and deposits in the fuel system.

Water

The water content can be measured by a standardized distillation test. The water causes corrosion and cavitation of the fuel system and fouling of the exhaust system and turbochargers. Therefore, water content at engine inlet should be controlled under the following limit according to fuel type.

- ✓ Residual fuel : Max. 0.2 mass %
- ✓ Distillate fuel : Max. 0.02 mass%

Abrasive particles

Fuel oil can be contaminated by abrasive particles composed of aluminium and silicon. If the efficient fuel treatment is not applied, these fine catalysts can cause abnormal wear on injection system and cylinder liners / piston rings. The aluminum and silicon should be reduced to maximum 15 mg/kg before engine inlet.

6.6.2 Ignition quality

The ignition quality is related to the ignition delay to the intervals between fuel injection and combustion. If the engine is operated at low load or in the condition of low temperature or pressure in the combustion chamber, the ignition delay is lengthened. During the initial operation, the engine can be damaged by the low ignition quality without sufficient preheating. The equation of CCAI (Calculated Carbon Aromaticity Index) developed by Shell can be used to get the ignition quality of the heavy fuel oil.

Calculated carbon aromaticity index

$$CCAI = D - 81 - 141 \times \log \times [\log \times (V_k + 0.85)]$$

Where :

D (kg / m³ at 15 °C) = Density

Vk (cSt at 50 °C) = Viscosity

If the value of CCAI is increased, the ignition quality has decreased value. The fuel oil with high CCAI value can cause a combustion problem.

To prevent any troubles about poor ignition quality, engine should be preheated sufficiently before start and has proper functions of cooling system and injection system.

From light distillates to residual fuels, net and gross specific energy can be tested or calculated according to various international standards. Basically, the specific energy value provided by fuel supplier is adapted for the determination of the heat of combustion.

If it is not supplied from fuel supplier, it can be calculated by the specification of other properties as the equations given below.

For residual fuels,

$$N = (46.704 - 8.802 \times \rho^2 \times 10^{-6} + 3.167 \times \rho \times 10^{-3}) \times [1 - 0.01 \times (w + a + s)] + 0.0942 \times s - 0.02449 \times w$$

$$G = (52.190 - 8.802 \times \rho^2 \times 10^{-6}) \times [1 - 0.01 \times (w + a + s)] + 0.0942 \times s$$

For marine distillate fuels,

$$N = (46.423 - 8.792 \times \rho^2 \times 10^{-6} + 3.170 \times \rho \times 10^{-3}) \times [1 - 0.01 \times (w + a + s)] + 0.0942 \times s - 0.02449 \times w$$

$$G = (51.916 - 8.792 \times \rho^2 \times 10^{-6}) \times [1 - 0.01 \times (w + a + s)] + 0.0942 \times s$$

Where :

N (MJ/kg) = Net specific energy

G (MJ/kg) = Gross specific energy

ρ (kg/m³) = Density at 15°C

w (mass %) = Water content

a (mass %) = Ash content


s (mass %) = Sulfur content

Ref. ISO 8217:2017(E)

* Refer to that the actual specific energy test method (for example ASTM D 240) takes priority over the specific energy calculation method as above.

6.7 Internal fuel gas system

Diagram for Internal fuel gas system

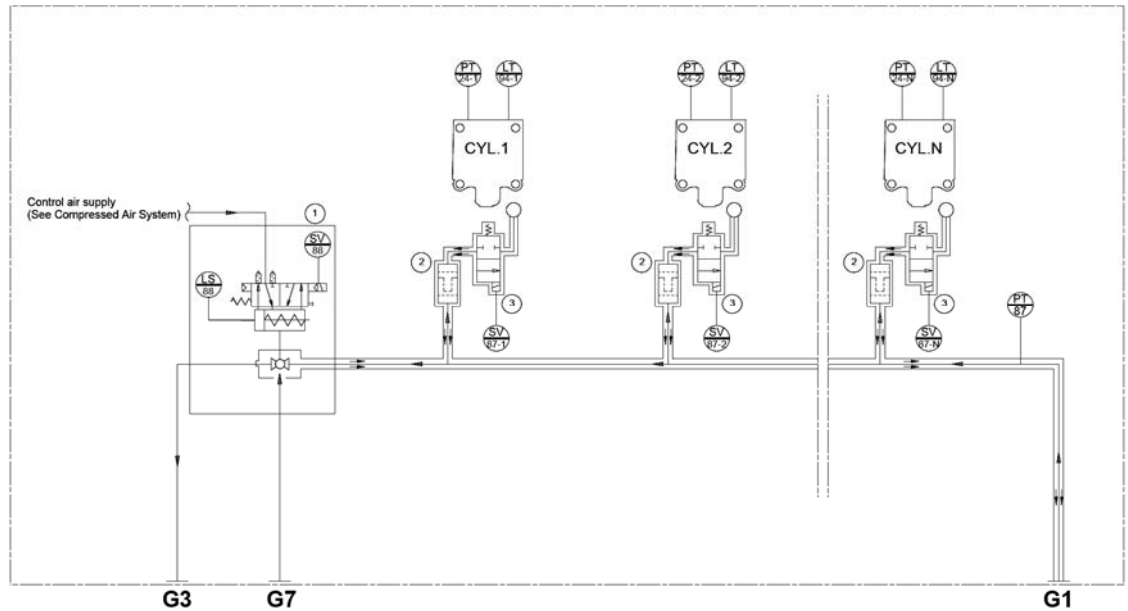

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 6.5 Diagram for internal fuel gas system [BP0061847-0.4]

Table 6.11 External pipe connection size

Code.	Description	Size
G1	Fuel gas inlet (double wall)	50A SCH.40 100A SCH.10
G3	Fuel gas ventilation	10K-25A
G7	Air inlet to double wall pipe	5K-32A

1. Connection size is according to JIS B 2220.

2. Scope of instrumentations will be followed according to the extent of delivery and the engine builder's standard.

Table 6.12 System components

No.	Description	Remark
1	Fuel gas venting valve	
2	Fuel gas safety filter	80μm
3	Gas admission valve	

6.7.1 General description

In gas mode, the regulated fuel gas from the external fuel gas system is to be injected to the intake port of each cylinder by gas admission valve. The gas and air mixture is led into the main combustion chamber through an intake valve and ignited by pilot fuel oil.

At the time of the change over from gas to diesel (including gas trip condition), emergency stop in gas mode or maintenance work of gas supply line, fuel gas should be purged out with inert gas (Nitrogen) with dry & clean, which is supplied from the gas regulating unit.

The fuel gas pipes on the engine are made of double walled structure up to the gas admission valves for the safety from the gas leakage. The annular intermediate space of double walled pipes shall be continuously ventilated under the negative pressure by the ventilation fan.

Gas admission valve

Fuel gas is injected by the gas admission valves into the intake port of each cylinder with suitable timing and duration. To regulate the power and speed of the engine, the amount of fuel gas fed into each cylinder is individually controlled by the gas admission valves which receive the signals from engine control system (ECS).

The gas admission valves are enclosed by the molded-cases which are connected to the annular intermediate space of double walled pipes. Therefore, it is possible to detect the gas leakage from the valves by the gas detectors equipped with the external double walled pipes at yard system.

Safety filter

To protect the gas admission valves, a safety filter with a fineness of approx. 80 μm is installed at the entrance of each gas admission valve.

Gas ventilation valve

The valve has special design for not only gas vent but also ventilation air inlet to annular intermediate space of double walled pipe.

In case of emergency stop in gas mode or gas trip, the gas ventilation valve is to be operated according to the specific sequence in order to vent out the fuel gas in double walled gas pipe on DF engine.

Fuel gas vent line should not be common with any other pipes to prevent unintended gas flowing to the other engine due to risk for backflow of gas and it should be led to open space with non-hazardous area where no any ignition sources is existed.

Please refer to relevant rules and class regulation for further requirements regarding gas vent line. The pressure drop in fuel gas vent line is to be designed as minimum as possible.

6.7.2 Annular intermediate space of double walled pipe

The annular intermediate space of double walled pipe should be continuously ventilated under the negative pressure suctioned with ventilation fan unit and the ventilation air is supplied through ventilation air inlet (G7) or ambient air in engine room (see the Figure 6.6).

The ventilation air inlet is located at gas ventilation valve of engine and the ventilation air should be came from gas safe area. Please refer to relevant rules and class regulation for further requirements regarding air ventilation.

Table 6.13 Double walled gas pipe external volume

Engine type	Double walled gas pipe external volume (Annular space) (liter)
5H22CDF	32.7
6H22CDF	37.1
7H22CDF	41.4
8H22CDF	45.8
9H22CDF	50.1

6.7.3 Purging with inert gas

In order to secure safety, the crankcase and double walled gas pipe of HiMSEN DF engine should be purged with inert gas in case of emergency stop in gas mode, gas trip or before maintenance. The inert gas for purging of fuel gas piping is supplied through gas regulating valve unit according to purging sequence controlled by ECS (Engine control system). In case of purging for crankcase, it would be only conducted by manually before maintenance such as opening the crankcase door.

Inert gas to double walled gas piping

Connection code : G16 or G17 (See the Figure 6.6 Diagram for external fuel gas system)

Supply pressure : minimum 3 barg / maximum 6 barg / alarm set point 3.5 barg
/ Recommended 4.0 barg

Table 6.14 Double walled gas pipe internal volume

Engine type	Double walled gas pipe internal volume (liter)
5H22CDF	21.3
6H22CDF	24.8
7H22CDF	28.2
8H22CDF	31.7
9H22CDF	35.1

Inert gas to crankcase

Connection code : L6 (see the Figure 7.1 Diagram for internal lubricating oil system)

Supply pressure : minimum 3 barg / maximum 6 barg

Required inert gas volume : 6.5 Nm³ (1 atm, 0°C)

Table 6.15 Crankcase volume

Engine type	Crankcase volume (liter)
5H22CDF	2,946
6H22CDF	3,348
7H22CDF	3,634
8H22CDF	4,152
9H22CDF	4,554

1. It is prohibited to supply inert gas to crankcase during engine operation.
2. The required inert gas volume could be changed according to yard system

6.8 External fuel gas system

Diagram for external fuel gas system

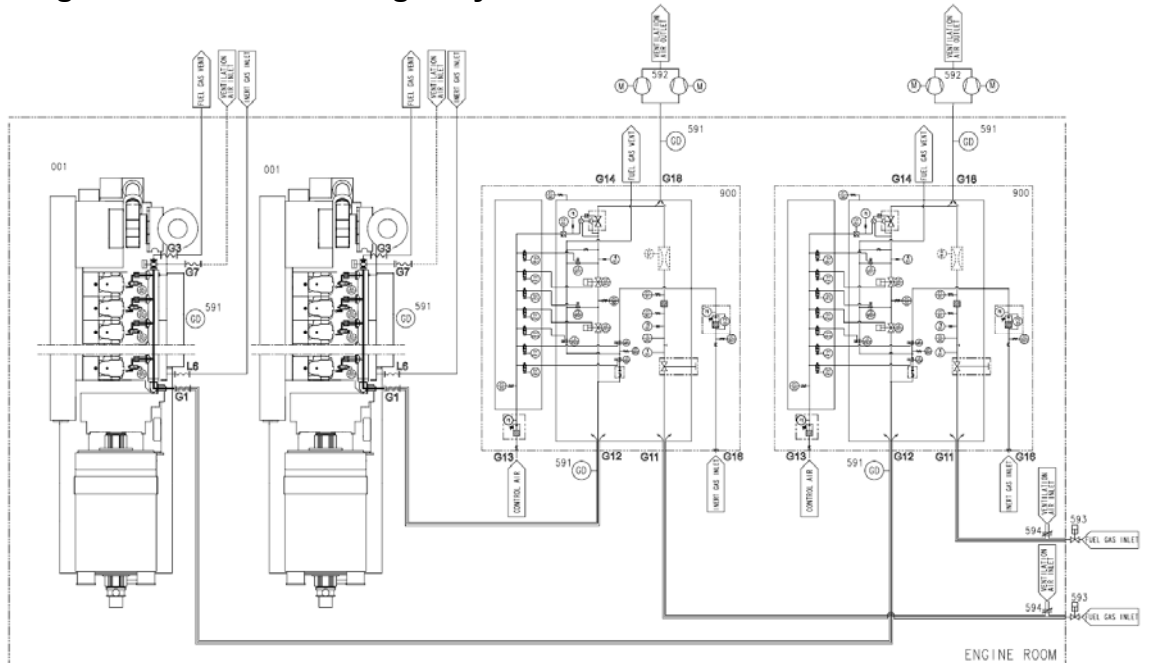


Figure 6.6 Diagram for external fuel gas system (BH1-104579-4.3)

Table 6.16 System components

No.	Description
001	HiMSEN DF engine
591	Gas detector
592	Ventilation fan
593	Master fuel gas valve
594	Adjustable orifice for air inlet
900	Enclosed type gas regulating valve unit

6.8.1 General description

In order to supply fuel gas to the engine, fuel gas passes through the external fuel gas system in order to ensure stable operation with correct pressure and temperature.

6.8.2 Double walled gas piping

The fuel gas supply pipes in the engine room should be double walled and connected to the gas regulating valve unit space. The design of the gas pipe should satisfy the requirements of classification societies.

The annular intermediate space of double walled pipes should be continuously ventilated by negative pressure suctioned by ventilation fan. The gas leakage from the inner pipes is to be monitored by the gas detectors at all times.

The ventilation system for the double walled gas pipes should be equipped with the minimum capacity of 30 air changes per hour, and the differential pressure of annular space should be monitored to check possible loss of the negative pressure.

6.8.3 Gas detector

The annular intermediate space of double walled gas pipe should be continuously ventilated under the negative pressure at the gas regulating unit room / gas regulating unit enclosure and the gas leakage from annular intermediate space of double walled gas pipe is monitored by gas detector.

In the 'Figure 6.6 Diagram for the external fuel gas system', the location and number of gas detectors are described which are generally accepted.

Please refer to relevant rules and class regulation for further requirements regarding the location, number and alarm limit of gas detectors.

6.8.4 Ventilation fan

To keep the annular intermediate space of double walled pipe under negative pressure, the ventilation fan should be applied.

The preliminary design value for the negative pressure is - 20 mbar, but the actual pressure might be various depending on the design of annular space. It could be accepted by appropriate analysis or measurement.

The minimum capacity for the ventilation fan is 30 air changes per hour according to the class regulation.

It is necessary to design the ventilation fan to consider the volume and pressure drop value of the annular intermediate space in order to achieve the minimum capacity as 30 air changes per hour. Please refer to the 'Figure 6.5 Diagram for internal fuel gas system' for further information for HiMSEN DF engine double walled fuel gas piping.

Please refer to relevant rules and class regulation for further requirements regarding air ventilation.

6.8.5 Master fuel gas valve

The master fuel gas valve is required to install at the upstream of the gas regulating unit according to relevant rules. It should be located outside the engine room.

6.8.6 Adjustable orifice for air inlet

In case of external fuel gas system with enclosed type gas regulating unit, there are two ventilation air inlet in the system. One is located in gas venting valve (G7) HiMSEN DF engine. The other should be located at annular space of fuel gas supply line. This adjustable orifice should be applied at the air inlet of annular space of fuel gas supply line in order to adjust the ventilation air balancing with G7 connection.

Please refer to relevant rules and class regulation for further requirements regarding air ventilation.

6.8.7 Gas supply pressure

The gas supply pressure to HiMSEN DF engine system depends on the minimum lower heating value of the fuel gas and pressure drop. Also, the gas supply pressure should be constantly supplied for stable gas mode operation.

Please refer to the 'Figure 5.2 Gas supply pressure at engine inlet' for detail information.

6.8.8 Gas regulating valve unit

The fuel gas is supplied to the engine through the gas regulating valve unit. The fuel gas pressure is adjusted by pressure regulator with I/P convertor, which is controlled by engine control system (ECS).

The gas regulating valve unit is required for each engine and it should be equipped with the ventilation fan and gas detection system.

Installation

The gas regulating valve unit shall be located as close to engine as possible for stable gas mode operation. Therefore, the distance between the fuel gas inlet of HiMSEN DF engine and gas regulating valve unit is recommended within 10 m (Maximum 20 m).

Type of gas regulating valve unit

- ✓ Open type gas regulating valve unit (GRU)

It should be installed in separated room so-called GRU room with appropriate ventilation system and gas detection system.

- ✓ Enclosed type gas regulating valve unit (ED Type GRU)

The ED TYPE GRU that has enclosure such as separated room so-called GRU room. It should be equipped with appropriate ventilation system and gas detection system.

The major function of gas regulating valve unit

- ✓ Measuring gas consumption (optional)
- ✓ Filtering fuel gas
- ✓ Control of the fuel gas pressure supplied to HiMSEN DF Engine
- ✓ Stopping fuel gas supply to engine in case of emergency stop or gas trip
- ✓ Purging fuel gas line

The comprisal of gas regulating valve unit

- ✓ Manual shut-off valve
- ✓ Gas filter
- ✓ Flow meter (option)
- ✓ Gas pressure regulator
- ✓ I/P converter
- ✓ Double block and bleed valve for fuel gas line
- ✓ Double block and bleed valve for inert gas line
- ✓ Gas ventilation valve
- ✓ Closable non return valves
- ✓ Instruments (Pressure indicator, sensor, temperature indicator, transmitter)
- ✓ Inert gas filter with differential pressure switch

Open type gas regulating valve unit

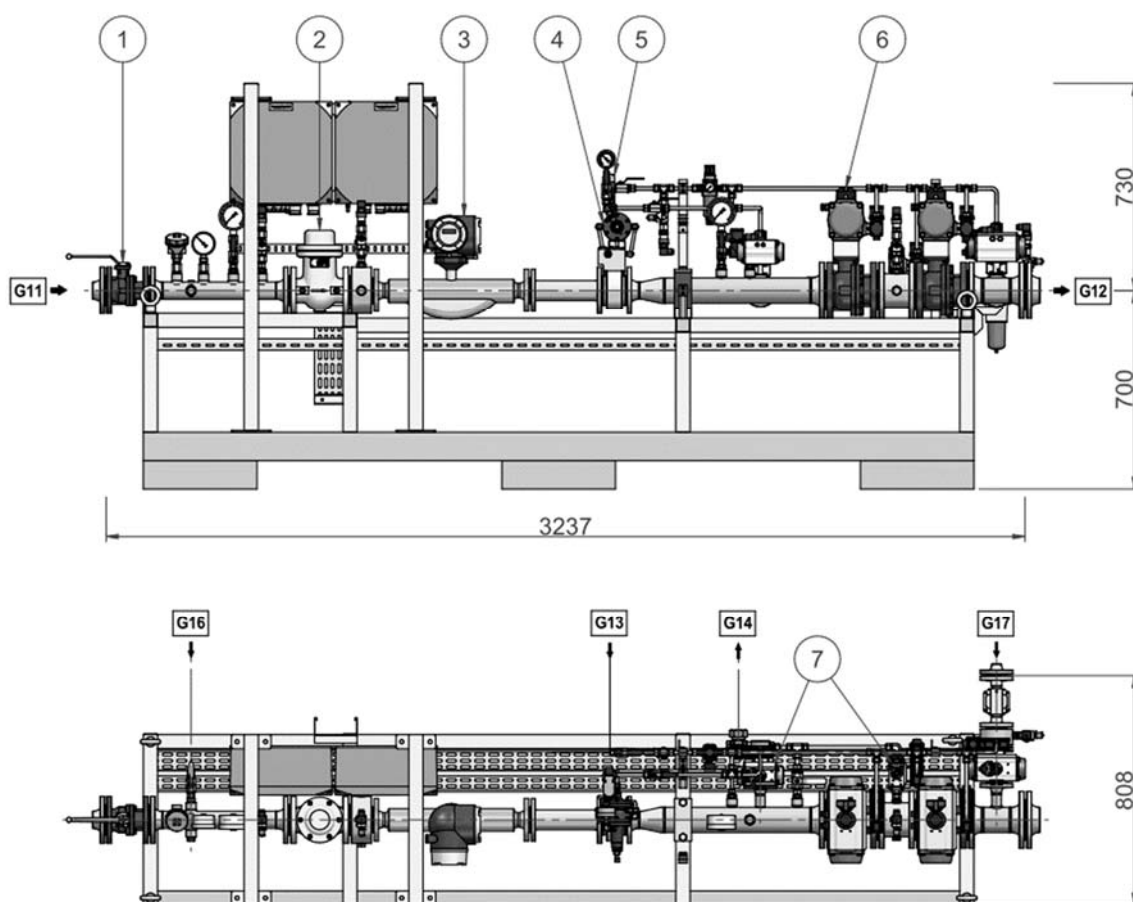


Figure 6.7 Typical drawing of gas regulating valve unit

Table 6.17 System components

No.	Description	Size
1	Manual shut off valve	
2	Fuel gas filter	2 μ m
3	Flow meter	
4	Gas pressure regulator	
5	I/P convertor	
6	Double block valve	
7	Gas ventilation valves	

1. This drawing is only for reference in order to show the gas regulating valve unit figure.

2. Scope of supply will be followed according to extent of delivery for each project and engine builder's standard.

Enclosed type gas regulating valve unit

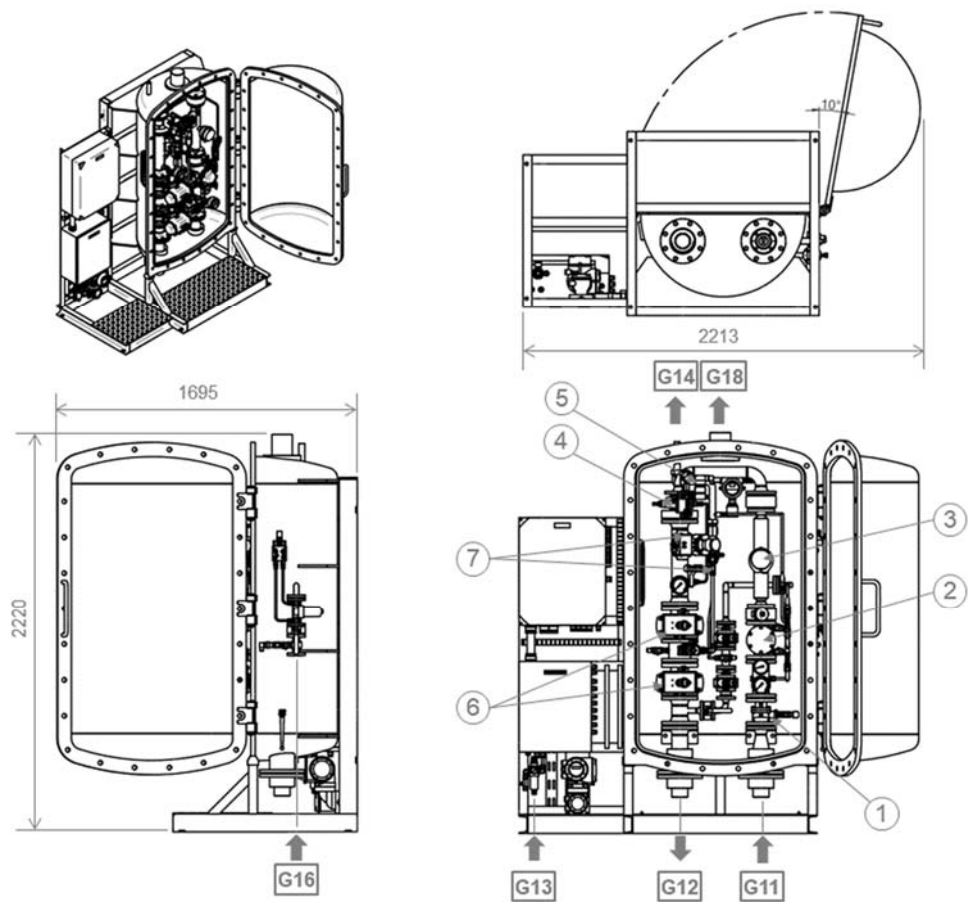


Figure 6.8 Typical drawing of enclosed type gas regulating valve unit

Table 6.18 System components

No.	Description	Size
1	Manual shut off valve	
2	Fuel gas filter	2 μ m
3	Flow meter	
4	Gas pressure regulator	
5	I/P convertor	
6	Double block valve	
7	Gas ventilation valves	

1. This drawing is only for reference in order to show the gas regulating valve unit figure.
2. Scope of supply will be followed according to extent of delivery for each project and engine builder's standard.

System diagram for enclosed type gas regulating valve unit

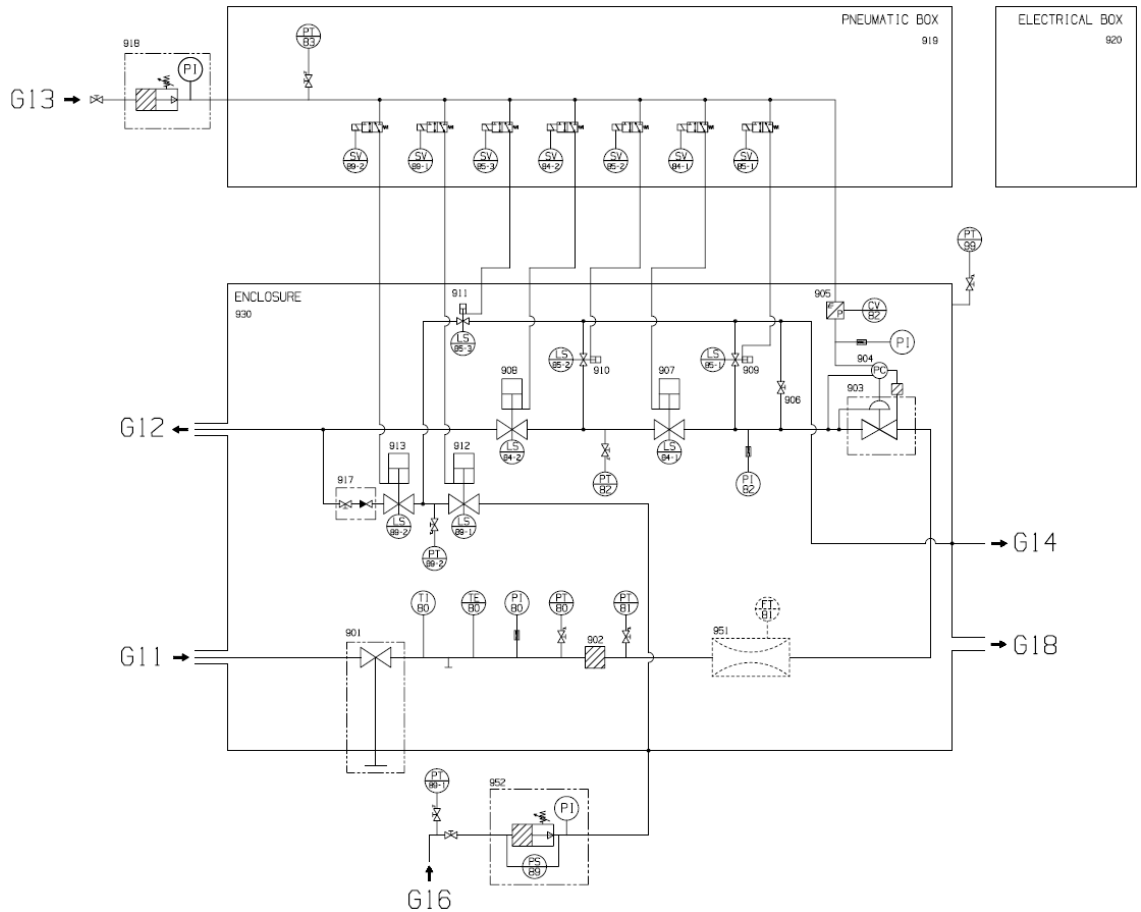


Figure 6.9 Enclosed type gas regulating unit valve system (B92-337796-1.2)

Table 6.19 Size of the external pipe connections

No.	Description	Size	Remark
G11	Fuel gas inlet to gas regulating unit	50A 100A	Welded Type (pipe end)
G12	Fuel gas outlet to engine	50A 100A	Welded Type (pipe end)
G13	Control air to gas regulating unit	OD 12	Bite Type (connector end)
G14	Fuel gas ventilation from gas regulating unit	25A	Welded Type (pipe end)
G16	Inert gas inlet to gas regulating unit	20A	JIS B 2220 (flange end)
G18	Ventilation on enclosure	100A	Welded Type (pipe end)

Table 6.20 System components

No.	Description	Size
901	Manual shut off valve	
902	Fuel gas filter	2 μ m
903	Gas pressure regulator	
904	Pilot regulator	
905	I/P convertor (CV82)	
906	Manual vent valve	
907	First block valve (SV84-1)	Normal close
908	Second block valve (SV84-2)	Normal close
909	Vent valve (SV85-1)	Normal open
910	Vent valve (SV85-2)	Normal open
911	Vent valve (SV85-3)	Normal close
912	First block valve (SV89-1)	Normal close
913	Second block valve (SV89-2)	Normal close
917	Closable non return valve	
918	Air filter	5 μ m
919	Pneumatic box	
920	Electrical box	
930	Enclosure for GRU	
951	Coriolis type mass flow meter	Option
952	Inert gas filter with DPS (PS89)	

Gas filter

The gas filter protects the downstream equipment like the pressure regulators from impurities such as dust, rust, and other solid particles. The filtration of the gas filter is abs. 2 micron, 99 % efficiency.

The pressure loss at this filter is monitored by the front and the rear of pressure transmitter.

Flow meter (Option)

The Flow meter can measure flow rates directly and integrate the measured values. As a result, the gas volume which flowed through the flow meter is registered by an electronic totalizing unit. The pressure loss at this filter is monitored by the front and the rear of pressure transmitter.

Double block valve

The Double Block and Bleed valve (DBB valve) is composed with two shut off valves (block valves) and one vent valve (bleed valve) between the shut off valves. The two shut off valves cut off the fuel gas supply to the DF engine according to specific sequence controlled by Engine Control System (ECS). And the vent valve will be opened to release the trapped fuel gas between shut off valve at the same time. The block valves are designed for normal close (fail to close) and bleed valve is designed for normal open (fail to open) for fuel gas system safety. The double block and bleed valve is arranged in fuel gas line and inert gas line.

To check for any leakage from the double block valves, close the valves and check the pressure right in front of the valves. If there is any pressure drop, it means that the gas is leaked from these valves.

Gas pressure regulating valve

The fuel gas supply pressure to DF engine is controlled by gas pressure regulating valve. It is controlled by the ECS through the I/P converter which transforms the electronic signals into the control air pressure.

Purging with inert gas

When emergency stop in gas mode or gas trip, fuel gas in double walled gas pipe should be purged out with inert gas (nitrogen). The inert gas for purging of fuel gas piping is supplied through gas regulating unit according to purging sequence controlled by ECS (Engine control system).

Gas vent line

Fuel gas vent line should not be common with any other pipes to prevent unintended gas flowing to the other engines due to risk for backflow of gas and it should be led to open space with non-hazardous area where there are no any ignition sources. Please refer to relevant rules and class regulation for further requirements regarding gas vent line.

Annular intermediate space volume for Enclosure : 950 liter

6.9 Fuel gas specification

Fuel gas characteristics

For continuous operation without reduction at the rated output, the fuel gas has to fulfill the below fuel gas quality requirements. In order to avoid operational problems such as de-rating, corrosion, wear, lube oil contamination etc., the fuel gas composition must be submitted to the engine manufacturer.

Table 6.21 Fuel gas characteristics

Property	Unit	Value
Lower calorific value (LCV), min. ³⁾	MJ/Nm ³ 1)	28
Methane number (MN), min. ²⁾	-	70
Methane (CH ₄) content, min	Vol %	75
Total content of C3, C4, C5, C6, Heavier, max (Propane, Butane, Pentane, Hexane, Heptane, Octane, Cetane ...)	Vol %	3
Particles or solids at engine inlet, max	μm	5
Particles or solids at engine inlet	mg/Nm ³	50
Hydrogen sulphide content (H ₂ S), max	mg/Nm ³	30
Gas inlet temperature	°C	0 ~ 50
Oil content, max	mg/Nm ³	0.01
Water or liquids	Condensate not allowed at engine inlet	

1) Reference condition for the volume designation Nm³ (Temperature 0 °C, Atmospheric press. 1.013 bar)


2) The MN of the fuel gas is to be calculated by using "AVL Methane version 3.20 " of AVL's software.

2) 3) HHI-EMD has to be contacted for further evaluation, in case the lower heating value is in the range of 28 ~ 36 MJ/Nm³ or the MN is in the range of 70 ~ 80.

7 Lubricating oil system

7.1 Internal lubricating oil system

Diagram for Internal lubricating oil system

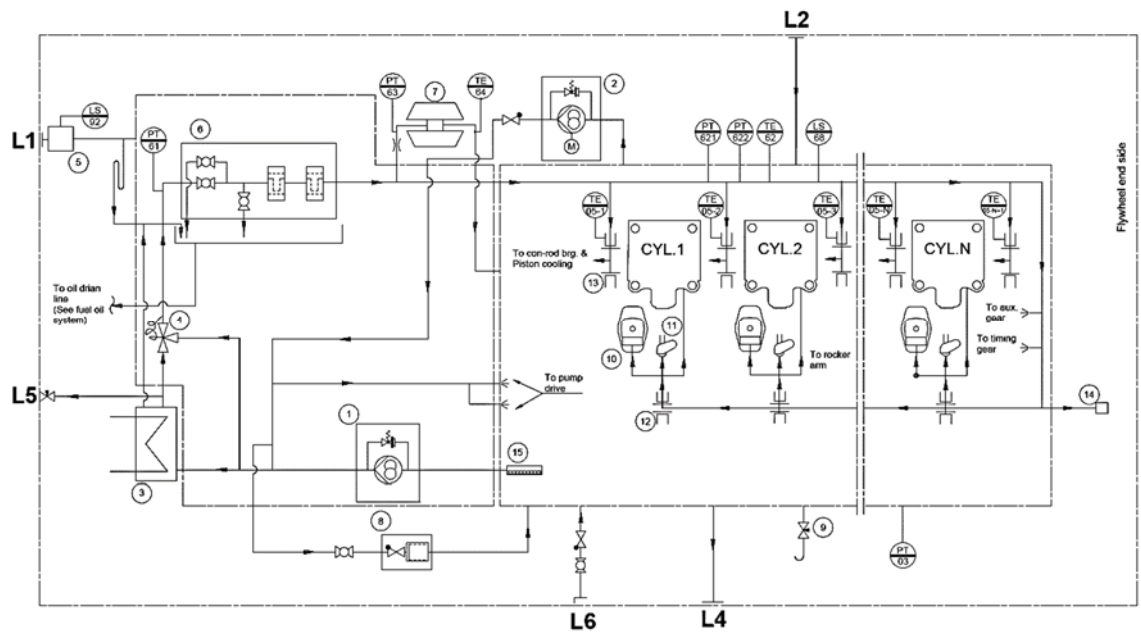

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 7.1 Diagram for internal lubricating oil system [BP0068436-0.1]

Table 7.1 Sizes of external pipe connections

Code	Description	Size
L1	Oil mist gas outlet	5K-80A
L2	Lubricating oil from separator	5K-25A
L4	Lubricating oil to separator	5K-25A
L5	Lubricating oil to C.W. auto shut off valve(option)	OD Ø8
L6	Inert gas supply to crankcase	Quick coupler (Ø12)

1. Connection size is according to JIS B 2220.

Table 7.2 System components

No	Description	Remark
1	Eng. Driven lub oil pump	
2	Ele. Motor driven pre-lub oil pump	
3	Lub oil cooler	
4	Lub oil thermostatic valve	60/69°C
5	Oil mist detector	
6	Lub oil fine filter	1 st : 15µm, 2 nd : 60µm Chamber : 2EA
7	Turbocharger	
8	Centrifugal by-pass filter	
9	Lub oil sampling valve	
10	Fuel pump drive	
11	Valve drive	
12	Cam shaft bearing	
13	Main bearing	
14	Governor drive	
15	Suction mesh	

7.1.1 General description

The engine has its own internal lubricating oil system with the wet type oil sump, which supplies lubricating oil to all moving parts for lubricating as well as cooling. Most of oil passages are incorporated into engine components and equipment in the system, which are mounted directly on feed module without pipe connections.

The internal lubricating oil system comprises following equipment :

- ✓ Lubricating oil cooler
- ✓ Engine driven lubricating oil pump (with pressure regulating valve)
- ✓ Electric motor driven pre-lubricating pump
- ✓ Lubricating oil thermostatic valve
- ✓ Lubricating oil filter
- ✓ Wet sump tank
- ✓ Centrifugal oil filter
- ✓ Oil mist detector

Quantity of lubricating oil (wet sump)

Table 7.3 Total quantity of lubricating oil inside the engine

Engine type	Oil quantities in liter 900/1000rpm	
	Min.	Max.
5H22CDF	800	1000
6H22CDF	910	1140
7H22CDF	1020	1280
8H22CDF	1130	1420
9H22CDF	1240	1560

Lubricating oil consumption

Gas mode : 0.25 g/kWh

Diesel mode : 0.4 g/kWh

- ✓ Tolerance : +25 % depending on the operating condition
- ✓ Only maximum continuous rating should be used to evaluate the lubricating oil consumption.

Engine driven lubricating oil pump

The engine driven lubricating oil pump is a gear type, mounted on the feed module of the engine. The pump is designed to provide sufficient flow even at low speed.

Pre-lubricating oil pump

The pre-lubricating pump is gear type, and electric motor driven. The pre-lubricating pump is automatically started to operate when engine is stopped. And the pre-lubricating is required during the engine stop period if the fuel oil is circulating. In case that the automatic pre-lubrication has been switched off, the engine must be pre-lubricated sufficiently before starting up.

Lubricating oil cooler

The lubricating oil cooler is plate type, mounted on the feed module of the engine.

Thermostatic valve

The thermostatic valve is the wax element type, working at fixed temperature range of 60 ~ 69 °C, is mounted on the feed module of the engine.

Lubricating oil filter

The lubricating oil filter is duplex paper cartridge type, mounted on the feed module of the engine. Each filter has a safety cartridge of stainless steel.

- ✓ Paper cartridge fineness : 15 μm
- ✓ Safety cartridge fineness : 60 μm

Pressure regulating valve

The pressure regulating valve adjusts inlet pressure after lubricating oil filter at 4 ~ 5 bar and is mounted on feed module of the engine.

Centrifugal oil filter

Centrifugal oil filter can be mounted on engine. The centrifugal force is taken from the oil pressure.

Lubricating oil sump drain

It is recommended to use the separator suction pipe for draining of the lubricating oil sump.

7.2 External lubricating oil system

Diagram for external lubricating oil system

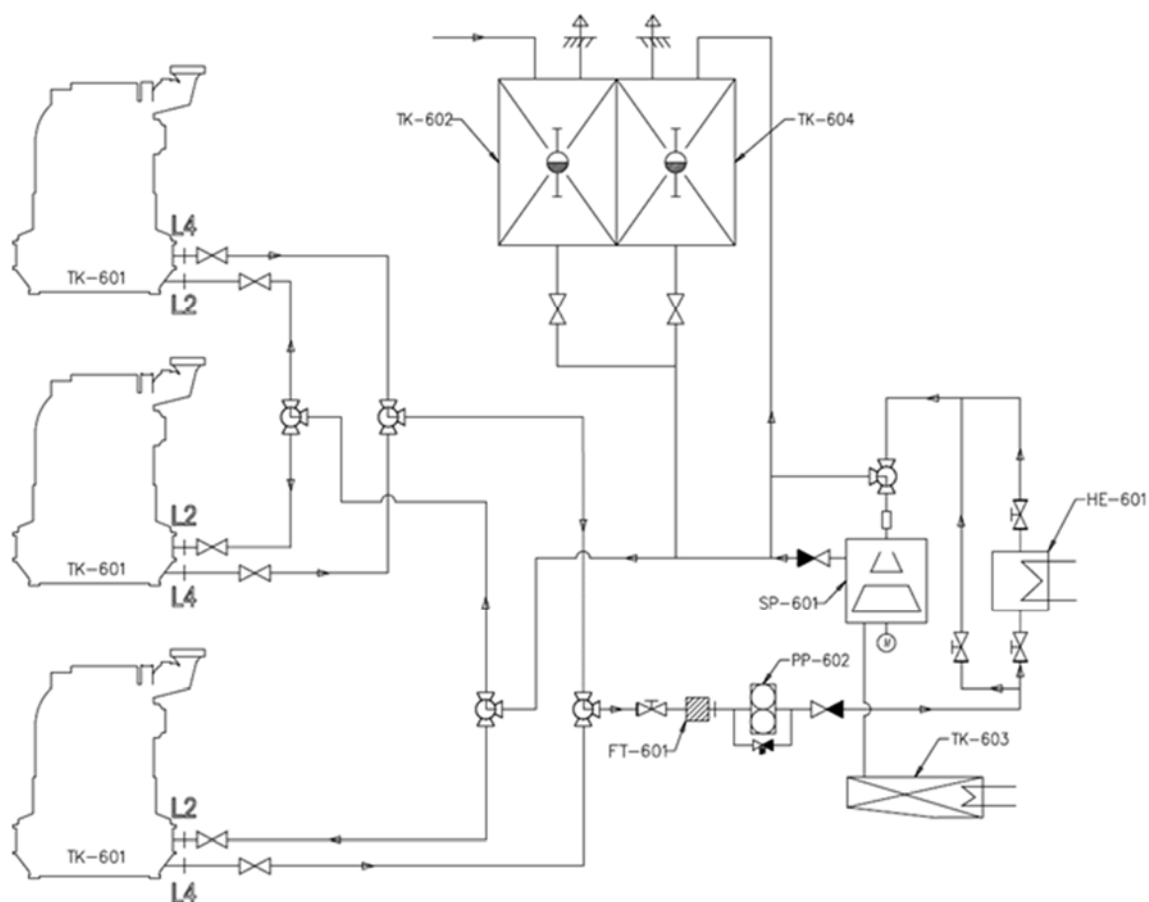


Figure 7.2 Diagram for external lubricating oil system

Table 7.4 System components

Code	Description	Code	Description
TK-601	System oil tank	HE-601	Pre-heater for the separator
TK-602	Storage tank	SP-601	Separator
TK-603	Sludge tank	PP-602	Feed pump for the separator
TK-604	Separated oil tank	FT-601	Suction strainer

7.2.1 General description

The external lubricating oil system is required for not only cleaning but also heating the oil to start the engine quickly. The system shall be used commonly for all auxiliary engines. Though filtering equipment built on engine shall be sufficient for the engine operating with natural gas or marine gas oil, the centrifugal purification is commonly required for marine diesel oil and heavy fuel oil operation.

7.2.2 Lubricating oil separator

Self-cleaning type or manual cleaning type separator can be used.

Separator capacity

The separators should be dimensioned for continuous operation and following formula can be used, as a guidance, for estimating the required flow for the separator capacity :

$$F = p \times 1.4 \times n / t$$

Where :

F (l/h) = required flow

p (kW) = total engine output

n = number of oil circulation per day (4 for marine diesel oil / marine gas oil / natural gas, 6 for heavy fuel oil)

t = actual separation time per day (Normally, 23 hour)

For the simple estimation, above formula can be expressed as follows :

$$F = 0.3 \times p \text{ (l/h)}$$

The below formula is used to find the rated capacity for the separator :

$$V = F / B \text{ (l/h)}$$

Where :

V (l/h)= rated capacity for the separator

F (l/h)= required flow

B = throughput factor (0.2 ~ 0.25)

Throughput factor (B) shall be in accordance with the separator maker's recommendations.

Separator installation

The separator should be in continuous operation while the engine is on running in order to ensure removal of contaminants as quick as possible. If possible, the separator should be in operation also when the engine on shut-down for the reducing of the contamination level. In the latter case, oil temperature for efficiencies of separation needs to be maintained through heaters. Those installations with their separation plant shut down during engine stop, should consider re-starting the separator prior to engine start-up because contamination (engine leaks, condensation) could occur during engine stop.

With multi-engine plants, It would be the best to install one separator per each engine (Figure 7.3). The cleaning systems of auxiliary engines are often designed such that the separator intermittently serves on engine at a time. If only one separator is in operation, the following layouts can be used (Figure 7.4).

Oil cleaning, the discharge depending upon the operating time between two periods of oil cleaning the discharge interval may have to be shortened during the first couple of hours. In this way the separator will be able to cope with the high level of contaminants at the beginning of the cleaning phase. The appropriate discharge interval has to be found by trial and error.

It is important that maintenance and operation of the separator should be performed according to the manufacturer's recommendations.

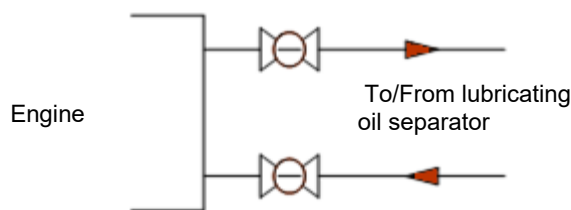


Figure 7.3 Principle layout for direct separating on single engine

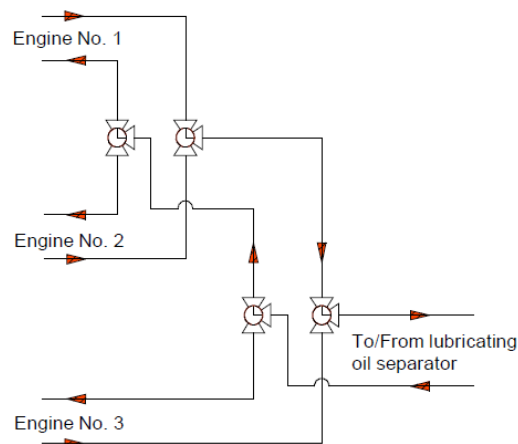


Figure 7.4 Principle layout for direct separating on multi engines

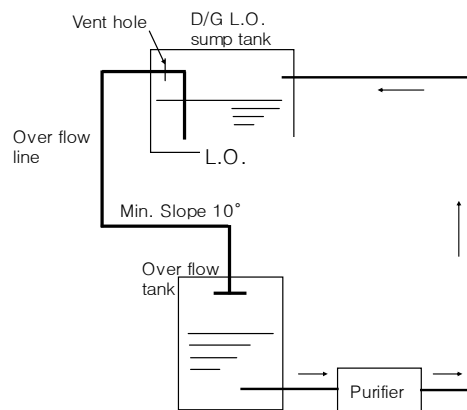


Figure 7.5 Principle layout for overflow system

It should be ensured that the separator is only connected with one engine at a time. In order to ensure that there is no suction and discharging from one engine to another.

To provide the mentioned above, it is recommended that inlet and outlet valves can be changed over simultaneously.

With only one engine in operation, there are no problems with separating, but if multi engines are in operation for some time, it is recommended to split up the time so that there is separation on all engines, which are operating in turns.

Overflow system

In some cases, overflow system can be applied as an alternative for continuous purification (Figure 7.5). In order to have a better syphon effect, the overflow pipe from sump to overflow tank should have a continuous downward gradient of min. 10 degrees without high and low point.

Suction strainer

0.8 ~ 1.0 mm mesh size of suction strainer should be inserted before the separator pump.

Pump for separator

The pump can be either directly driven by the separator or driven by an independent motor as recommended from a separator maker.

Heater for separator

The lubricating oil in wet sump tank and in the system is to be warm-up to 40 °C from the separator heater prior to engine starting. The lubricating oil in sump tank is to be heated-up to approx. 65 °C in engine service. Heater for separator is to be designed to heat the lubricating oil from 65 °C up to 95 ~ 98 °C according to separator maker's recommendation.

If the separation temperature is lowered from 95 °C to 90 °C, the separator throughput has to be reduced by 22 % to maintain the same separation efficiency.

7.2.3 Velocities and pressure losses

In order to prevent excessive pressure losses in the piping system, we recommend that the lubricating oil velocity should not exceed :

- ✓ Suction pipe : 0.5 ~ 1.5 m/s
- ✓ Pressure pipe : 1.0 ~ 2.5 m/s

7.2.4 Crankcase and tank ventilation

Ventilations on the engine and tanks must be provided with sufficient ventilation. The crankcase ventilation of the engine must be not connected to other ventilations such as tanks.

The arrangement should be as follows:

- ✓ When two or more engines are installed, the crankcase vent pipes shall be kept independently
- ✓ The crankcase vent pipes from each engine shall be led independently to a safe location outside of engine room which is distant place from any source of ignition. The pipes should not be connected to any other branch such as a tank vent, etc.
- ✓ Corrosion resistant flame screens shall be applied to each vent pipe.
- ✓ The vent pipes should have a continuous upward gradient of minimum 10 degrees without high or low points.
- ✓ The vent pipe should be equipped with condensate trap and drain within 1~2m from the engine.

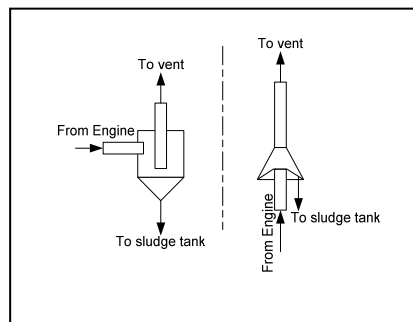


Figure 7.6 an example of condensation trap

- ✓ The connection between the engine and the vent pipes of the external system should be flexible if a resilient mounting is applied.
- ✓ The size of the crankcase vent pipes shall be equal or larger than engine side vent pipes. (See the “Figure 7.1 Diagram for internal lubricating oil system”, L1 connection.)
- ✓ The venting pipe on the tank should be arranged at the corners of the tank or at the ends of the tank to secure venting at any trim of the vessel. It shall be recommended to have minimum two lines with opposite corner each other.
- ✓ The oil mist should not be flowed into suction air from outside intake duct (for outdoor type) or engine room (for indoor type)
- ✓ The lubricating oil mist with gas and air would be vent out from crankcase lube oil mist vent line during the gas mode operation.
- ✓ Inert gas purging in the crank case is required manually before crankcase door open through L6 connection. The volume of the inert gas is referred to [6.7.3 purging with inert gas]

If a manifold arrangement is used, in order to avoid the high back-pressure in the system, the arrangement should be as follows additionally:

- ✓ Generator engine's vent pipes could only be connected to the manifold for D/G engines. The vent pipes for a main engine and any other piping system must be not connected to the manifold.
- ✓ The vent pipes from each engine shall be led independently to the manifold.

- ✓ The manifold is to be located as high as practicable so as to allow the substantial length of piping separating the crankcase.
- ✓ The manifold shall be vented to the top of funnel, such that the vent outlet is fitted with the corrosion-resistant flame screens.
- ✓ The clear open area of the vent outlet is not less than the aggregate area of the individual crankcase vent pipes entering the manifold.
- ✓ The manifold shall be provided with a drainage arrangement.

7.2.5 Crankcase gas detection

The crankcase of trunk-piston type and Otto cycle gas fueled engine may contain very small amount of fuel gas due to blow-by gases. In case that the gas detection in the crankcase is required by classification societies, a shipyard should install a gas detection system in the crankcase vent pipe after the engine.

- ✓ The gas detector should be located away from the crankcase vent connection of the engine and recommended to be installed on the sampling line fitted on the crankcase vent in parallel.
- ✓ The appropriate arrangement should be considered to prevent the gas detector from being contaminated by oil vapor and/or particles.
- ✓ The gas detector should be selected and calibrated according to the detector maker's recommendation based on components and characteristics of mixed gas in the crankcase.

For example, Consilium's Band B type gas detector(*) has to be calibrated in accordance with the below table provided by Consilium's guidance.

(*) The Band B type gas detector may be physically marked as Searchpoint Optima Plus gas detector. The Honeywell's Searchpoint Optima Plus gas detector is supplied to Consilium, and Consilium renames the gas detector as Band B type.

Gas	Calibration gas concentration	Detector response at calibration
Methane (CH ₄)	70% LEL	42% LEL
	50% LEL	30% LEL

Remark: LEL - Lower explosive limit

The values are only for reference and it is not guaranteed by an engine manufacturer. Therefore, please contact to the gas detector maker which is installed on the external system for appropriate values for each gas detector.

- ✓ The gas detector's alarm level should be arranged by the yard according to the classification societies' requirement for the gas fueled internal combustion engines.

7.3 Lubricating oil specification

7.3.1 Oil grade

The medium-alkaline, heavy duty (HD) oils in API-CD class have to be used for HiMSEN engine including turbocharger lubrication. Please refer to the Table 7.4.

7.3.2 Oil viscosity

The oil viscosity is based on SAE 40 oil and recommended to be 145 mm²/sec. at 40 °C.

Initial oil heating to 40 °C is necessary prior to engine start.

7.3.3 Governor oil grade

In case of the hydraulic governor, an independent oil system is required. For further information, please refer to the Table 7.7.

BN value

BN (Base Number) is a measure of the alkalinity or basicity of the oil. It is expressed in milligrams of potassium hydroxide per gram of the oil (mg KOH/g).

Alkalinity in lubricating oil is necessary to neutralize the acidic combustion products coming from the sulfur in fuel. Therefore, lubricating oil with suitable BN should be selected to maintain proper balance between alkalinity in lubricating oil and the sulfur level in fuel after consulting with lubricating oil supplier or specialist.

- ✓ High sulfur fuel + low BN lubricating oil
→ Excessive corrosive wear
- ✓ Low sulfur fuel + high BN lubricating oil
→ Excessive top land deposit formation,
→ Lacquering formation on cylinder liner surface

7.3.4 Lubricating oil selection

The general lubricating oil BN selection strategy is to match the lubricating oil with the fuel sulfur contents (%). Because BN decreases at various rates in each engine and condition, lubricating oil consumption also should be considered to have sufficient equilibrium during operation.

DF engines can be operated using natural gas, distillate fuel and residual fuel, and these fuels have different sulfur level.

For the recommendation considering the lubricating oil BN, please refer to the following table. If DF engines are operated in turn on three fuels with natural gas as main fuel and distillate / residual fuel as auxiliary fuel, limitations of auxiliary fuel should be followed based on residual fuel.

Refer to the 6.4 and 6.9 for specification of fuel oil and fuel gas.

Table 7.5 Recommended BN for DF engine operation cases

Aux. fuel \ Main fuel		Natural gas	
		No sulfur	
Natural gas	No sulfur	BN 3 ~ 7	
Distillated fuel (MGO / MDO)	- 0.1% S	BN 3 ~ 7 with limit ¹⁾	
	0.1 - 0.5% S	BN 3 ~ 7 with limit ¹⁾	
Residual fuel	ULSFO	- 0.1% S	BN 15 ~ 20 with limit ²⁾
	VLSFO	0.1 - 0.5% S	BN 15 ~ 20 with limit ³⁾
	HSHFO	0.5 - 3.5% S	BN 20 ~ 30 with limit ⁴⁾
		3.5 - % S	BN 30 ~ 40 with limit ⁵⁾

Table 7.6 Limitation (Allowed Max. operating hours)

Limit	X (Fuel kinds)	'X' fuel operating hours / Total monthly cumulative operating hours	Required BN
1	Distillated fuel	≥ 15 %	10 ~ 15
2	ULSFO	0 ~ 5 %	3 ~ 7
		5 ~ 10 %	10 ~ 15
		10 ~ 15 %	15 ~ 20
		≥ 15 %	20
3	VLSFO	0 ~ 5 %	3 ~ 7
		5 ~ 10 %	10 ~ 15
		10 ~ 15 %	15 ~ 20
		≥ 15 %	20 ~ 30
4	HSHFO	0 ~ 5 %	3 ~ 7
		5 ~ 10 %	15 ~ 20
		10 ~ 15 %	20 ~ 30
		≥ 15 %	30 ~ 40
5		0 ~ 5 %	3 ~ 7
		5 ~ 10 %	20 ~ 30
		10 ~ 15 %	30 ~ 40
		≥ 15 %	40 ~ 55

7.4 List of lubricants

Table 7.7 List of lubricants

Oil brand	Engines system lubricating oil			Governor oil
Oil company	Brand name	SAE	BN ¹⁾	
Shell	Mysella S3 N40	40	5	1) Same as engine system lubricating oil 2) Refer to the governor manual for detailed lubricating oil specification, volume of governor. 3) Initial filling : oil filled 4) Electrical (Digital) governor: not applied
	Mysella S5 N40		4.5	
	Shell Gadinia S3 40		12	
	Shell Argina S2 40		20	
	Shell Argina S3 40		30	
	Shell Argina S4 40		40	
	Shell Argina S5 40		50	
TOTAL (Lubmarine)	Aurelia LNG	40	5	
	Nateria X 405		5.2	
	DISOLA M 4012		12	
	DISOLA M 4015		14	
	AURELIA TI 4020		20	
	AURELIA TI 4030		30	
	AURELIA TI 4040		40	
Chevron (Texaco, Caltex)	AURELIA TI 4055		55	
	HDAX 9700	40	5.8	
	DELO SHP 40		12	
	DELO 1000 Marine 40		12	
	TARO 20 DP 40(X)		20	
	TARO 30 DP 40(X)		30	
	TARO 40 XL 40(X)		40	
ExxonMobil	TARO 50 XL 40(X)		50	
	Pegasus 805 Ultra	40	5.4	
	Pegasus 805		6.2	
	Pegasus 1005		5.4	
	Pegasus 1105		6.2	
	Pegasus 1107		7.3	
	Pegasus 1		6.5	
	Mobilgard ADL 40, Mobil Delvac 1640		12	
	Mobilgard 412		15	
	Mobilgard M420		20	
	Mobilgard M430		30	
	Mobilgard M440		40	
	Mobilgard M50		50	
BP (Castrol)	CASTROL Duratex L	40	4.5	
	CASTROL MHP 154		15	
	CASTROL TLX 2-40		20	
	CASTROL TLX 3-40		30	
	CASTROL TLX 4-40		40	
SK Lubricants	CASTROL TLX 5-40		53	
	SUPERMAR 13TP 40	40	13	
	SUPERMAR 24TP 40		24	
	SUPERMAR 30TP 40		30	
	SUPERMAR 40TP 40		40	
LUKOIL	Navigo TPEO 12/40	40	12	
	Navigo TPEO 15/40		15	
	Navigo TPEO 20/40		20	
	Navigo TPEO 30/40		30	
	Navigo TPEO 40/40		40	
	Navigo TPEO 50/40		50	
	Navigo TPEO 55/40		55	

Oil brand	Engines system lubricating oil			Governor oil
Oil company	Brand name	SAE	BN ^{*)}	
Gulf Oil Marine	GulfSea Power MDO 4012, SeaLub Power MDO 4012	40	12	1) Same as engine system lubricating oil 2) Refer to the governor manual for detailed lubricating oil specification, volume of governor. 3) Initial filling : oil filled 4)Electrical (Digital) governor: not applied
	GulfSea Power MDO 4015, SeaLub Power MDO 4015		15	
	GulfSea Power MDO 4020, SeaLub Power MDO 4020		20	
	GulfSea Power 4030, SeaLub Power 4030		30	
	GulfSea Power 4040, SeaLub Power 4040		40	
	GulfSea Power 4055, SeaLub Power 4055		55	
ENI S.p.A.	AGIP CLADIUM 120	40	12	
	AGIP CLADIUM 300		30	
	AGIP CLADIUM 400		40	
	AGIP CLADIUM 500S		50	
Petronas	PETRONAS Disrol 12	40	12	
	PETRONAS Disrol 15		15	
	PETRONAS Disrol 300		32	
	PETRONAS Disrol 400		42	
	PETRONAS Disrol 500		51	
AEGEAN	ALFAMAR 430	40	30	
	ALFAMAR 440		40	
	ALFAMAR 450		50	
	ALFAMAR 455		55	
SINOPEC TPEO	SINOPEC TPEO 4012	40	12	
	SINOPEC TPEO 4015		15	
	SINOPEC TPEO 4020		20	
	SINOPEC TPEO 4030		30	
	SINOPEC TPEO 4040		40	
	SINOPEC TPEO 4050		50	
Hyundai Oilbank	Hyundai XTeer HGSL 40	40	4.5	
	Hyundai XTeer TPEO 4012		12	
	Hyundai XTeer TPEO 4015		15	
	Hyundai XTeer TPEO 4020		20	
	Hyundai XTeer TPEO 4030		30	
	Hyundai XTeer TPEO 4040		40	
	Hyundai XTeer TPEO 4050		50	
Gazpromneft Lubricants	Gazpromneft Ocean TPL 1240	40	12	
	Gazpromneft Ocean TPL 1540		15	
	Gazpromneft Ocean TPL 2040		20	
	Gazpromneft Ocean TPL 3040		30	
Petro-Canada	Sentinel 445	40	4.7	
Oil volume	See the separate data for sump volume as per each engine type.			UG-25+: 2.1 Liter


1. This list is given as guidance only.

*) Refer to Table 7.4 when selecting BN value.

8 Cooling water system

8.1 Internal cooling water system

Diagram for internal cooling water system

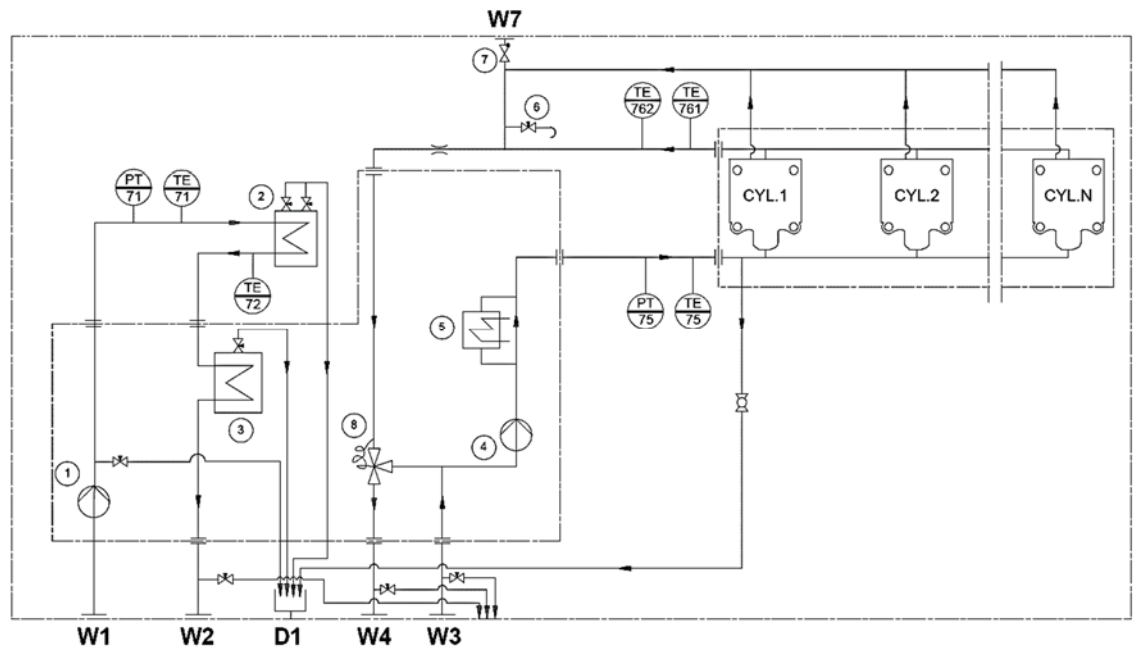

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 8.1 Diagram for internal cooling water system [BP0068578-0.0]

Table 8.1 Sizes of external pipe connections

Code.	Description	Size
W1	Low temperature cooling water engine inlet	100A
W2	Low temperature cooling water engine outlet	100A
W3	High temperature cooling water engine inlet	100A
W4	High temperature cooling water engine outlet	100A
W7	Ventilation to expansion tank	25A
D1	Water drain	Ø25

1. Connection size is according to JIS B 2220.

Table 8.2 System components

No	Description	Remark
1	Eng. Driven LT pump	
2	Charge air cooler	
3	Lub oil cooler	
4	Eng. Driven HT pump	
5	Electric pre heater	
6	Air venting valve	
7	Non return valve with hole	
8	HT Thermostatic valve	79/88°C

8.1.1 General description

The engine has two cooling water circuits internally, which are low temperature and high temperature water circuits. Most of the components of circuits are modularized and directly mounted on the feed module. Please refer to Figure 2.4.

Low temperature water circuit comprises :

- ✓ Engine driven pump
- ✓ Charge air cooler
- ✓ Lubricating oil cooler

High temperature water circuit comprises :

- ✓ Engine driven pump
- ✓ Engine water jackets and cylinder heads
- ✓ Wax type thermostat, dividing type (temp. range : 79 ~ 88 °C fixed)

Scope of supply

The internal cooling system consists of the following built-in equipment :

- ✓ Engine driven low temperature cooling water pump
- ✓ Engine driven high temperature cooling water pump
- ✓ One stage charge air cooler
- ✓ High temperature cooling water control thermostatic valve
- ✓ Electric pre-heater unit or electric pre-heater element on engine (option)

8.2 External cooling water system

Diagram for external cooling water system

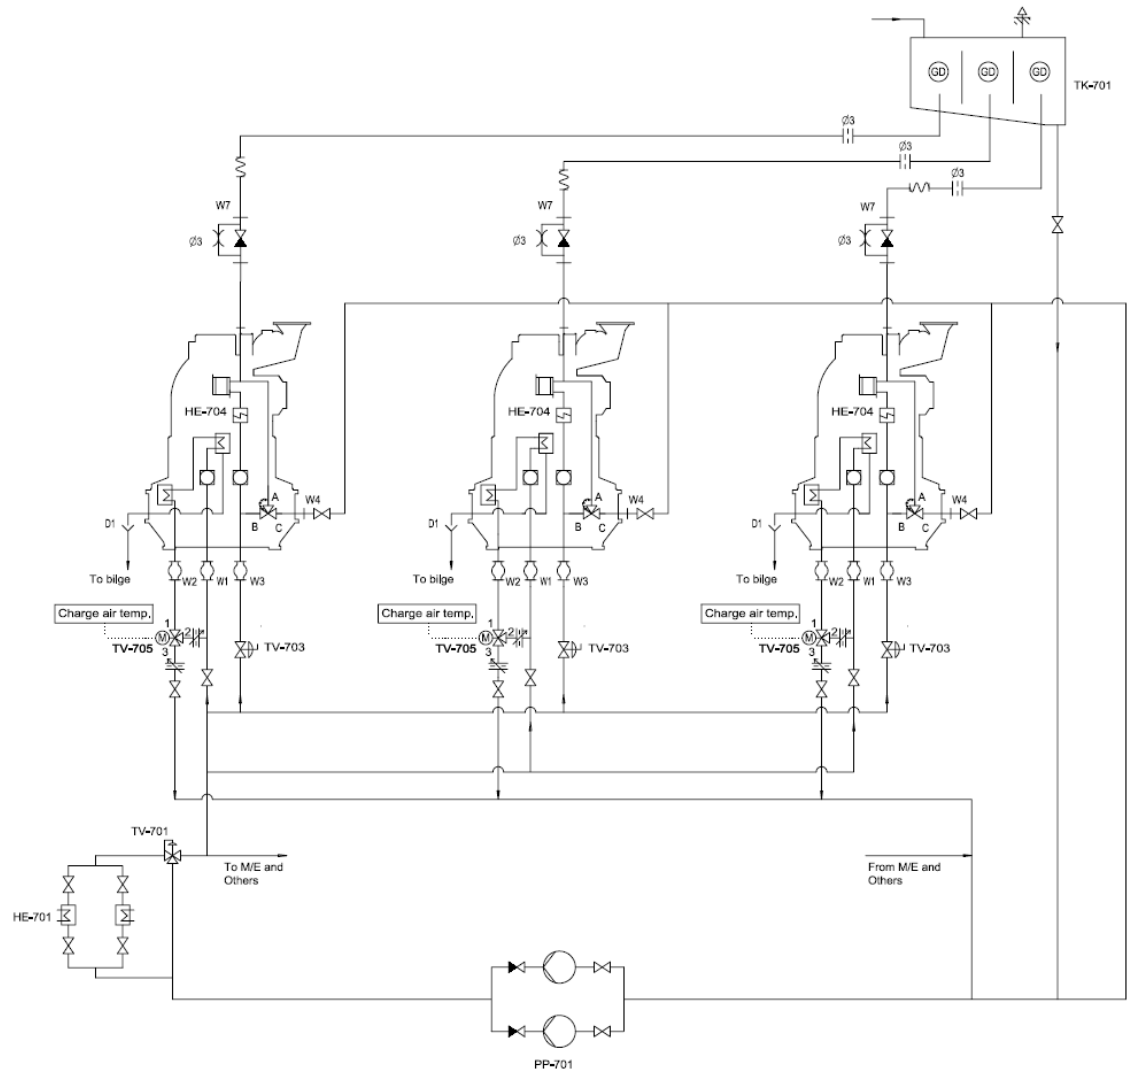


Figure 8.3 Diagram for external cooling water system with electric pre-heating element (B92-325134-8.1)

Table 8.3 System components

Code	Description	Code	Description
TK-701	Expansion tank	TV-703	Auto shut-off valve
HE-701	Central cooler	TV-705	Thermostatic valve for low temperature cooling water
HE-704	Electric pre-heating element	PP-701	Circulation pump for fresh water
TV-701	Thermostatic valve for central cooling		

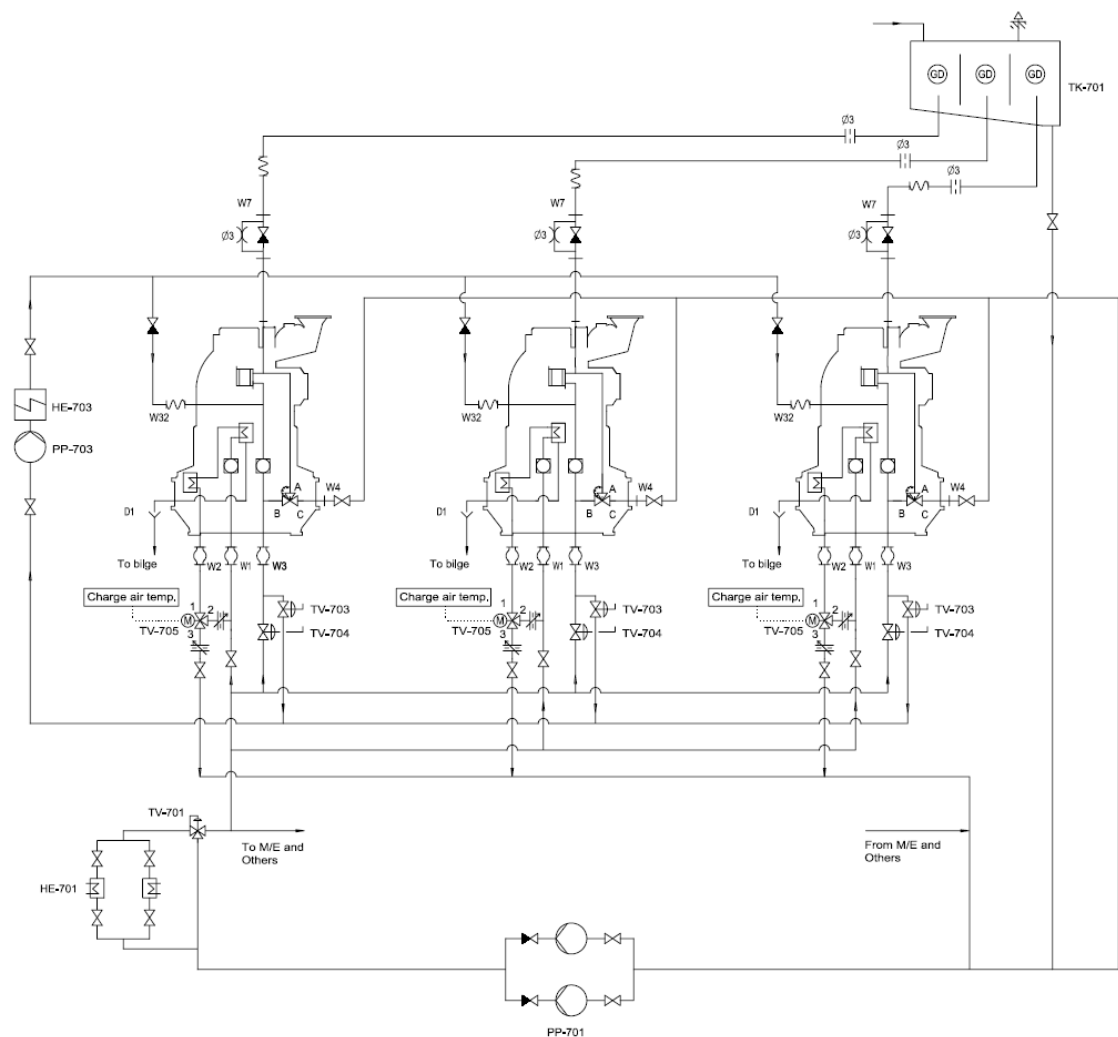


Figure 8.4 Diagram for external cooling water system with pre-heating unit (B92-325135-0.3)

Table 8.4 System components

Code	Description	Code	Description
TK-701	Expansion tank	TV-703/704	Auto shut-off valve
HE-701	Central cooler	TV-705	Thermostatic valve for low temperature cooling water
HE-703	Preheater for high temperature cooling water	PP-701	Circulation pump for fresh water
TV-701	Thermostatic valve for central cooling	PP-703	Circulation pump for preheating

8.2.1 General description

Pressure drop

- ✓ Engine high temperature cooling water system : approx. 0.5 bar
- ✓ Charge air cooler : approx. 0.5 bar
- ✓ Lubricating oil cooler : approx. 0.2 bar
- ✓ Thermostatic valve : approx. 0.5 bar

(These values shall be different depending on the actual design of each vessel or plant.)

Fresh water velocity

- ✓ Max. 2.5 m/s

Sea water velocity

- ✓ Suction pipe : 1.0 ~ 1.5 m/s
- ✓ Delivery pipe : 1.5 ~ 2.5 m/s

Expansion tank

To avoid cavitation in cooling water system, a certain suction head for engine driven high temperature cooling water pump is required as follows :

- ✓ Minimum head : 0.5 bar (5 meters above the crank shaft level)
- ✓ Tank volume : 100 liter + α^1

1. α : Min. 10% of high temperature cooling water and low temperature cooling water volume of each engine(s).

Table 8.5 Cooling water volume of the engines

Engine type	High temperature cooling water and low temperature cooling water volume
5H22CDF	247 liter
6H22CDF	265 liter
7H22CDF	282 liter
8H22CDF	300 liter
9H22CDF	317 liter

In unusual situation, the fuel gas could be enter into expansion tank. This unburned gas should be vent out through ventilation pipes to the safe zone on the open deck.

Central cooling

The central cooler for fresh water can be of the tube or plate type, which can be common for several engines or separate for each engine.

1) Fresh water side

- ✓ Flow quantity and heat dissipation : Refer to '3.2 engine capacity data'.
- ✓ Pressure drop : maximum 0.5 bar.
- ✓ Pump : centrifugal type (Electric motor driven)
- ✓ Water temperature before engine : 36 °C

2) Sea water side

- ✓ Flow quantity : 1.1 ~ 1.5 times of fresh water flow
- ✓ Pressure drop : 1.0 ~ 1.5 bar

8.2.2 Cooling water pressure of engine inlet

Pressure of engine inlet should be kept under 2.5 bar.

8.2.3 Cooling water

The cooling water system is designed for using normal fresh water with dosing corrosion inhibitor.

If sea water or other coolant system should be applied, please contact the engine maker separately in advance.

Pre-heating

In order to ensure start of engine and quick load up, pre-heating facility must be installed on the internal or external cooling water circuit. Pre-heating for all engines are required.
Pre-heating temperature :

- ✓ Marine diesel oil operation : minimum 40 °C
- ✓ Heavy fuel oil operation : minimum 60 °C

Electric pre-heating element (Option)

The mount type on the cooling water preheating arrangement consists of a thermostat-controlled electric-heating element which is built in high temperature cooling water circuit located on the engine's Feed Module. The pre-heater is activated by thermostat at 60 °C which provides water (60 °C) to jacket water outlet.

Table 8.6 Recommended capacity of pre-heater

Cyl.	Electric pre-heater (kW)
5	15
6	15
7	15
8	15
9	15

1. The baggiest capacity is applied for all cylinder for better heating effect.

Operation

Before the engine starts on heavy fuel oil / marine diesel oil, the engine jacket must be pre-heated by pre-heater.

It is recommended that the pre-heater is arranged for automatic operation, so that the pre-heater shall be disconnected while the engine is running and connected while the engine is stand-by condition.

When the engine is in standstill, an external valve for pre-heater must be shut off the cooling water inlet.

Preheating unit (Option)

External pre-heating unit comprising with the follows can be supplied as option :

- ✓ Electric
- ✓ Circulating water pump
- ✓ Control panel and circulating pump starter
- ✓ Switch on-off of heating media

The capacity of external pre-heater should be min. 2.0 ~ 3.0 kW per cylinder. The flow through the engine for each cylinder should be approx. 2.5 liter / min. with flow top and downwards.

Auto shut off valve must be installed on the external cooling water system to ensure preheating, which prevents cooling water from flowing into the engine during preheating.

Preheating of stand-by engine

When only one engine sets are in service and others in stand-by, cold cooling water should not be passed into the cooling jackets on stand-by engines, which will cause cold corrosion in cooling system.

Stand-by engines should be kept warm condition through heating source such as thermal heating through venting pipe from a running engine or pre-heater.

8.3 Cooling water quality and treatment

8.3.1 Quality of cooling water

The cooling of the engine should be done by only distilled (demineralized) or fresh water, which should be checked and treated to satisfy following requirements below table before adding corrosion inhibitor.

It is necessary for keeping effective cooling and preventing corrosion of the system.

Though the distilled water fully satisfy to the requirements for cooling water, it is necessary to add corrosion inhibitor before applying cooling water to engine cooling water system because untreated cooling water absorbs carbon dioxide from the air and then becomes corrosive.

Table 8.7 Quality of cooling water

pH	7 to 9
Total Hardness as CaCO_3	Maximum 75 ppm (mg/l)
Chlorides Cl^-	Maximum. 80 ppm (mg/l)
Sulphates as SO_4^{2-}	Maximum 100 ppm (mg/l)
Silica as SiO_2	Maximum 60 ppm (mg/l)
Residue after evaporation	Maximum 400 ppm (mg/l)

1. Chloride and Sulphate are corrosive even in the presence of an inhibitor.

Sea water or fresh water contaminated by sea water even in small amount is not allowed to be used as cooling water of the engine due to high risk of severe corrosion and deposits formation in the system.

Rainwater is heavily contaminated and highly corrosive in general, which is also not recommended as cooling water.

Tap water (drinking water) is not recommended as cooling water due to risk of chalk deposit formation inside the cooling system.

However, if the distilled water, for example from fresh water generator, is not available, tap water may be used as cooling water after softening and some other treatments according to the ingredients.

8.3.2 Treatment of cooling water

Cooling water should be treated properly and corrosion inhibitor should be added.

The analysis and treatment of cooling water are recommended to be carried out by experts. Otherwise, comply the treatment procedures strictly according to the instructions from the supplier.

The recommended products are listed in following table.

Table 8.8 Recommended products list

Manufacturer	Brand name	Constituent	Delivery form	Recommended Dosage
Chevron (FAMM)	DELO XLI(Havoline XLI)	Carboxylates	Liquid	75 liter / 1000 liter
VECOM	Cooltreat NCLT	Nitrite	Liquid	48 liter / 1000 liter
Wilhelmsen Chemicals	Rocor NB	Nitrite, Borate	Liquid	63 liter / 1000 liter
NALCO	NALCOOL2000, TRAC102	Nitrite, Borate	Liquid	128 liter / 1000 liter
	TRAC100	Molybdate, silicate	Liquid	17.5 liter / 1000 liter
	TRAC115,TRAC108	Nitrite, Borate	Liquid	28 liter / 1000 liter
GE	CorrShield NT4200	Nitrite	Liquid	30 liter / 1000 liter
Water and Process Technologies				
Shell	Shipcare Cooling Water Treat	Nitrite, Borate	Liquid	128 liter / 1000 liter
Drew marine	LIQUIDEWT	Nitrite	Liquid	24 liter / 1000 liter
	MAXIGARD	Nitrite	Liquid	64 liter / 1000 liter
Houghton	Tectyl CW-70N-TEA	Nitrite	Liquid	66 liter / 1000 liter


1. Follow the guidelines of corrosion inhibitor manufacturer for cooling water treatment.
2. Oily inhibitors adhere to cooling surface and influence cooling efficiency, which are not recommended for cooling water. Only nitrite-borate based inhibitors are recommended.
3. Some inhibitors may be toxic and hazardous. Strict control is required when handling inhibitors.

This page is intentionally blanked

9 Air and exhaust gas system

9.1 Internal compressed air system

Diagram for internal compressed air system

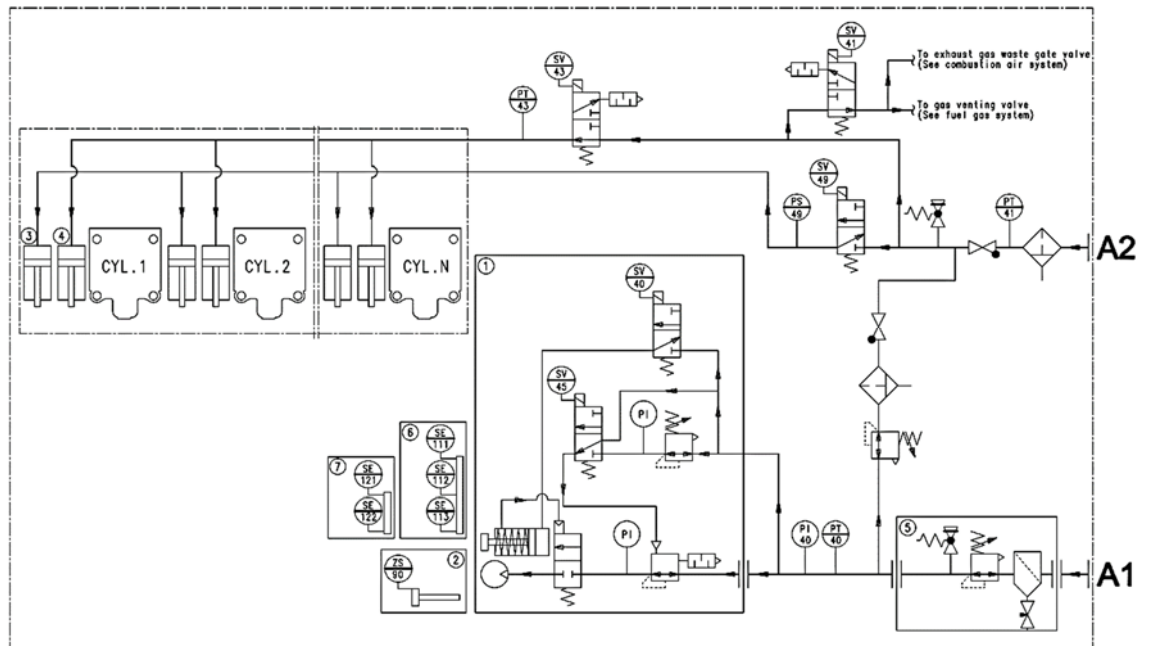

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 9.1 Diagram for internal compressed air system [B92-128952-9.1]

Table 9.1 Size of external pipe connection

Code.	Description	Size
A1	Starting air inlet	40A
A2	Control air inlet	15A

1. Connection size is according to JIS B 2220.

Table 9.2 System components

No	Description	Remark
1	Air starter	
2	Manual turning gear	
3	Fuel pump rack	
4	DVT pusher	

No	Description	Remark
5	SRS valve	
6	Crankshaft	
7	Camshaft	

9.1.1 General description

Compressed air is supplied for engine start, emergency stop, waste gate valve and gas ventilation valve as for the control air. In addition, the start block is activated in case of turning gear engagement. The detail information of engine operation is explained in the chapter '5. Operation and control system'.

Starting system

Starting system mainly consists of a relay valve, a starter's main valve, and an air starting motor. When the engine is started, the compressed air with the pressure of maximum 30 bar flows through the air start motor, then the motor turns a flywheel with a gear.

Engine stop

The emergency stop valve is incorporated into the main starting valve module. It is for immediate engine stop. In the emergency stop in diesel mode operation, emergency stop cylinder pushes the governor linkage not to move the fuel pump racks.

Jet assist

The jet assist system is used to improve the acceleration response of the engine. When the jet assist function is activated, the compressed air through a solenoid valve is injected through nozzle into the downstream right after a turbocharger compressor. It leads the acceleration of the turbocharger and consequently the engine response.

Scope of supply

The internal compressed air system consists of the following equipment :

- ✓ Engine starter complete
- ✓ Pressure reducing valve and air filter
- ✓ Solenoid valve for the jet assist
- ✓ Solenoid valve for shutdown
- ✓ Safety valve for DVT

9.2 External compressed air system

Diagram for external compressed air system

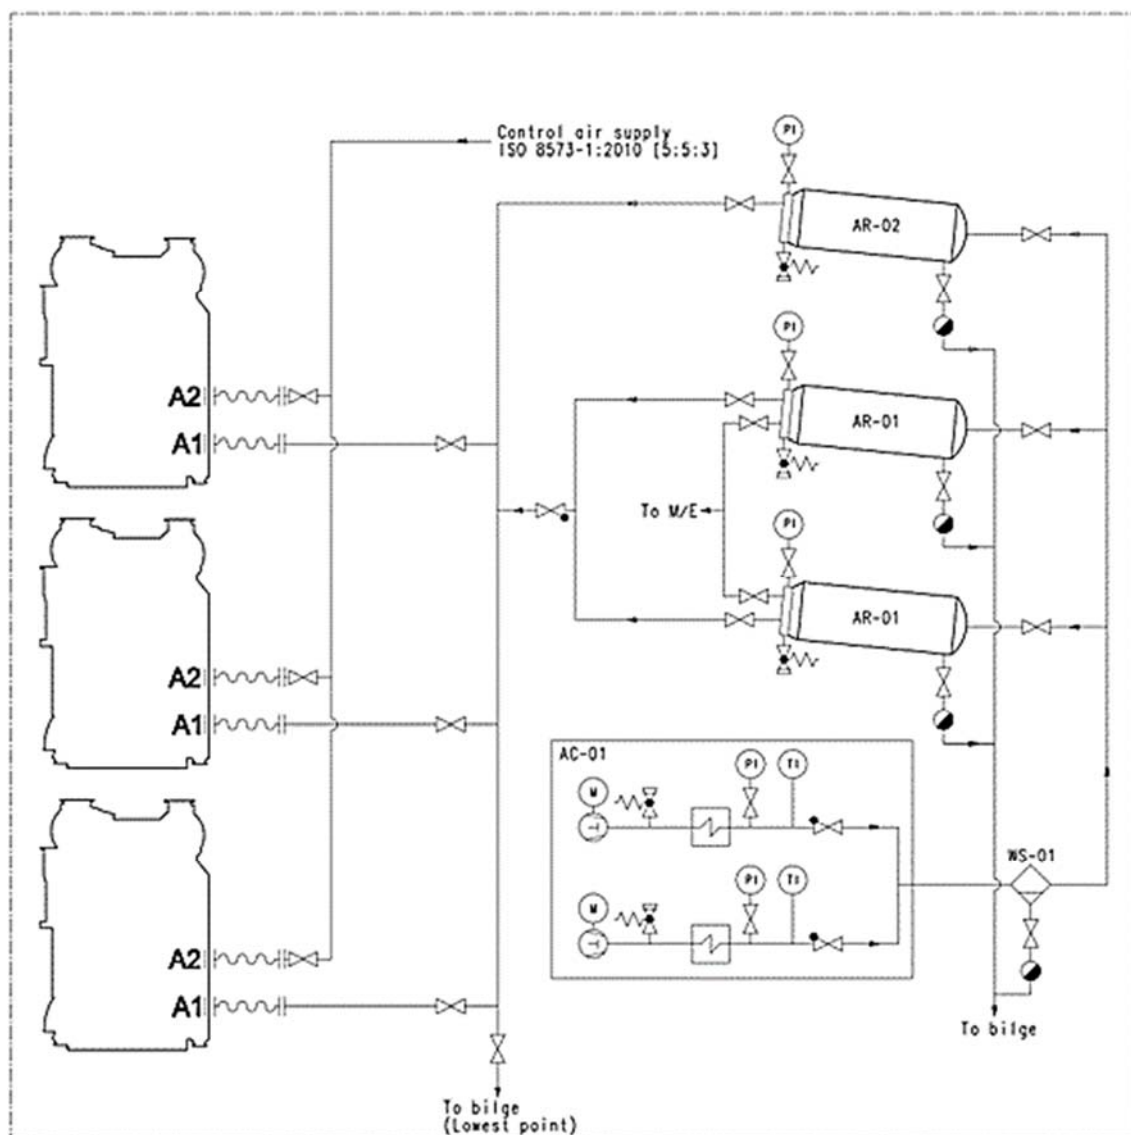


Figure 9.2 Diagram for external compressed air system

Table 9.3 System components

Code	Description	Code	Description
AR-01	Main air receiver	WS-01	Oil and water separator
AR-02	Aux. air receiver	AC-01	Main air compressor

9.2.1 General requirements

The maximum 30 bar for the compressed air system is required for engine operation. Therefore, all external supply system should be properly designed for this nominal pressure and also should satisfy the rules of corresponding classification society.

Dry and clean air is essential for the reliable function of the engine starting and control system.

Therefore, the compressed air supply system should include oil and water separating equipment. The air supply pipe to engine should also be arranged with slope and the water trap should be positioned at the lowest points.

9.2.2 Starting air volume of the engine

Air consumption per one start is specified in '3.2 engine capacity data'. The capacity of starting air vessel varies as per Classification Societies or Customer's requirement.

Volumes for three starts(include slow turn air volume) of one auxiliary engine are as follows;

Table 9.4 Starting air volume of the engines

Engine type	Volume (liter)
5H22CDF	680
6H22CDF	710
7H22CDF	750
8H22CDF	820
9H22CDF	840

9.2.3 Compressed air specification


To ensure reliable engine operation and prevent damage to the components in the compressed air system, the compressed air must be free from contaminants such as particles, water, and oil. The required compressed air specification is as follows;

Table 9.5 compressed air specification

Starting air (A1 conn.)	
Design pressure	30 bar
Working pressure	15~30 bar
Compressed air quality at engine connection	ISO 8573-1:2010 [7:8:X]
Control air (A2 conn.)	
Design pressure	10 bar
Nominal pressure	7 bar (Working pressure 6.5~8 bar)
Compressed air quality at engine connection	ISO 8573-1:2010 [5:5:3]
Consumption	Max. 2.5Nm ³ /h

9.3 Internal combustion air system

Diagram for internal combustion air system

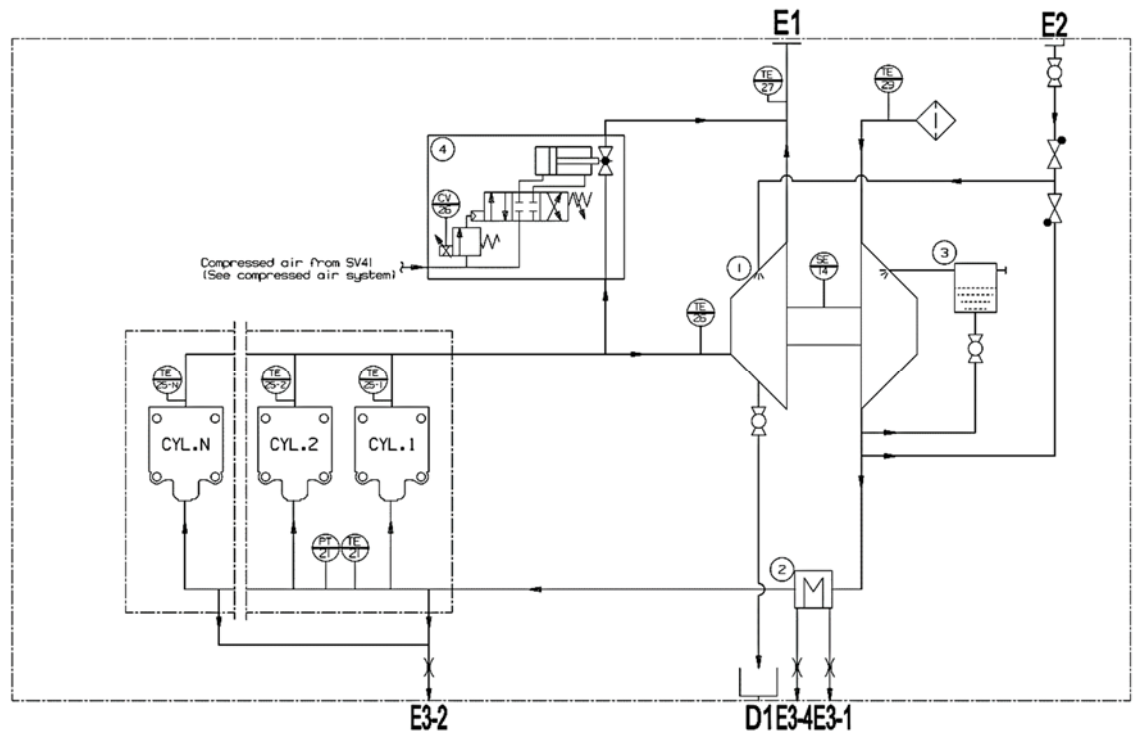

*) Supply scope and instrument will be determined by EOD(Extent of Delivery) and engine builder's standard.

Figure 9.3 Diagram for combustion and exhaust gas system [B92-128963-6.1]

Table 9.6 Size of external pipe connection

Code.	Description	Size	Remark
E1	Exhaust gas outlet	1)	Acc. to project
E2	Turbine cleaning water inlet	-	Quick coupler
E3 - 1	Condensate water drain (Water mist catcher)	OD Ø10	Bite type Conn.
E3 - 2	Condensate water drain (1st & last cylinder)	OD Ø10	Bite type Conn.
E3 - 4	Condensate water drain (A/C housing)	OD Ø10	Bite type Conn.
D1	Water drain	-	Acc. to project

1) See "Figure 9.4 External exhaust gas pipe connection".

Table 9.7 System components

No	Description	Remark
1	Turbocharger	
2	Charge air cooler	
3	Compressor washing device (Water vessel)	
4	EWG (Exh. Gas waste gate valve)	

9.3.1 General description

The air required for combustion is taken from the engine room through a filter fitted on the turbocharger. It is imperative that the combustion air be free from sea water, dust and fumes etc.

Turbocharger

Turbocharger is a radial type with high efficiency and mounted on the feed module of the engine. The water washing systems for the compressor and turbine are supplied as standard.

Charge air cooler

Charge air cooler is one stage low temperature cooled type. In general, sea water cooled type charge air cooler is not recommended.

Water mist catcher

Water mist catcher is installed between charge air cooler and air chamber of engine block.

Waste gate

Waste gate is a butterfly valve in an exhaust by-pass channel, which controls the amount of exhaust gas that passes through the turbine.

Air chamber

Air chamber is incorporated into the engine block with large volume for even distribution of induced air to each cylinder.

Exhaust pipe system

Exhaust pipe system is modular pulse converter (MPC) type, which has better performance at high load with a simple arrangement and easy maintenance.

Water drain pipes

Water drain pipes are installed for the air chamber and water mist catcher.

Charge air by-pass valve

Charge air by-pass valve can be installed as optional.

9.4 External combustion air system

9.4.1 General description

As the engines consume considerable amount of air in the engine room directly, or the outdoor intake air system is required, the design of combustion air is important not only for man-working but also for engine running. Various requirements are applicable depending on the ambient condition but the minimum requirements and recommendations for the engines are described as follows.

9.4.2 Combustion air

Arrangement of intake air pipes should be made to supply fresh air for engine combustion, which should be free from any risk of water spray, exhaust gas, dust, oil mist and electric equipment, etc.

In case of the engine room intake air system, the intake air temperature of the engine room would be increased by the radiation heat from the engines and generators. Therefore intake air ducts should be installed to face the air intake silencer for each turbocharger as close as possible.

In case of the outdoor direct intake air system, the independent intake air system should be applied for each turbocharger even for the case of engine with two or more turbochargers. A different intake air design for the engine of each project, please contact to HHI-EMD. The piping system of intake air should be considered to allow thermal expansion and harmful vibration to avoid stress of pipe. The end of deep slope position of intake air pipe, cleanable waste trap and water drain should be prepared.

Combustion air intake pipe system, the air velocity must not exceed 15 m/s during engine running. Prior to commissioning, the pressure loss must be checked at compressor side whether the depression of compressor air inlet must not exceed 200 mmWC as maximum. The measuring point is approx. 1 ~ 2 m before from the turbocharger air inlet casing.

Air consumption volume should be designed in accordance with '3.2 engine capacity data'.

Air filtration should be prevented from the outdoor's sand, cement, dust, and other particles. All particles size are not to be entered maximum 5 µm and above.

Oil bath type filter are generally used for the industrial area, cement plants, and sand winded area. Recommendable pressure loss of oil bath intake filter is 50 ~ 70 mmWC and even of fouled condition, it must be kept within 110 mmWC.

Environmental condition of maximum particle size of dust is typically applied depending on site.

- ✓ Non-industrial area in rain / dry condition : 0.8 / 2 µm
- ✓ Area of emissions, chimneys, work area : 60 µm
- ✓ Metropolitan area , residential / Industrial area : 7 / 20 µm
- ✓ Desert area, during sand storms : 500 µm

Ventilation of engine room

To determine the amount of air ventilation for an engine room, all heat sources of the engine room should be considered.

Total amount of ventilation of auxiliary engine = $Q_c + Q_r + Q_v$ (m³/h)

Where :

Q_c (m³/h) : Air required for engine combustion,

$Q_r = \frac{\text{Engine radiation heat (kJ/h)}}{\text{Air conditioning factor (} Q_a = 12 \text{)}}$

Q_v (m³/h) : Air required for other heat sources such as alternator and exhaust gas pipe , etc.

1. Should outdoor intake air system, and shut-off of air intake be necessary, a special provision is required as option.

9.5 External exhaust gas system

9.5.1 General description

Exhaust gas of the engine flows out from turbocharger to atmosphere via an external exhaust gas system, which may be comprised of expansion bellows, exhaust gas pipe, exhaust gas boiler (possibly) and silencer, exhaust gas ventilation unit, relief valve (or rupture disc), etc.

Independent exhaust gas system

Independent exhaust gas system should be prepared for each engine even for the case of common boiler system with other engines. In case of applied two or more turbochargers on a single engine, the exhaust gas pipes are recommended to be combined into a Y-type forked pipe. And each exhaust gas pipe have to be symmetric and each exhaust gas flow should be no interference.

Exhaust gas back pressure

Back pressure of the exhaust system in total is recommended to be less than 300 mmWC at maximum countious rating. The maximum back pressure should not exceed 500 mm WC at maximum countious rating. Please see the sheets '3.6 correction of fuel oil consumption' for the fuel consumption correction in case of exceeding 300 mmWC at maximum countious rating. The measuring position is approx. 1 ~ 2 m after the turbocharger gas outlet casing.

9.5.2 Velocity

External exhaust gas piping is recommended to be designed that velocity of exhaust gas through pipes should not exceed approximately 40 m/sec at maximum continuous rating.

Insulation

Insulation of the whole exhaust system is required for the safety and to reduce noise and loss of thermal energy, which, of course, should comply with requirements of classification society and other related authorities

9.5.3 Piping design for exhaust gas system

In order to have lower back pressure and thermal loss, following design consideration is required ;

- ✓ Pipe should be as short and straight as possible. Pipe bendings should be minimized and the bending radius should be as large as possible.
- ✓ A water separating pocket and drain should be provided on the pipe.
- ✓ Rigid (fixed) supports and movable supports must be provided considering the thermal expansion and vibration of pipes.
- ✓ The exhaust gas outlet of Turbocharger can be turned on request.

For more information, please refer to the sheet '9.6 external exhaust gas pipe connection'.

9.5.4 Expansion bellows

The expansion bellows has to be mounted between the turbocharger outlet and external exhaust gas pipe in order to compensate thermal expansion and mechanical vibration. The expansion bellows are supplied separately as standard. However, an additional expansion bellows may be required depending on the actual length of exhaust pipe in total.

1. The external exhaust pipe must not exert any force against the gas outlet on the engine.
2. The external exhaust pipe just on expansion bellows should be fixed rigidly so that turbocharger can be free from any forces from the external exhaust pipe.
3. The sturdy fixed-point support must be provided for the expansion bellows on the turbocharger. It should be positioned, immediately above the expansion bellows in order to prevent the transmission of forces, resulting from the weight, thermal expansion or lateral displacement of the exhaust piping, to the turbocharger.
4. The exhaust piping should be mounted with a slope towards the gas outlet on the engine. It is recommended to have drain facilities in order to be able to remove condensate or rainwater.

Installation procedure for expansion bellow

- ✓ The generating set (or engine) should be installed in its final position before any external pipes are connected.
- ✓ Remove the counter flange from the engine connection, if fitted.
- ✓ Fasten the counter flange temporarily to the outlet side of the bellows. For the correct orientation of the bellows (flow direction), see the dimensional drawing.
- ✓ Fasten the bellows to the engine temporarily.
- ✓ Align the external pipe to the counter flange. No axial, lateral or angular deflection of the bellows is allowed. Anchor the external pipe to the steel structure within 1 m from flange. Observe that the pipe clamping with bracket must be very rigid in order to prevent vibration and movement of the exhaust gas pipe. Most problems with bursting and vibration originate from poor clamping and support. Especially the support in the axial direction must be rigid.
- ✓ Put some temporary protection cover between the flanges in order to prevent debris from falling into the turbocharger.
- ✓ Tack weld the counter flange to the external pipe.
- ✓ Remove the bellows and weld the flange finally to the external pipe.
- ✓ Remove the protection cover. Place the bellows with gaskets between the flanges.
- ✓ Lubricate the threads of the connection screw with heat resistant grease and tighten first until finger tight. Finally tighten the screw in a diagonal sequence.
- ✓ Remove the guide bar between the flanges of the bellows.

9.5.5 Exhaust gas boiler

Thermal energy of exhaust gas can be utilized by boiler. Please refer to the sheets '3.2 engine capacity data' for the exhaust gas data. A boiler may be a separate unit for each engine or a common unit with other engines. In any cases, however, the exhaust gas line for each engine should be separated from other engine's exhaust gas lines.

The back-pressure through boiler should be minimized to be within limited level for total exhaust gas system.

9.5.6 Exhaust gas silencer

Exhaust gas silencer can be supplied as option on request. The noise attenuation of silencer shall be either 25 dB(A) or 35 dB(A). For more information, please refer to the sheets for '9.8 exhaust gas silencer with spark arrestor'

9.5.7 Exhaust gas ventilaton unit

The exhaust gas ventilation system is required to purge unburned gas through the exhaust gas system after stopping engine in gas operating mode.

The ventilation unit consists of a centrifugal fan, a pressure switch and a butterfly valve which can endure the high temperature of the exhaust gas system and should be designed to be gas-tight.

It is recommended to install the ventilation unit near the engine side, but the distance between the main stream of exhaust gas pipe and the ventilation unit should be kept over 2 meter.

Also, the branch pipe connection from the ventilation unit should not to head to the engine direction. The ventilation unit is controlled by engine control system automatically.

9.5.8 Relief valve (or rupture disc)

The relief valve (or rupture disc) is to be installed in the external exhaust gas system to discharge the over pressure caused by potential explosion effectively. The rupture disc outlet has to be located in the gas safe place far from ignition source.

9.6 External exhaust gas pipe connection

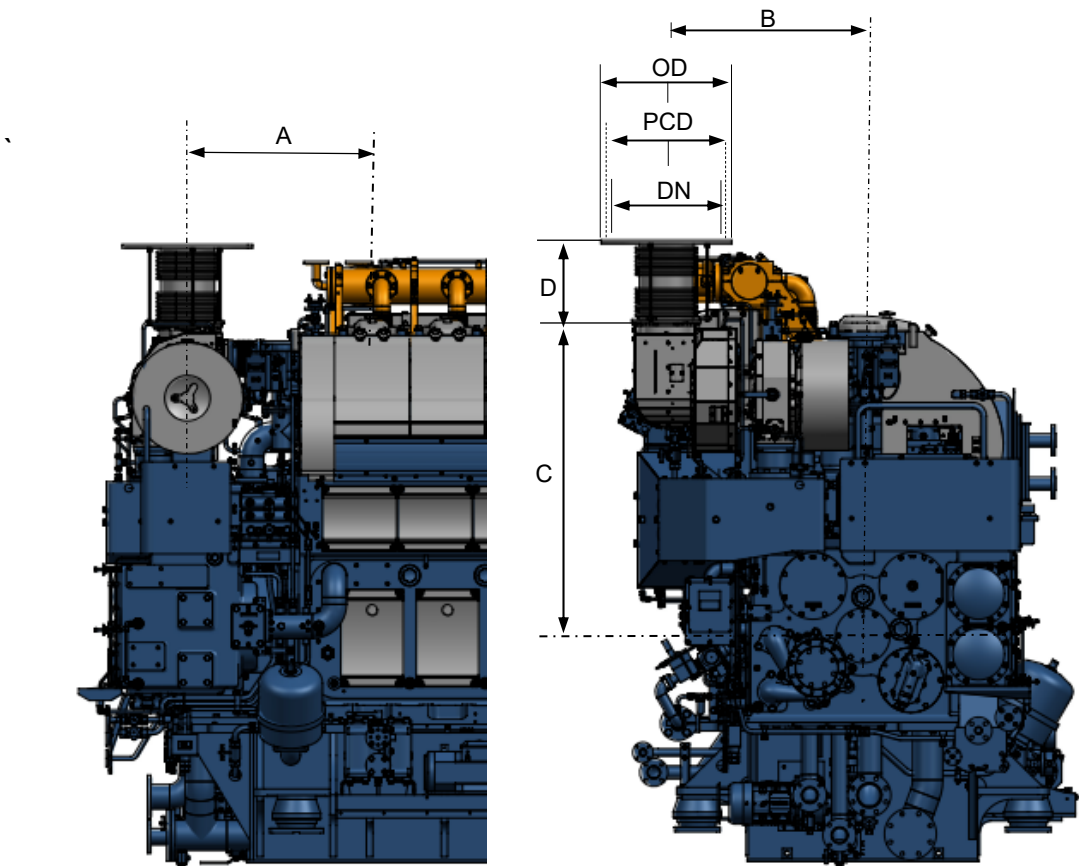


Figure 9.4 External exhaust gas pipe connection.

Table 9.8 Exhaust gas connection size

Engine type	Exhaust gas outlet position (mm)				Exhaust gas connection flange (mm)				
	A	B	C	D	DN	OD	T	PCD	N-d
5H22CDF	882	884	1429.5	354	400	540	18	495	16-Ø22
6H22CDF	856	908	1443.5	384	450	605	18	555	16-Ø22
7H22CDF	856	908	1443.5	384	450	605	18	555	16-Ø22
8H22CDF	893	962	1608.5	464	500	655	18	605	20-Ø22
9H22CDF	893	962	1608.5	464	500	655	18	605	20-Ø22

9.7 Approach of SCR (Selective Catalytic Reduction) system installation

9.7.1 General description

IMO NOx Tier III regulation was in effect from the year 2016 according to IMO's environmental policy, in which NOx emission should be reduced by 80 % level comparing to the IMO NOx Tier I. SCR system became one of proper solutions to meet the IMO NOx Tier III regulation.

The HiMSEN engine is able to be combined SCR systems provided by third parties. However, HHI-EMD recommends using Hyundai NoNOx SCR system for convenience such as testing NOx Scheme A test for EIAPP certificate and providing integrated technology. For detailed specifications of Hyundai NoNOx, please see the HYUNDAI HiMSEN ENGINE programme or contact to HHI-EMD.

Note !

The GAS mode operation of HiMSEN DF engines is met the IMO Tier III regulation without any aftertreatment equipment. However, if the diesel mode operation is required in emission controlled area (ECA), it should be installed an aftertreatment equipment such as the SCR in order to reduce the NOx emission on the vessel.

9.7.2 Boundary conditions for SCR operation

General boundary conditions for SCR operation :

Mode

- ✓ SCR operation is allowed in diesel mode, not gas mode

Main diesel fuel oil

- ✓ The diesel fuel for SCR should be selected according to the sulfur content in consideration of the sailing region and SCR specifications.

Exhaust gas temperature

- ✓ The minimum required temperature for SCR peration is determined by the sulfur content in fuel and SCR specifications.
- ✓ Exhaust gas temperature is controlled to increase by adjustable waste gate valve automatically for SCR active or ready condition.
- ✓ Exhaust gas SCR chamber bypass system need to be considered according to the gas mode exhaust gas temperature and SCR specifications.

Note !

When SCR units are installed, the heat loss of the exhaust gas pipe between engine and SCR chamber should be designed to be minimized in order to keep the required exhaust gas temperature. The supports of exhaust gas pipe should be designed and installed to minimize heat loss.

Maximum exhaust gas back pressure

- ✓ Allowable back pressure in total of the exhaust system to guarantee fuel consumption see the '9.5.1 General description'. It is not recommended that the exhaust gas's total back pressure exceeds 500 mmWC in diesel mode MCR (Maximum Countious Rating)

Other equipment installation such as exhaust gas boiler, silencer, etc. between the engine and the SCR chamber is not recommended in order to keep exhaust gas temperature.

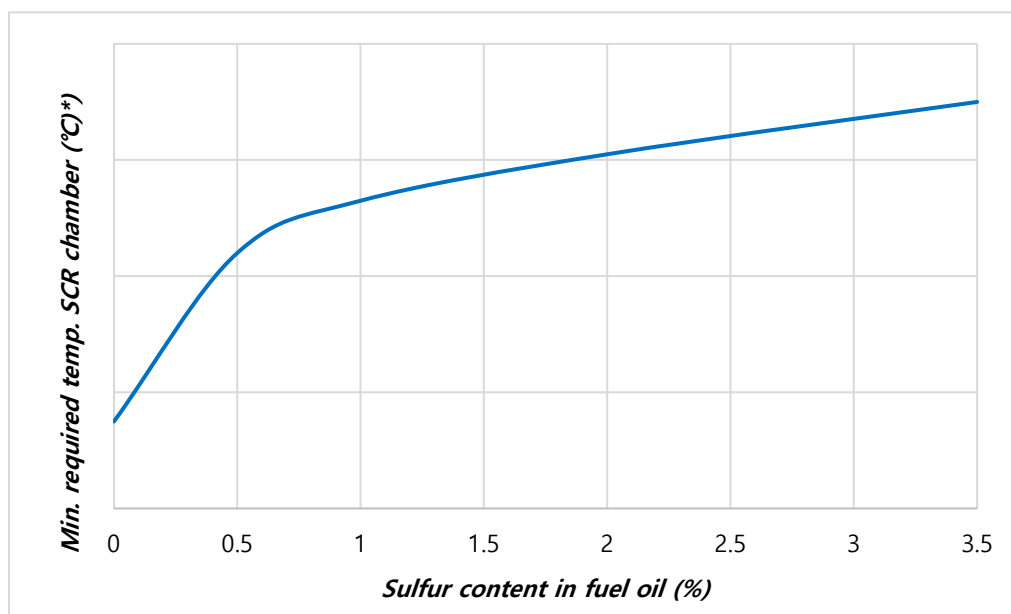


Figure 9.5 Minimum required exhaust gas temperature for SCR operation

*) The minimum required exhaust gas temperature for SCR operation is confirmed through the document from SCR supplier.

9.7.3 Operation and performance change

The HiMSEN DF engine is equipped with a waste gate valve as standard design in order to control air /fuel ratio in gas mode operation. As the SCR system is installed, the waste gate valve can be used in diesel mode to increase the exhaust gas temperature in the SCR operation at certain loads which is lower exhaust gas temperature.

The waste gate valve is activated when the exhaust temperature is lower than required temperature in SCR mode. At this time, the exhaust gas temperature will rise until target temperature and the fuel consumption will be slightly increased in proportion to the valve operation.

The performance of gas mode is no difference because SCR operation is not necessary.

9.7.4 Exceptionals

In exceptional cases of SCR installation, please contact to HHI-EMD.

9.8 Exhaust gas silencer with spark arrestor

The silencer is of an absorption type delivered with spark arrestor and mounting bracket, excluding insulation. The silencer can be mounted horizontally or vertically.

The gas flow passes through a straight perforated tube, surrounded with an efficient sound absorbing material. The silencer gives whereby an excellent sound attenuation suitable for even a wide operating range.

The gas pressure will be dropped into an approximate value shown on the graph, pressure loss vs. gas velocity.

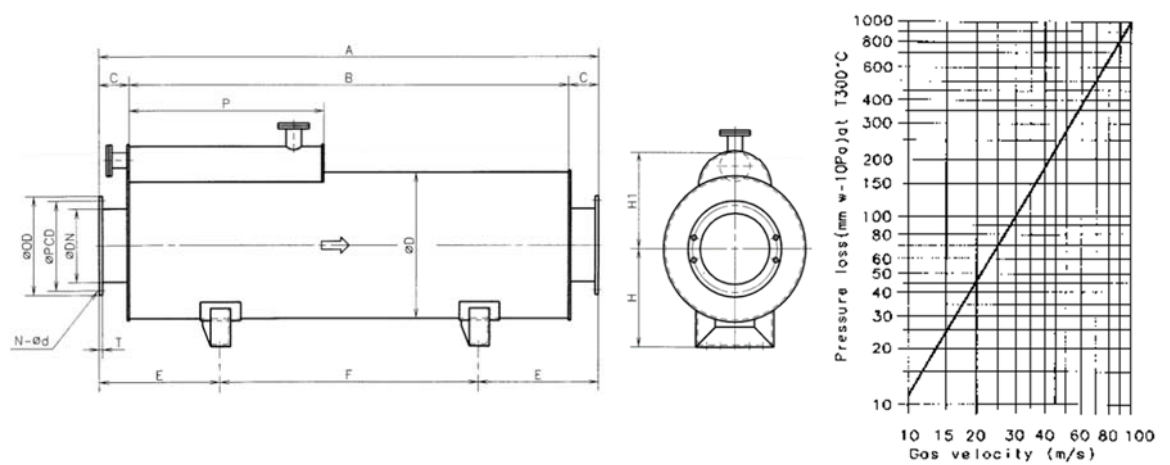


Figure 9.6 Exhaust gas silencer (25 dB type).

Table 9.9 Exhaust gas silencer size (25 dB type) (unit : mm)

Engine type	DN	A	B	C	D	E	F	
5H22CDF	400	3100	2800	150	760	700	1700	
6-7H22CDF	450	3400	3100	150	810	800	1800	
8-9H22CDF	500	3700	3400	150	860	850	2000	
Engine type	H	H1	P	PCD	OD	T	N-d	Weight (kg)
5H22CDF	520	514	1040	495	540	20	16-Ø25	580
6-7H22CDF	550	554	1100	555	605	16	16-Ø23	810
8-9H22CDF	600	582	1180	605	655	16	16-Ø23	920

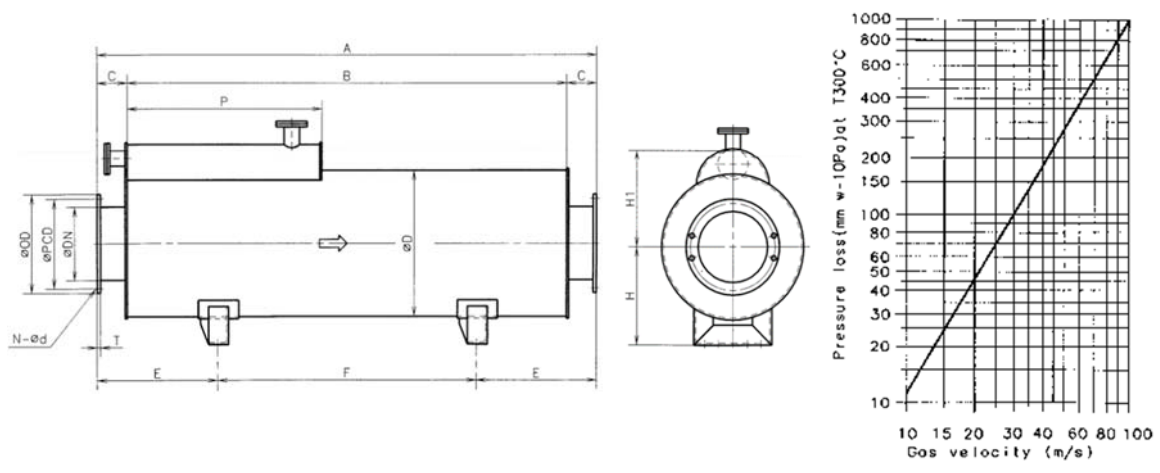


Figure 9.7 Exhaust gas silencer (35 dB type).

Table 9.10 Exhaust gas silencer size (35 dB type) (unit : mm)

Engine type	DN	A	B	C	D	E	F
5H22CDF	400	4500	4200	150	760	1200	2100
6-7H22CDF	450	4900	4600	150	810	1250	2400
8-9H22CDF	500	5400	5100	150	860	1350	2700

Engine type	H	H1	P	PCD	OD	T	N-d	Weight (kg)
5H22CDF	520	514	1040	495	540	20	16-25	650
6-7H22CDF	550	554	1100	555	605	16	16-23	900
8-9H22CDF	600	582	1180	605	655	16	20-23	1070

9.9 Generator information

Mounting of generator

As a standard design of H22CDF engine, the engine and generator are coupled with disc coupling and rigidly mounted on common base frame.

Generator bearing

Type of generator bearing is of single sleeve, self-lubricating type and mounted end of generator for H22CDF engine.

Optional design

As special arrangement, double sleeve bearing, forced lubricating of generator bearing, cooler and flexible coupling can be applied as an optional design on request.

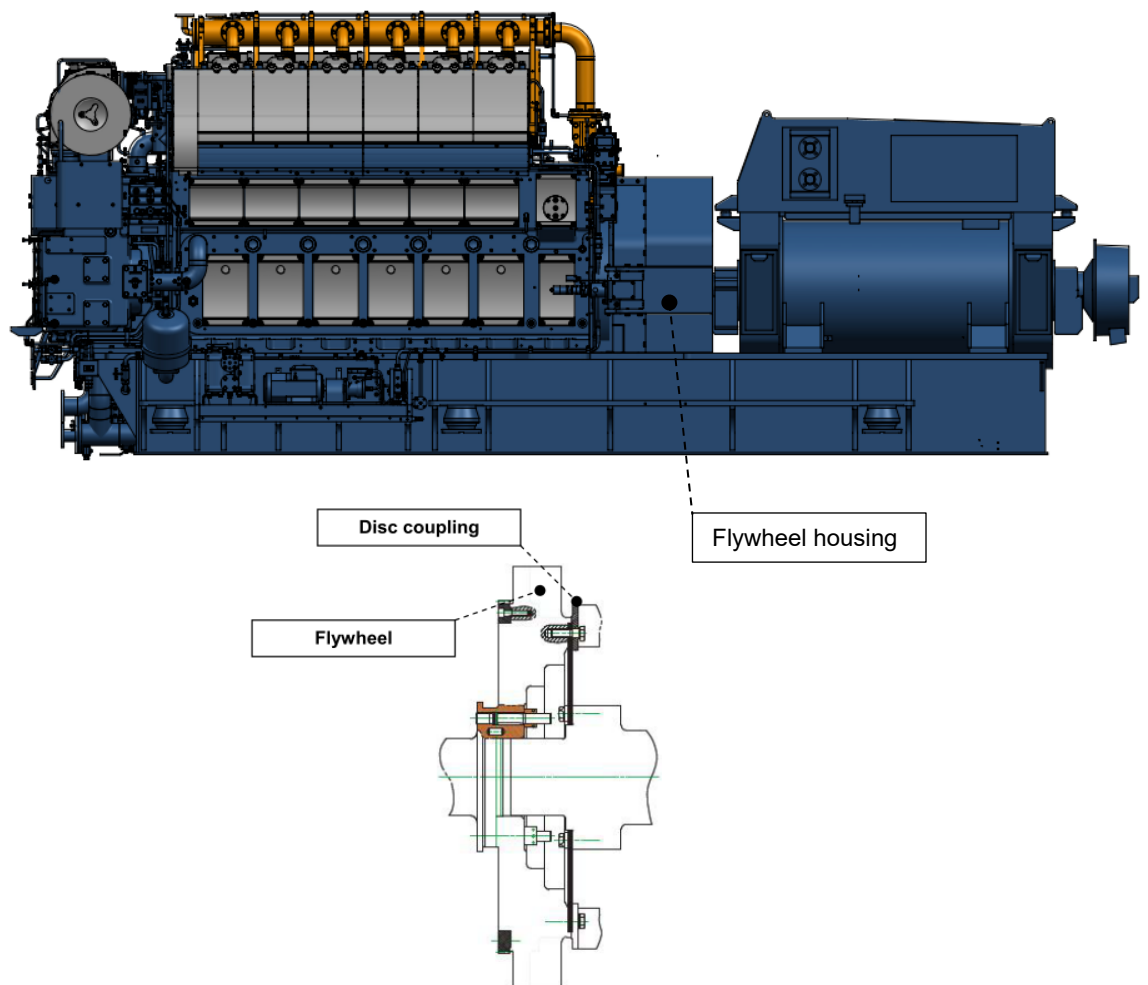


Figure 9.8 Disc coupling outline

This page is intentionally blanked

10 Engine maintenance

10.1 Maintenance schedule

Table 10.1 Maintenance guidance.

Section No.	Description	Overhaul interval (hours)										Remark
		Others	500 ^{*)}	2000	4000	8000	12000	16000	20000	24000	28000	32000

Major fasteners - confirmation

M11100	ACDF11100	Bolt for base frame and resilient mount		▲			◆						
G11100	-	Nut for resilient mount and foundation		▲			◆						
-	ACDF11100	Bolt for engine block and base frame		◆			◆						
M13250	ACDF13000	Hydraulic nut for main bearing cap		◆			◆						
M21100	ACDF13000	Hydraulic nut for cylinder head		◆			◆						
M25000	ACDF25000	Bolt and nut for camshaft		▲			◆						
M31000	ACDF32000	Hydraulic nut for connecting rod (Shaft)		◆			◆						
M31000	ACDF32000	Hydraulic nut for connecting rod (big-end)		◆			◆						
M33200	ACDF33100	Hydraulic nut for counter weight		◆			◆						
M35300	ACDF35000	Bolt and nut for timing gear		▲			◆						
-	ACDF81000	Bolt and nut for turbocharger mounting		▲			◆						

■ Expected life time ✓ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

1. When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.

2. The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No		Description	Overhaul interval (hours)											Remark
			Others	500 ^{*)}	2000	4000	8000	12000	16000	20000	24000	28000	32000	
Resilient mount														
M11100	ACDF11100	Resilient mount	●				●							**))
Major bearing														
M13250	ACDF13250	Main bearing					√				■			
M13250	ACDF13250	Thrust washer : axial clearance					◎						■	
M25000 /M25300	ACDF25300	Camshaft bearing : clearance					√		◎				■	
M32120	ACDF32000	Connecting rod bearing (big-end)					√		■		■			
M32130	ACDF32000	Connecting rod bearing (small-end)					√		■				■	
M35300	ACDF35000	Bearing bush for Idle gear : clearance							◎				■	

■ Expected life time √ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

**) During on board (site) commissioning, inspection is carried out by HHI-EMD service engineer.

1. When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.

2. The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No		Description	Overhaul interval (hours)											Remarks
			Others	500 ^{*)}	2000	4000	8000	12000	16000	20000	24000	28000	32000	
Cylinder unit and connecting rod														
M15100	ACDF15000	Cylinder liner					√		■					**)
M15100	ACDF15000	Flame ring					√		▣					
M21100	ACDF21100	Cylinder head					√		■					
M21120 /M21130 /M21200	ACDF21100 /ACDF21200	Intake/exhaust valve spindle, seat ring and valve guide : overhaul and reconditioning					√		■		▣			
M21210	ACDF21200	Intake/exhaust valve : clearance		●	●									
M21210	ACDF21200	Rocker arm shaft and bush					√		■					
M21220	ACDF21200	Rotocap			○				■					
M24100	ACDF24100	Dual valve timing					√		■					
M31100	ACDF31100	Piston rings					√		▣					
M31100	ACDF31100	Piston and piston pin					√		■					
M31101	ACDF32000	Connecting rod bore (big-end)					√		■					
M32130	ACDF32000	Piston pin and connecting rod (small-end) : clearance					√		■					
-	ACDF32000	Shim plate for connecting rod					√		▣					
-	ACDF32000	Stud for connecting rod shaft											▣	

■ Expected life time √ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

**) During on board (site) commissioning, inspection is carried out by HHI-EMD service engineer.

1. When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.

2. The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No	Description	Overhaul interval (hours)											Remark
		Others	500	2000	4000	8000	12000	16000	20000	24000	28000	32000	

Crankshaft and gears

-	ACDF33500	Flexible coupling (If applied)	▲										***)
M35300	ACDF33400 /ACDF35000	Timing gear and pump driving gear : clearance and backlash						◎					
M33100	ACDF33000	Crankshaft : deflection					◎						
-	ACDF33300 /ACDF42300	Gear teeth on flywheel and turning gear					▲						
-	ACDF33400	Torsional vibration damper : fluid sampling (only for viscous damper)						◎					***)

Valve operating mechanism

M23000	ACDF23000	Roller tappet and bush						■				■	
M25000	ACDF23000 /ACDF25000	Contact faces of cam and tappet roller camshaft bearing		▲			▲						

■ Expected life time ✓ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

***) See maker manual recommendation.

1. When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.
2. The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No		Description	Overhaul interval (hours)										Remark
			Others	500 *)	2000	4000	8000	12000	16000	20000	24000	28000	
Control system													
G40000	ACDF41000	Fuel control linkage : movement check	○										Weekly
G40001	-	Safety device : function check	○										Monthly
-	ACDF41000	Governor oil level (only for mechanical hydraulic governor)	▲										***) Daily
G45001	ACDF45200	Engine RPM pick-up sensor : clearance					●						
-	ACDF45270	Cylinder pressure sensor (if applied)						■					
-	ACDF45275	Knock sensor : tightening torque check					◆						
M45200	ACDF45200	Temperature / pressure sensor	○										In case of necessity

■ Expected life time √ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

***) See maker manual recommendation.

- When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.
- The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Description	Overhaul interval (hours)											Remark
		Others	500 ^{*)}	2000	4000	8000	12000	16000	20000	24000	28000	32000	
Fuel system													
G05100	-	Analyze fuel oil properties : sampling	◎										Every bunkering
M51100	ACDF51000	Fuel injection pump											
		Deflector : erosion			◎	■							
		Plunger assembly					■					■	
		Delivery valve assembly (except case)					■		■				
		Delivery valve case					■					■	
		Roller bush for tappet							■			■	
M52000 /M52002 /M52003	ACDF52000	Fuel injection valve : opening pressure		●	●		■						****) ■ : Atomizer life time
-	ACDF52002	Micro pilot injector complete	■										****)
-	ACDF52002	High pressure pump									■		
-	ACDF52003	Micro pilot oil filter	■										If pressure drop reaches limit (See G01400)
-	ACDF53000	O-rings for feed block					■						
M98380	ACDF98380	Fuel oil shock absorber (If applied)				■							
M56000	ACDF56000	Fuel oil filter	■										If pressure drop reaches limit (See G01400)

■ Expected life time ✓ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

****) Regardless of the normal check and adjustment interval, if the exhaust gas temperature deviation alarm occurs, individual cylinders should be inspected according to M52000.

*****) Every 9000 hours : Injector replacement (9000 / 18000 hours : reconditioning)
(27000 hours : New Injector replacement)

1. When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.

2. The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Description	Overhaul interval (hours)											Remark
		Others	500 ^{*)}	2000	4000	8000	12000	16000	20000	24000	28000	32000	

Fuel gas supply system

G05201	-	Analyze fuel gas properties : sampling	◎										Weekly during the first 3 months operation and every bunkering
-	ACDF53001	Main gas feed pipe						■					
-	ACDF46101	Gas admission valve						■					

Lubricating oil system

G06200	-	Analyze lubricating oil properties : sampling	◎										Every 3 month(depends on BN)
M61000	ACDF61000	Lubricating oil pump						■					
M62000	ADF62000	Lubricating oil cooler						■					***)
M63000	ACDF63000	Lubricating oil filter (cartridge type)	■		■								If pressure drop reaches limit(See G01400)
-	ACDF63000	Auto backwashing filter (If applied)	■										***)
-	ACDF64000	Thermostatic valve : clean and check the elements						■					***)
M67000	ACDF67000	Lubricating oil centrifugal filter	■										***)

Cooling water system

G07100	-	Analyze cooling water properties : sampling	◎										Weekly : test kit every 3 month : Lab. test
--------	---	---	---	--	--	--	--	--	--	--	--	--	---

- Expected life time √ 1 Cylinder overhaul. If not good, check all cylinders.
 ■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!
 ● Check & adjustment ◎ Measuring or sampling without dismantling
 ○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

***) See maker manual recommendation.

- When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.
- The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Description	Overhaul interval (hours)											Remark
		Others	500 *	2000	4000	8000	12000	16000	20000	24000	28000	32000	

Cooling water system

M70000	ACDF71000	Cooling water pump						■					
-	ACDF74000	Thermostatic valve : clean and check the elements						■					***)
M75000	ACDF75000	Water drain line : cleaning	●										Weekly (depend on condition)

Compressed air system

O02300	-	Air running	○										Monthly
G40000	-	Check starting and stop system	○										Weekly (over a week stand-still condition)
-	ACDF42100	Starting air motor	■										***)

Combustion air system

G81000	ACDF75000	Charge air condensate drain pipe	●										Weekly
M80000		Turbocharger	■										***)
		Clean air filter (only for filter silencer type)	■	■									Every 500 hours running
		Turbine : water-washing	●										Every 200 hours running
		Compressor : water-washing	●										Every 24 ~ 50 hours running
M83200	-	Exhaust gas waste gate valve	○										Weekly
M84000	ACDF84000	Charge air cooler						■					

■ Expected life time √ 1 Cylinder overhaul. If not good, check all cylinders.

■ Overhaul inspection ◆ Confirm tightening: tighten with specified torque or hyd.pressure. Do not loosen!

● Check & adjustment ◎ Measuring or sampling without dismantling

○ Function test ▲ Visual inspection

*) These are not parts of normal maintenance interval, but, the confirmation or visual inspection of the specified ones to be carried out after Overhaul / New.

***) See maker manual recommendation.

- When doing maintenance and overhaul work, seals (o-rings and gaskets, etc.) should be renewed.
- The overhaul intervals and expected life time stated above are only for guidance as these depend on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

10.2 Recommended wearing parts

List of consumable parts for one engine (C=Number of cylinder / U=Number of unit)

Table 10.2 List of consumable parts for one engine

Section No.	Parts description	Quantity for the operating hours								
		Set/ea	0 – 4000	0 – 8000	0 – 12000	0 – 16000	0 – 20000	0 – 24000	0 – 28000	0 – 32000

Covers for engine block

ACDF17000 ACDF19300	Gaskets for gear case cover	set	-	1	1	2	2	3	3	4
ACDF19300	Gaskets for crankcase cover	ea	-	2 x C	2 x C	4 x C	4 x C	6 x C	6 x C	8 x C
ACDF19300	O-ring for camshaft cover	set	-	1 x C	1 x C	2 x C	2 x C	3 x C	3 x C	4 x C
ACDF21100	O-ring for cylinder head cover	ea	0.5 x C	1 x C	1.5 x C	2 x C	2.5 x C	3 x C	3.5 x C	4 x C

Bearings

ACDF13250	Main bearing (upper & lower)	set	-	-	-	-	-	1xC+ 2	1xC+ 2	1xC+ 2
ACDF13250	Thrust washer	ea	-	-	-	-	-	-	-	2
ACDF25300	Camshaft bearing	ea	-	-	-	-	-	-	-	1xC+ 2
ACDF32000	Big-end bearing (upper & lower)	set	-	-	-	-	-	1 x C	1 x C	1 x C
ACDF32000	Small-end bearing	ea	-	-	-	-	-	-	-	1 x C
ACDF35000	Bearing bush for idle gear	ea	-	-	-	-	-	-	-	1

Cylinder unit and connecting rod

ACDF15000	Flame ring	ea	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF15000	O-rings and gasket for cylinder liner	set	-	1	1	1xC+ 1	1xC+ 1	2xC+ 1	2xC+ 1	3xC+ 1
ACDF21100	O-rings for cylinder head	ea	-	1	1	1xC+ 1	1xC+ 1	2xC+ 1	2xC+ 1	3xC+ 1

1. The list of consumable parts stated above is only for guidance as this depends on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Parts description	Quantity for the operating hours								
		Set/ea	0 – 4000	0 – 8000	0 – 12000	0 – 16000	0 – 20000	0 – 24000	0 – 28000	0 – 32000

Cylinder unit and connecting rod

ACDF21100	Bush and O-ring for fuel valve	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF21100	O-rings for valve guide and exhaust valve seat ring	set	-	-	-	1 x C	1 x C	2 x C	2 x C	3 x C
ACDF21100 ACDF21200	Intake valve spindle, seat ring and valve guide	set	-	-	-	-	-	1 x C	1 x C	1 x C
ACDF21100 ACDF21200	Exhaust valve spindle, seat ring and valve guide	set	-	-	-	-	-	1 x C	1 x C	1 x C
ACDF23000	Roller bush for tappet	ea	-	-	-	-	-	-	-	1 x C
ACDF24100	O-rings for dual valve timing	set	-	1	1	1xC+1	1xC+1	2xC+1	2xC+1	3xC+1
ACDF31100	Piston ring-top ring / 2nd ring / scraper ring	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF32000	Shim plate for connecting rod	ea	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF32000	Stud for connecting rod shaft	ea	-	-	-	-	-	-	-	4 x C

Control system

ACDF45275	Cylinder pressure sensor (if applied)	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
-----------	---------------------------------------	-----	---	---	---	-------	-------	-------	-------	-------

Fuel system

ACDF51000	Plunger assembly for fuel pump	ea	-	-	-	-	-	-	-	1 x C
ACDF51000	O-rings and seal ring for plunger assembly	set	-	1 x C	1 x C	2 x C	2 x C	3 x C	3 x C	4 x C
ACDF51000	Gaskets and seal ring for fuel pump	set	-	-	-	-	-	-	-	1 x C
ACDF51000	Deflector and gasket for fuel pump	set	1 x C	2 x C	3 x C	4 x C	5 x C	6 x C	7 x C	8 x C
ACDF51000	Delivery valve assembly (except case)	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF51000	Delivery valve case	ea	-	-	-	-	-	-	-	1 x C

1. The list of consumable parts stated above is only for guidance as this depends on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Parts description	Quantity for the operating hours								
		Set/ea	0 – 4000	0 – 8000	0 – 12000	0 – 16000	0 – 20000	0 – 24000	0 – 28000	0 – 32000

Fuel system

ACDF51000	O-ring for fuel pump	set	-	1 x C	1 x C	2 x C	2 x C	3 x C	3 x C	4 x C
ACDF51000	O-ring for fuel pump drive	ea	-	-	-	-	-	-	-	1 x C
ACDF52000	Fuel injection nozzle with dowel pin	set		1 x C	1 x C	2 x C	2 x C	3 x C	3 x C	4 x C
ACDF52000	O-rings and gasket for fuel injection valve	set	2 x C	4 x C	6 x C	8 x C	10 x C	12 x C	14 x C	16 x C
ACDF52002	Replacement of micro pilot injector (9000 / 18000 hours : reconditioning) (27000 hours : New Injector replacement)	set	-	-	-	-	-	-	1 x C (27000)	1 x C (27000)
ACDF52002	O-ring and gasket for micro pilot injector and pipe (Every 9000 hours)	set	-	-	1 x C (9000)	1 x C (9000)	2 x C (18000)	2 x C (18000)	3 x C (27000)	3 x C (27000)
ACDF52002	High pressure pump	set	-	-	-	-	-	1 x C	1 x C	1 x C
ACDF52003	Spare parts for micro pilot oil filter (See manual for micro pilot oil filter)	set	-	-	-	-	-	-	-	-
ACDF52300	O-rings for fuel injection pipe block	set	2 x C	4 x C	6 x C	8 x C	10 x C	12 x C	14 x C	16 x C
ACDF53000	O-rings for fuel feed pipe connection	set	-	1	1	2	2	3	3	4

Fuel gas supply system

ACDF46101	Gas admission valve	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C
ACDF53001	O-rings for gas feed pipe to each cylinder	set	-	1	1	1xC+1	1xU+1	2xU+1	2xU+1	3xU+1
ACDF53001	O-rings and gasket for main gas feed pipe	set	-	-	-	1	1	1	1	2
ACDF53002	O-rings for gas admission valve	set	-	-	-	1 x C	1 x C	1 x C	1 x C	2 x C

- The list of consumable parts stated above is only for guidance as this depends on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Parts description	Quantity for the operating hours								
		Set/ea	0 – 4000	0 – 8000	0 – 12000	0 – 16000	0 – 20000	0 – 24000	0 – 28000	0 – 32000

Lubricating oil System

ACDF61000	Bushes for lubricating oil pump	set	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF61000	O-rings for lubricating oil pump	set	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF62000	O-ring for lubricating oil cooler connection (installation on engine side)	ea	-	-	-	10	10	10	10	20
ACDF63000	Lubricating oil filter cartridge (paper cartridge type)	ea	2 x U	4 x U	6 x U	8 x U	10 x U	12 x U	14 x U	16 x U
ACDF63000	O-rings for lubricating oil filter assembly (paper cartridge type)	set	1 x U	2 x U	3 x U	4 x U	5 x U	6 x U	7 x U	8 x U
ACDF64000	O-ring for lubricating oil thermostat valve	ea	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF64000	O-ring for thermostatic valve cover	ea	-	-	-	1	1	1	1	2
ACDF67000	Spare parts for centrifugal filter (See manual for centrifugal filter)	set	-	-	-	-	-	-	-	-

Cooling water system

ACDF71000	Oil seal, mechanical seal and O-ring for high and low temperature cooling water pump (if applied)	set	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF74000	O-ring for cooling water thermostat valve (wax type installed on engine)	ea	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF74000	O-ring for thermostatic valve housing (wax type installed on engine)	ea	-	-	-	1 x U	1 x U	1 x U	1 x U	2 x U
ACDF77000	O-ring for cooling water connection	ea	-	3	3	6	6	9	9	12
ACDF78000	O-ring for cylinder head cooling water connection	ea	-	8	8	(4xC) +6	(4xC) +6	(4xC) +14	(4xC) +14	(8xC) +12
ACDF78000	O-ring for cylinder head outlet connection	ea	-	1	1	(1xC) +1	(1xC) +1	(1xC) +2	(1xC) +2	(2xC) +2

- The list of consumable parts stated above is only for guidance as this depends on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

Section No.	Parts description	Quantity for the operating hours								
		Set/ea	0 – 4000	0 – 8000	0 – 12000	0 – 16000	0 – 20000	0 – 24000	0 – 28000	0 – 32000

Supercharging system

ACDF81000	Gaskets for compressor out	set	-	-	-	1	1	1	1	2
ACDF82000	Gasket for connection flange	ea	-	1	1	1xC+1	1xC+1	2xC+1	2xC+1	3xC+1
ACDF83000	O-rings for Turbocharger connection	set	-	-	-	1	1	1	1	2

Charge air cooler

ACDF84000	Gaskets and O-ring for air cooler and relief valve	set	-	-	-	1	1	1	1	2
-----------	--	-----	---	---	---	---	---	---	---	---

Turbocharger

	Turbine nozzle ring (See manual for turbocharger)	ea	-	-	-	-	-	-	-	-
	Spare parts for turbocharger (See manual for turbocharger)	set	-	-	-	-	-	-	-	-
	Air filter mat (Engine room air suction)	ea	2	4	6	8	10	12	14	16

1. The list of consumable parts stated above is only for guidance as this depends on the actual service condition, the quality of used fuel or lubricating oil, the treatment of cooling water and so on.

10.3 List of standard spare parts

List of minimum spare parts for each plant or each ship (valid for all classification societies)

Table 10.3 List of standard spare parts

Parts description	Q'ty	Section No.	Item No.	Remark
Engine block and covers				
Main bearing	1	ACDF13250	251	
Thrust washer	2	ACDF13250	252	
Main bearing stud	2	ACDF13000	931	
Nut for main bearing stud	2	ACDF13000	932	
Sealing ring for crankcase cover	1	ACDF19300	384	
Cylinder head and cylinder liner				
Valve spindle, intake	2	ACDF21200	201	
Valve spindle, exhaust	4	ACDF21200	202	
Conical clamping piece	6	ACDF21200	206	
O-ring for push rod cover	4	ACDF23000	401	
Valve spring	6	ACDF21200	203	
Intake valve seat ring	2	ACDF21100	111	
Exhaust valve seat ring	4	ACDF21100	112	
Rotocap	6	ACDF21200	204	
O-ring for cylinder head	2	ACDF21100	903	
O-ring for cylinder head cover	1	ACDF21100	805	
Valve stem seal iron type	6	ACDF21100	292	
O-ring for exhaust valve seat ring	4	ACDF21100	118	
O-ring for cooling water, P145	1	ACDF15000	901	

Parts description	Q'ty	Section No.	Item No.	Remark
Cylinder head and cylinder liner				
O-ring for cooling water connection	2	ACDF15000	922	
Metal gasket for cylinder liner	1	ACDF15000	191	
O-ring for cylinder liner	1	ACDF15000	192	
O-ring for cylinder liner	2	ACDF15000	193	
Piston and connecting rod				
Piston pin	1	ACDF31100	120	
Piston ring, top	1	ACDF31100	151	
Piston ring, 2nd	1	ACDF31100	152	
Piston ring, scraper	1	ACDF31100	153	
Connecting rod big end bearing	1	ACDF32000	120	
Small end bearing	1	ACDF32000	130	
Stud for connecting rod big end, M30	2	ACDF32000	191	
Stud for connecting rod shaft, M20	4	ACDF32000	194	
Nut for connecting rod big end stud, M30	2	ACDF32000	192	
Nut for connecting rod shaft stud, M20	4	ACDF32000	195	
Cylindrical pin	4	ACDF32000	193	
Ignition system				
Fuel injection pump	1	ACDF51000	100	
Fuel injection valve	N/2	ACDF52000	100	N : maximum cylinder No.
Fuel high pressure block	1	ACDF52300	100	
Micro pilot injector	N/2	ACDF52002	800	N : maximum cylinder No.
Gasket for micro pilot injector	10	ACDF52002	030	

Parts description	Q'ty	Section No.	Item No.	Remark
-------------------	------	-------------	----------	--------

Ignition system

O-ring for gas admission valve 71.12 x 2.62	1	ACDF53002	117	
O-ring for gas admission valve 72.69 x 2.62	1	ACDF53002	118	

Air and exhaust gas system


Gasket for air cooler cover	1	ACDF84000	241	
Gasket for air inlet duct	1	ACDF84000	242	
Gasket for air cooler outlet	1	ACDF84000	243	
Gasket for relief valve	1	ACDF84000	244	
Gasket for air inlet duct	1	ACDF84000	953	
Gasket for inter pipe	1	ACDF84000	954	
Gasket for relief valve	1	ACDF84000	956	
Air cooler spare kit	1 set	ACDF84000	-	

Piping system


Gasket for cooling water connection piping	1	ACDF76000	600	
Packing for cooling water connection	2	ACDF76000	604	
Flexible connecting pipe, each type	1 set	ACDF98370	-	
Lube oil 1 st filter cartridge	1 set	ACDF63000	701	

The value(s) above is only provided preliminary information purpose, and these can be changed to be satisfied with the classification rules for each project and other reasons without any notice to improve engine.
In order to construct a commercial engine project, please contact HHI-EMD.


10.4 Heavy parts for maintenance

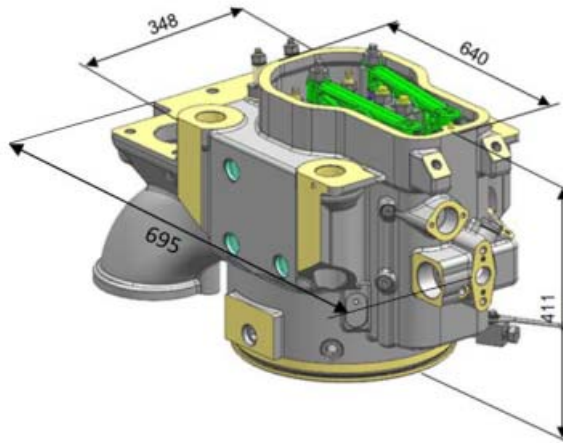


Cylinder head and rocker arm assembly
Approx. 195 kg

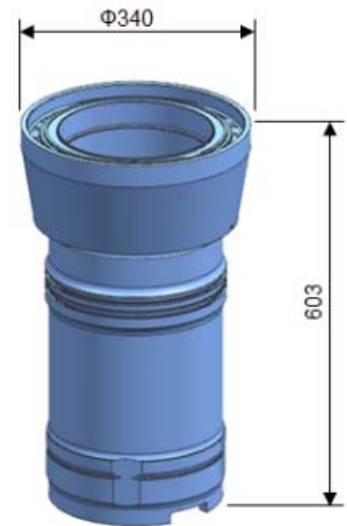



Cylinder liner
Approx. 91 kg

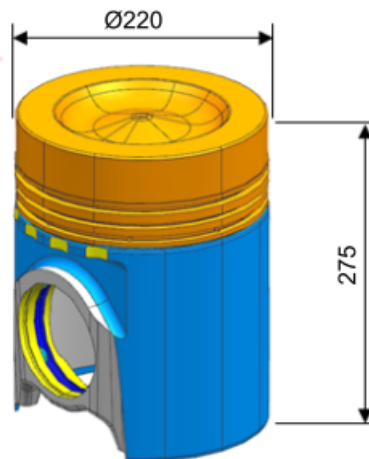

Piston
Approx. 27.5 kg

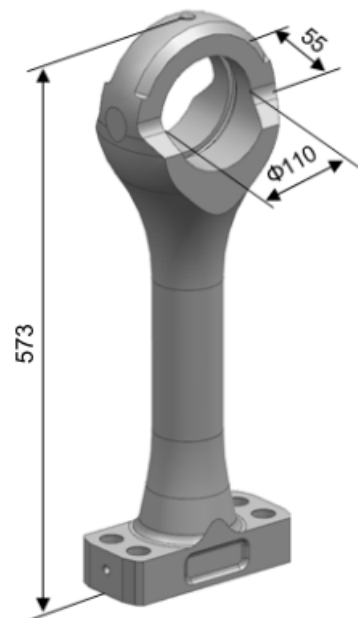

Connecting rod shaft
Approx. 26 kg

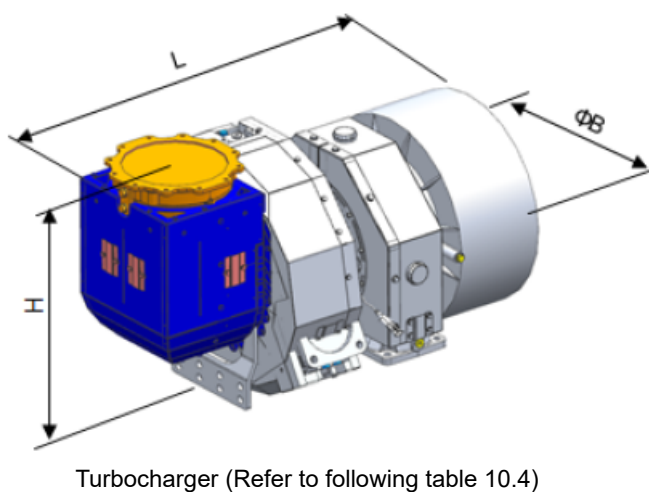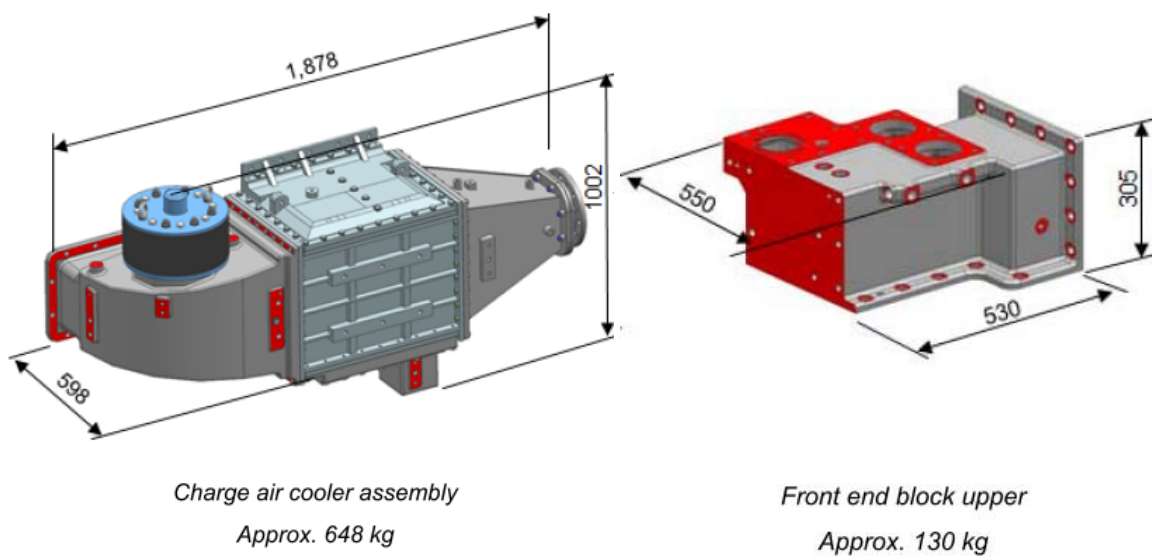

Turbocharger (Refer to following table 10.4)

Figure 10.1 Heavy parts dimension and weight.

Table 10.4 List of turbocharger outline dimension and weight

Turbocharger type	B	H	L	Weight (kg)	Remarks
A130	Ø798	515	930	200	Without insulation
A135	Ø520	590	1075	280	Without insulation
A140	Ø630	720	1315	470	Without insulation

10.5 List of standard tools

Table 10.5 List of standard tool parts







Tool description	Q'ty	Remark
Cylinder head and liner		
Lifting tool for cylinder head	1	
Fitting/removal device for valve conical clamping	1	
Grinding tool for cylinder head, liner and engine block	1	
Extract/suspension device for cylinder liner	1	
Cylinder bore gauge	1	
Removing device for flame ring	1	
Removal device for exhaust valve seat	1	
Lapping device for inlet and exhaust valve seat	1	
Air gun for roto cap	1	
Feeler gauge for inlet and exhaust valve.	1	
Plier for valve locking ring	1	
Valve stem seal tool	1	
Piston and connecting rod		
Guide bush for piston	1	
Lifting tool for piston	1	
Holding piece for crank pin bearing	2	
Suspension device for connecting rod	1	
Guide support for connecting rod	1	
Turning bracket for connecting rod	1	
Clamping support for connecting rod	2	

Tool description	Q'ty	Remark
Piston and connecting rod		
Plier for piston pin locking ring	1	
Piston ring opener	1	
Crankshaft and main bearing		
Lifting device for main bearing cap	4	
Fitting device for main bearing	1	
Dismantling device for crankshaft pin bearing	2	
Deflection gauge for crankshaft	1	
Fuel injection valve		
Test tool for fuel valve nozzle	1	
Lapping device for injection valve bush	1	
Removal tool for atomizer nut	1	
Cleaning tool for fuel valve nozzle	1	
Removal device for fuel injection valve	1	
Long socket for nozzle nut	1	
Removal device for fuel injection valve bush	1	
Fitting device for MPI bush	1	
Removal device for MPI bush	1	
Cylinder pressure sensor		
Installation for cylinder pressure sensor	1	
General tools		
Spanner 3/4 for turning gear	1	
T/V damper tool	1	

Tool description	Q'ty	Remark
General tools		
Extension bar 24	1	
Extension bar 20	1	
Air cooler mounting guide bar	2	
Hydraulic tools		
Hydraulic tightening devices M39 (cylinder head, main bearing cap)	4	
Hydraulic tightening devices M30 (side stud, count weight, big end, flywheel)	2	
Hydraulic tightening devices M20 (connecting rod shaft)	2	
Set of spare parts for hydraulic tools M39	1	
Set of spare parts for hydraulic tools M30	1	
Set of spare parts for hydraulic tools M20	1	
Angle piece for hydraulic jack M20x1.5	2	
Support for hydraulic tools M39 (main bearing cap)	2	
Support for hydraulic tools M39 (cylinder head)	4	
Support for hydraulic tools M30 (big end)	2	
Support for hydraulic tools M30 (side stud, count weight)	2	
Support for hydraulic tools M20 (connecting rod shaft)	2	
Extension screw M39 (cylinder head)	4	
Extension screw M30 (flywheel, counter weight)	2	
Extension screw M20 (connecting rod shaft)	2	
Distribution pieces 2-POT	1	
Distribution pieces 4-POT	1	
High pressure hose (L=550)	4	

Tool description	Q'ty	Remark
Hydraulic tools		
High pressure hose (L=3000)	2	
Adapter for hydraulic handing pump	1	
Turning pin (Ø10)	2	
Turning pin (Ø8)	2	
Standard tool box		
Spare and tool box	4	

11 Appendix 1 (Piping symbols)

No.	Symbol	Symbol designation	No.	Symbol	Symbol designation
General conventional symbols					
1.1		Pipe	1.5		Indicating and measuring instruments
1.2		Pipe with indication of direction of flow	1.6		High pressure pipe
1.3		Valves, gate valves, cocks and flaps	1.7		Tracing
1.4		Appliances	1.8		Enclosure for several components assembled in one unit
Pipes and pipe joint					
2.1		Crossing pipes, not connected	2.13		Blank flange
2.2		Crossing pipes, connected	2.14		Spectacle flange
2.3		Tee pipe	2.15		Bulkhead fitting water tight, flanged
2.4		Flexible pipe	2.16		Bulkhead crossing, non-water tight
2.5		Expansion pipe	2.17		Test piece with plug
2.6		Joint, Screwed	2.18		Orifice
2.7		Joint, flanged	2.19		Reducer
2.8		Joint, sleeve	2.20		Open drain and air vent
2.9		Joint, hose coupling	2.21		Orifice
2.10		Expansion joint with gland	2.22		Loop expansion joint
2.11		Expansion pipe	2.23		Snap-coupling
2.12		Cap nut			

No.	Symbol	Symbol designation	No.	Symbol	Symbol designation
Valves, gate valves, cocks and flaps					
3.1		Valve, straight	3.24		Cock, three-way, L-port in plug
3.2		Stop valve (needle valve)	3.25		Cock, three-way, T-port in plug
3.3		Shuttle valve	3.26		Cock, four-way, straight through in plug
3.4		Valve, Three-way	3.27		Cock, with bottom connection
3.5		Non-return valve	3.28		Cock, straight through with bottom connection
3.6		Flap, straight through	3.29		Cock, angle with bottom connection
3.7		Flap, angle	3.30		Cock, three-way, with bottom connection
3.8		Safety valve	3.31		Solenoid valve
3.9		Self-closing valve	3.32		3-way test valve
3.10		Quick-opening valve	3.33		Thermostatic valve
3.11		Quick-closing valve	3.34		Valve with test flange
3.12		Regulating valve	3.35		3-way valve with remote control (Actuator)
3.13		Angle valve	3.36		Non-return valve (Air)
3.14		Ball valve	3.37		Reducing valve
3.15		Butterfly valve	3.38		3/2 way valve, normally open
3.16		Gate valve	3.39		3/2 way valve, normally closed
3.17		Double-seated changeover valve	3.40		2/2 way valve, normally open
3.18		Suction valve chest	3.41		2/2 way valve, normally closed
3.19		Suction valve chest with non-return valves	3.42		
3.20		Double-seated changeover valve, straight	3.43		
3.21		Double-seated changeover valve, angle	3.44		
3.22		Ball valve, angle	3.45		

No.	Symbol	Symbol designation	No.	Symbol	Symbol designation
-----	--------	--------------------	-----	--------	--------------------

Control and regulating part

4.1		Hand-operated	4.10		Electric motor driven
4.2		Remote control	4.11		Air motor driven
4.3		Spring	4.12		Manual override (At pneumatic valve)
4.4		Mass	4.13		Push button
4.5		Float	4.14		Spring
4.6		Piston	4.15		Solenoid
4.7		Membrane	4.16		Solenoid and pilot directional valve
4.8		Electro-magnetic	4.17		By plunger or tracer
4.9		Flame arrestor			Pneumatic

Appliances

5.1		Mudbox	5.13		Heat exchanger
5.2		Filter	5.14		Strainer
5.3		Duplex filter	5.15		Air filter
5.4		Magnetic filter	5.16		Air filter with manual control
5.5		Separator	5.17		Air filter with automatic drain
5.6		Steam trap	5.18		Water trap with manual control
5.7		Centrifugal pump	5.19		Air lubricator
5.8		Gear-or screw pump	5.20		Silencer
5.9		Hand pump (Bucket)	5.21		Fixed capacity pneumatic motor with spring returned
5.10		Ejector	5.22		Single acting cylinder with spring returned
5.11		Various accessories (Text to be added)	5.23		Double acting cylinder with spring returned
5.12		Piston pump	5.24		Auto drain trap

No.	Symbol	Symbol designation	No.	Symbol	Symbol designation
-----	--------	--------------------	-----	--------	--------------------


Fittings

6.1		Funnel	6.8		Air pipe with pressure-vacuum valve
6.2		Bell-mouthed pipe end	6.9		Deck fittings for sound's or filling pipe
6.3		Air pipe	6.10		Short sounding pipe with self-closing cock
6.4		Air pipe with net	6.11		Stop for sounding rod
6.5		Air pipe with cover	6.12		Oil tray coaming
6.6		Air pipe with cover and net	6.13		Bearing
6.7		Air pipe with pressure-vacuum valve	6.14		Water jacket

Reading instruments with ordinary symbol designations

7.1		Sight flow indicator	7.4		Distance level indicator
7.2		Observation glass	7.5		Counter (Indicate function)
7.3		Level indicator	7.6		Recorder

12 Appendix 2 (Instrumentation code)

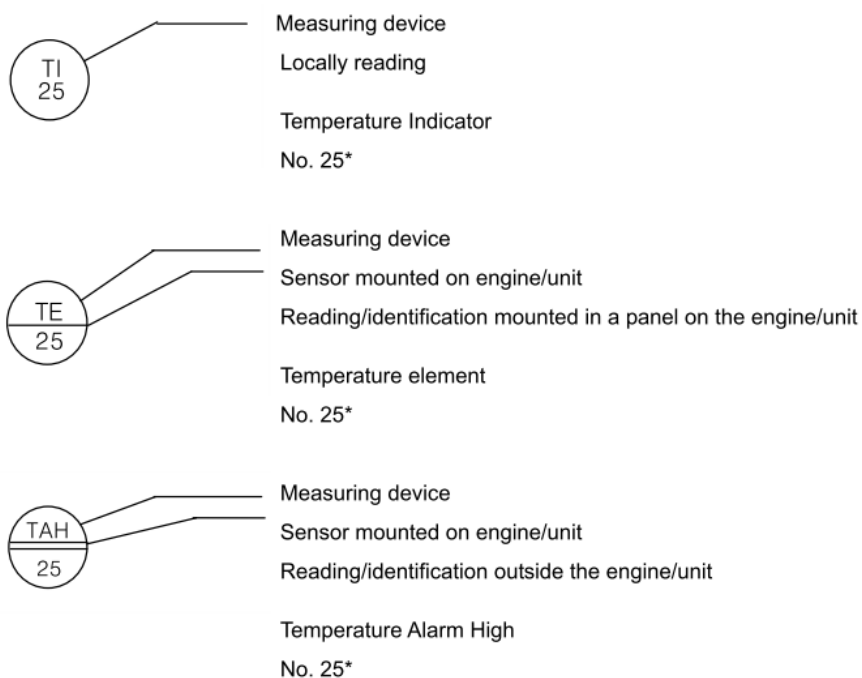

*Refer to standard location and text for instruments on the following page

Specification of letter code for measuring devices			
1st letter		Following letters	
F	Flow	A	Alarm
L	Level	D	Differential
P	Pressure	E	Element
S	Speed, Solenoid	H	High
T	Temperature	I	Indicating
U	Voltage	L	Low
V	Viscosity	S	Switching, Stop
Z	Position	T	Transmitting
M	Motor	X	Failure
H	Heater	V	Valve
I	Ignition	P	Plug, Pilot
		O	Operation
		F	Feedback

Plant outline

- 03 Crankcase
- 05 Main bearing
- 06 Connecting rod
- 07 Cylinder liner

Engine structure

- 11 Engine speed and position (flywheel)
- 12 Engine speed and position (cam)
- 13 Overspeed (mechanical)
- 14 Turbocharger speed

Combustion gas system

- 20 Charge air at cooler inlet
- 21 Charge air at cooler outlet
- 24 Cylinder combustion
- 25 Exhaust gas at cylinder outlet
- 26 Exhaust gas at TC inlet
- 27 Exhaust gas at TC outlet
- 29 Intake air before turbocharger compressor

Moving system

- 30 Pilot fuel oil at filter inlet
- 31 Pilot fuel oil at HP pump inlet
- 32 Pilot fuel oil at engine inlet
- 34 Dirty pilot fuel oil in leakage tank
- 35 Pilot fuel oil at engine outlet

Control system and compressed air system

- 40 Starting air at engine inlet
- 41 Control air at engine inlet
- 43 Control air at DVT inlet
- 44 Jet assist air
- 45 Slow turn
- 49 Emergency stop

Fuel injection system

- 50 Fuel rack position
- 51 Fuel oil at filter inlet
- 52 Fuel oil at engine inlet
- 54 Clean fuel oil in leakage tank
- 55 Waste oil in leakage tank
- 57 Nozzle cooling oil at engine outlet
- 58 Nozzle cooling oil at engine outlet

Lubricating oil system

- 61 Lubricating oil at filter inlet
- 62 Lubricating oil at engine inlet
- 63 Lubricating oil at turbocharger inlet
- 64 Lubricating oil at turbocharger outlet
- 65 Pre-lubricating oil
- 66 Lubricating oil at HP pump inlet
- 67 Splash oil
- 68 Lubricating oil in sump tank
- 92 Oil mist detector

Cooling water system

- 70 Low temperature water
- 71 Low temperature water at air cooler inlet
- 72 Low temperature water at air cooler outlet
- 73 Low temperature water at lubricating oil cooler outlet
- 74 High temperature water at lubricating oil cooler inlet
- 75 High temperature water at engine inlet
- 76 High temperature water at engine outlet
- 77 High temperature water at each cylinder outlet
- 78 High temperature water at air cooler outlet

Supercharge system

- 80 Gas supply at filter inlet
- 81 Gas supply at filter outlet
- 82 Gas supply at regulator outlet
- 83 Control air at gas regulator unit
- 84 Gas shut off valve
- 85 Gas venting valve
- 86 Pre-chamber gas at engine inlet
- 87 Main gas at engine inlet
- 88 Degasing
- 89 Inert gas at engine inlet

Maintenance

- 90 Turning gear
- 92 Oil mister detector
- 93 Vibration sensor
- 94 Knock sensor
- 95 Rupture disc
- 96 Ignition coil
- 97 Water in oil
- 98 Oil in water
- 99 GRU enclosure

Reference

201	Air recirculation valve
202	Air waste gate valve
203	Air by pass valve
204	Charge air shut off valve

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Global Leader

www.hhi.co.kr

Copyright © 2020 Hyundai Heavy Industries Co., Ltd.

Contents subject to change without prior notice.

HIMSEN is trademark registered and owned
by Hyundai Heavy Industries Co., Ltd.

